



Omlet


Netting Repair Instructions

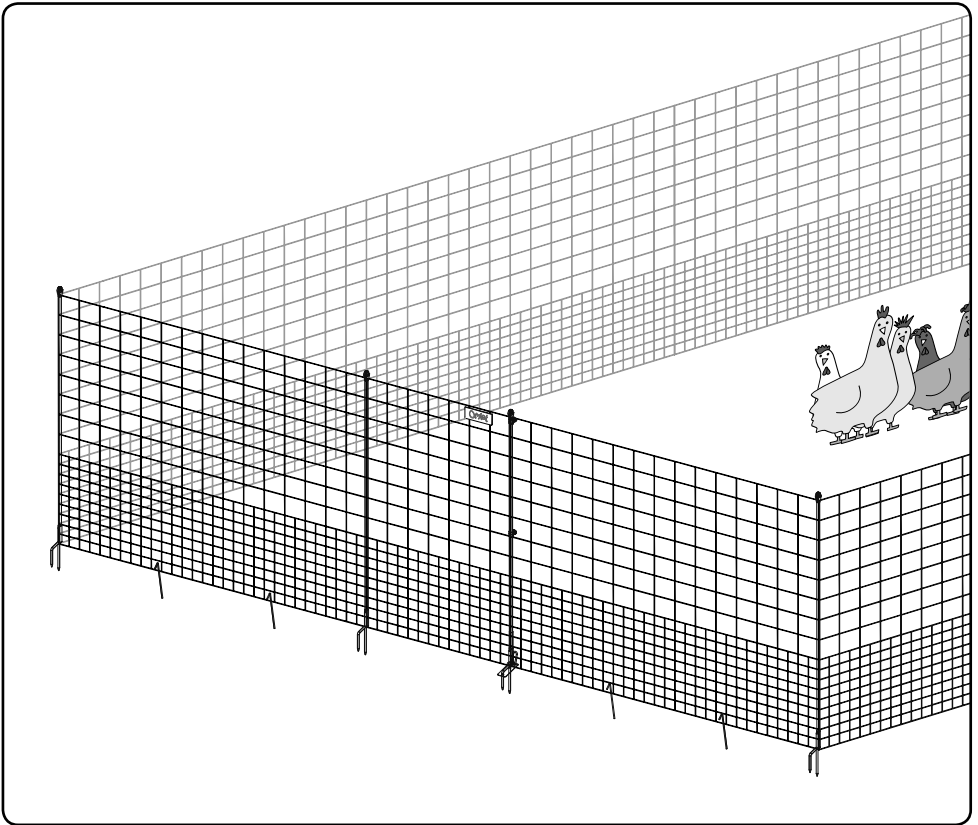


Warning! Repair the netting outdoors or in a well ventilated area, as a lighter is required to melt the frayed ends of the repair strings.

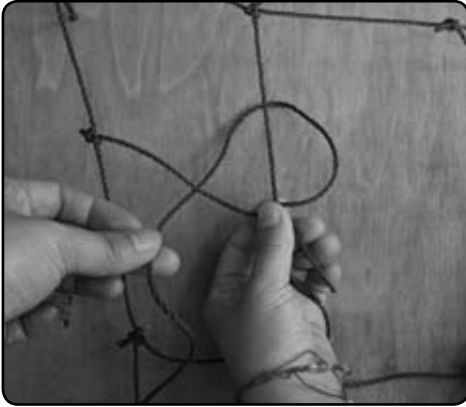


Step 1 - Remove any broken strings. Tie a repair string to the closest whole string. Loop the replacement string around the next whole string.

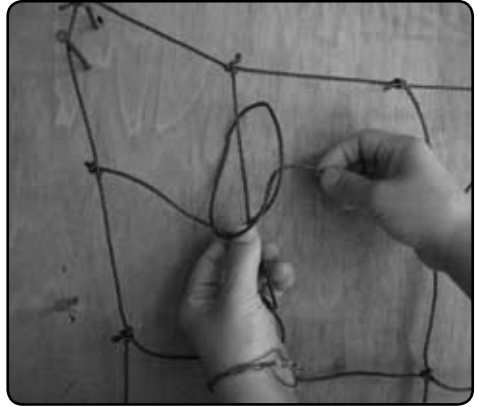


Step 2 - Knot the replacement string to the strand.

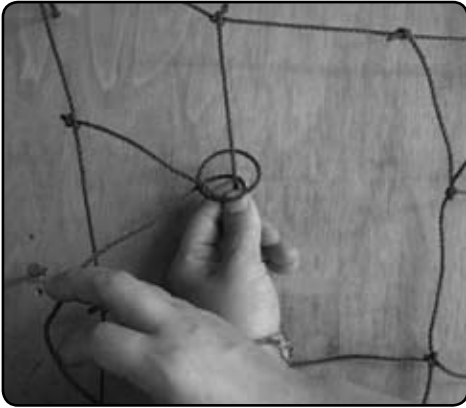


Step 3 - Create another loop of string around the loose knot.

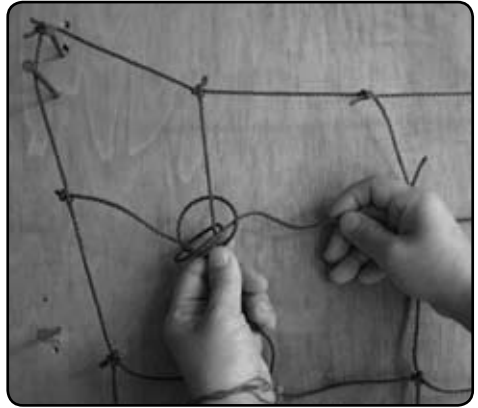


Step 4 - Knot the replacement string to the strand again.

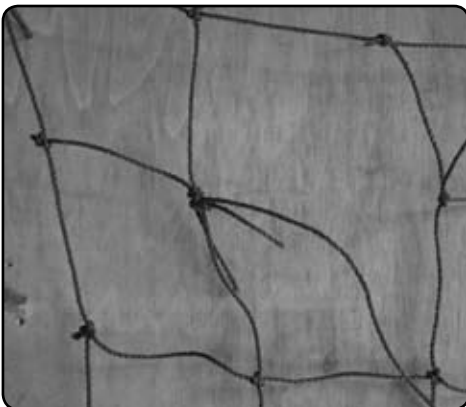


Step 5 - Pull the knot tight.

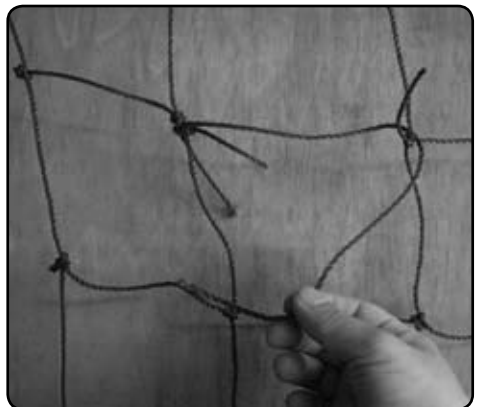

Step 6 - Pass the repair string through the next whole square.

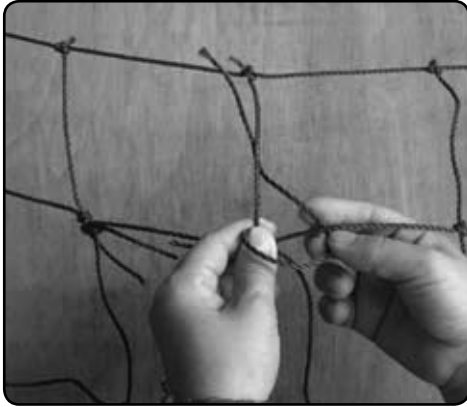

Step 7 - Create a loop around the next whole strand.

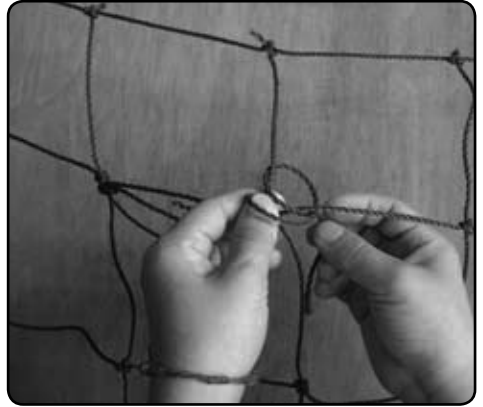

Step 8 - Knot the replacement string to the strand.



Step 9 - Create another loop of string around the loose knot.




Step 10 - Knot the replacement string to the strand again and pull tight.



Step 11 - Trim any loose strands, leaving about 1cm each end for the next step.



Step 12 - Use a lighter to gently melt the ends of the string to prevent fraying. **WARNING!** Do not hold the flames too close to the string as it could catch fire. Practice on some offcuts if you are unsure.

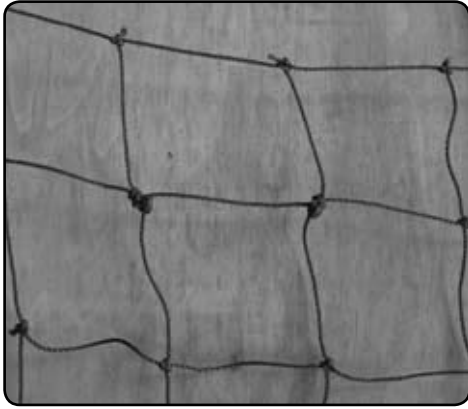

Step 13 - Repeat on any other damaged sections.