 
 


Run Extension Instructions


For Eglu Go Chicken House

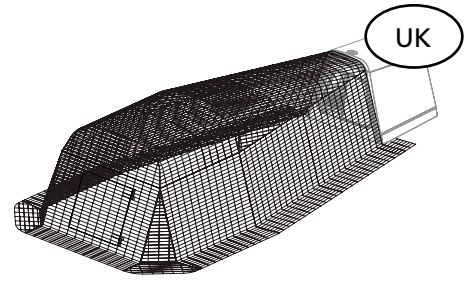


What you have received

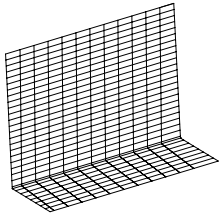


Left Extension
Run Panel

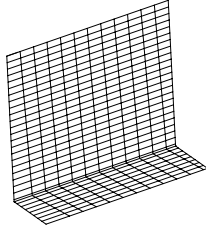

Right Extension
Run Panel

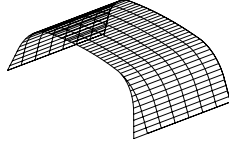

Front Run
Extension Panel

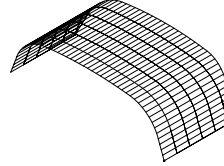

Rear Run
Extension Panel



Run Clips
x30




Double Run Clips
x6

Attaching the Run Extension

Step 1. Remove shade and unclip **front end panel, front arch and corner panels**. Keep hold of the clips you undo, you will need them later.



To undo a run clip, twist a coin between the legs as shown.

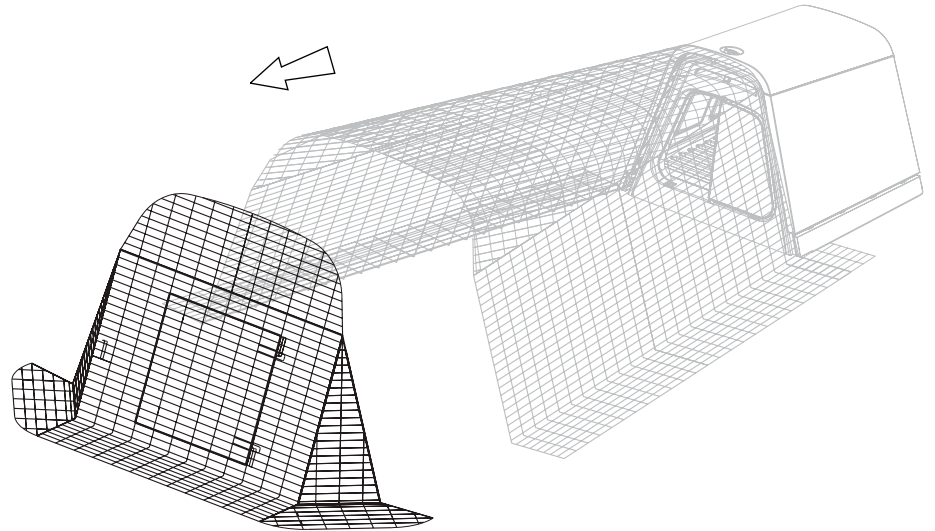

Step 2. Clip **run extension left and right panels** on side.

⊙ = Run Clips

△ = Double Run Clips

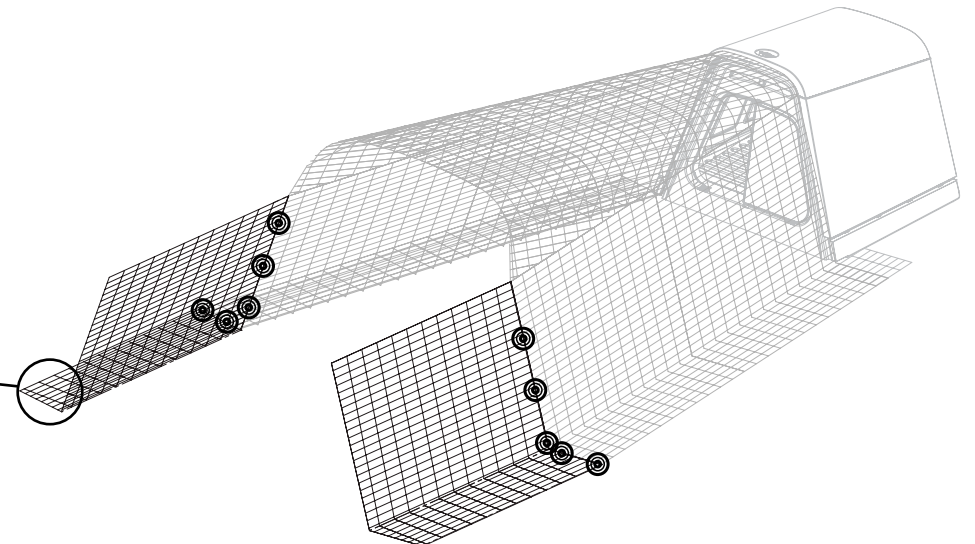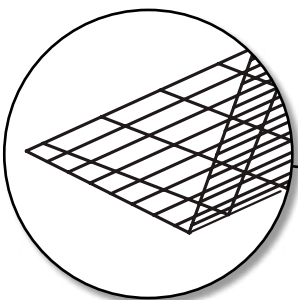



NOTE: The left and right panels are slightly different. Each has an angled front edge.

Attaching the Run Extension

Step 3. Clip on rear roof extension panel.




⊙ = Run Clips

△ = Double Run Clips

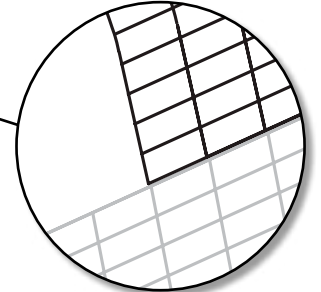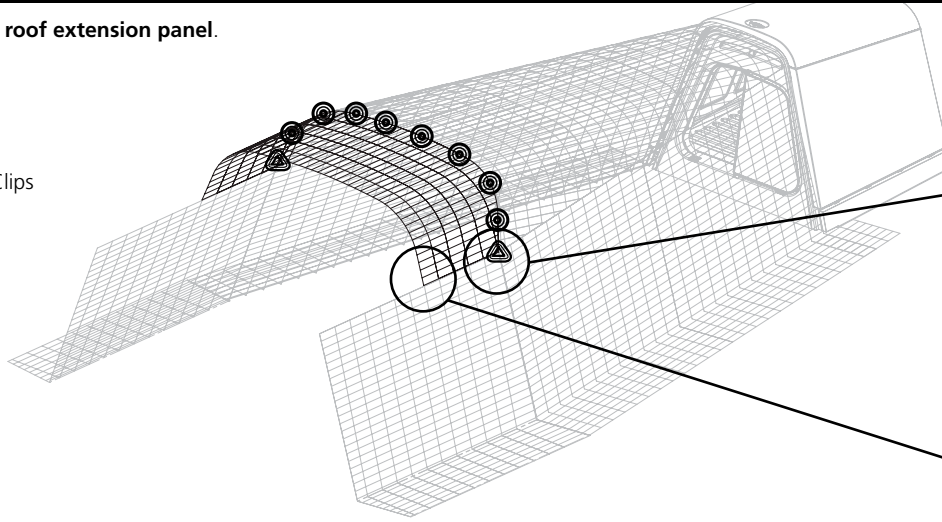

NOTE: The front and rear run extension panels are slightly different. The rear panel has straight front edges.

Step 4. Clip on the front run extension panel.

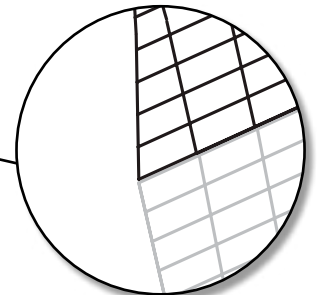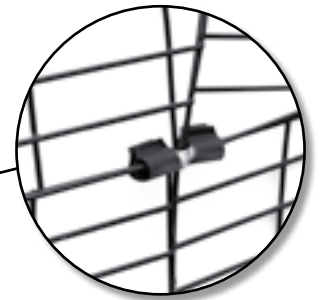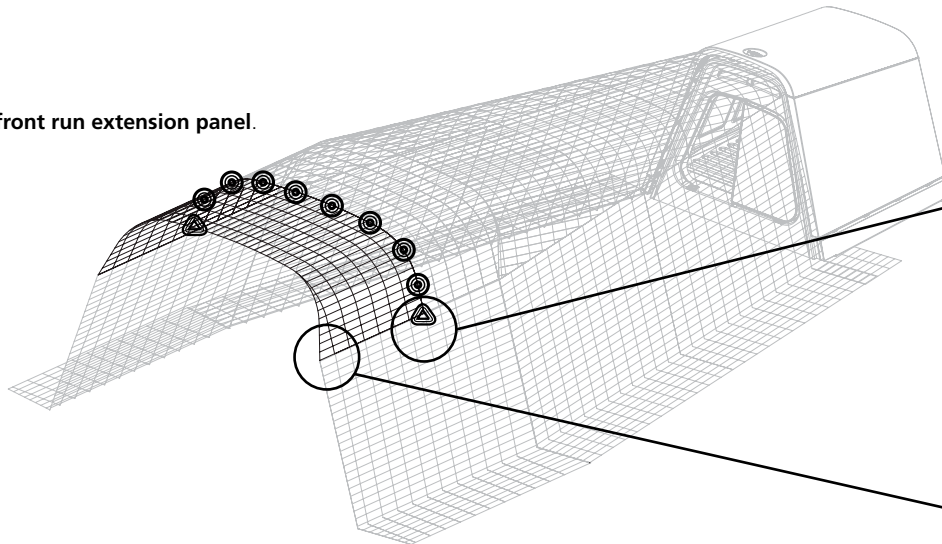

NOTE: The front and rear run extension panels are slightly different. The front panel has angled front edges.

Step 5. Replace your front panels that you removed in Step 1.

NOTE: If you have a small amount of run clips left over, use these to secure any extra areas of run if required.

