 
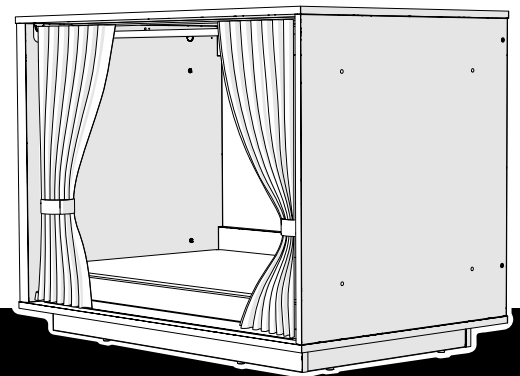 


Omlet®

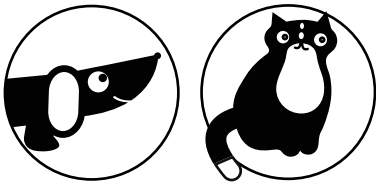

Omlet fido® / maya® nook curtains

Instruction Manual

Bedienungsanleitung

Manuel d'utilisation

Gebruiksaanwijzing

Manuale di Istruzioni

Instruktionsmanual

Brugsanvisning

Bruksanvisning

 
Bruksanvisning

Instrukcja montażu


What you have received

DE Das haben Sie erhalten · FR Ce que vous avez reçu · NL Wat u heeft ontvangen · IT Cosa hai ricevuto · SE Vad du har fått · DK Du har modtaget
NO Hva du har mottatt · PL Co otrzymałaś/eś


076.0024: Fido / Maya Nook 24 Curtains

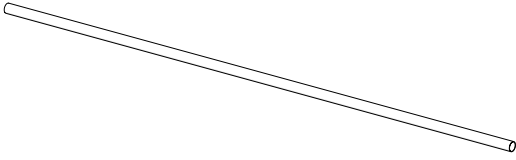

Curtain Pole
076.1080
1x

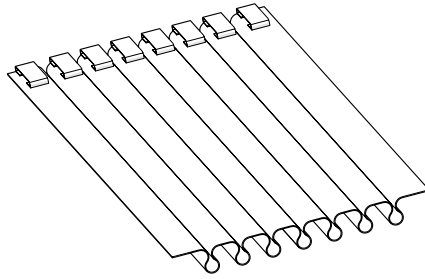 


Curtain
076.1072
2x

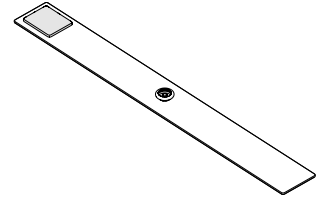 

Curtain Tie
076.1076
2x

 076.0071: Fido / Maya Nook Curtains Plastic Components

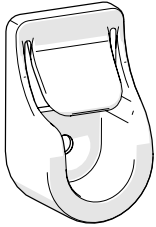


Pole Mount
076.1089
2x




Pole Cap
076.1090
2x

 076.0074: Fido / Maya Nook Curtains Screw Pack




Wood Screw
800.0208
x2

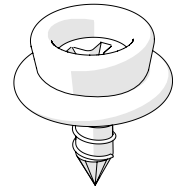 


Screw-in Press Stud
800.0261
x2

 
076.0025: Fido / Maya Nook 30 Curtains

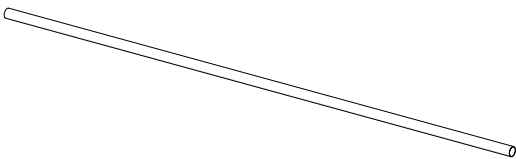

Curtain Pole
076.1081
1x

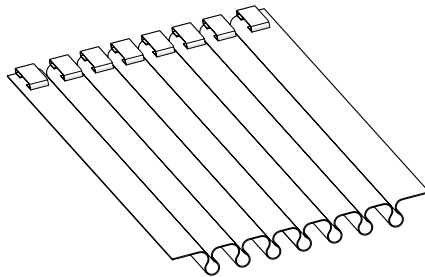 


Curtain
076.1073
2x

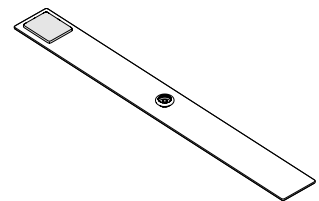 

Curtain Tie
076.1077
2x

 076.0071: Fido / Maya Nook Curtains Plastic Components

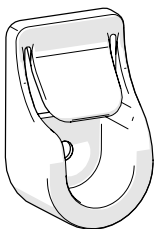


Pole Mount
076.1089
2x




Pole Cap
076.1090
2x

 076.0074: Fido / Maya Nook Curtains Screw Pack




Wood Screw
800.0208
x2

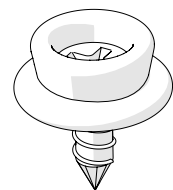 


Screw-in Press Stud
800.0261
x2

 
076.0026: Fido / Maya Nook 36 Curtains

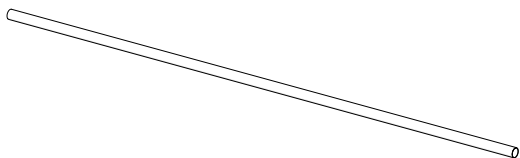

Curtain Pole
076.1082
1x

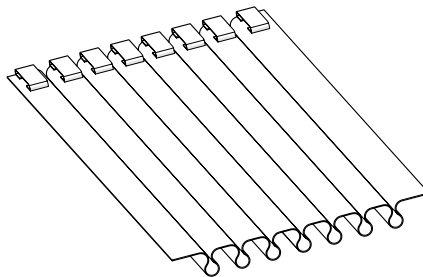 


Curtain
076.1074
2x

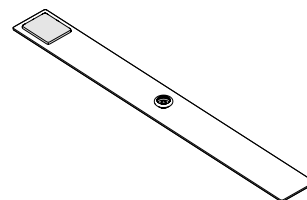 

Curtain Tie
076.1078
2x

 076.0071: Fido / Maya Nook Curtains Plastic Components

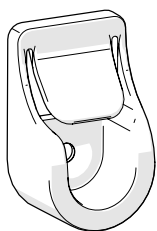


Pole Mount
076.1089
2x




Pole Cap
076.1090
2x

 076.0074: Fido / Maya Nook Curtains Screw Pack





Wood Screw
800.0208
x2

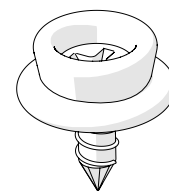 

Screw-in Press Stud
800.0261
x2

You will also need...

  DE Das werden Sie benötigen · FR Ce dont vous aurez besoin · NL Ook heeft u nodig... · IT Avete anche bisogno di... · SE Du behöver också...
DK Du skal også bruge... · NO Du trenger også ... · PL Będziesz też potrzebować

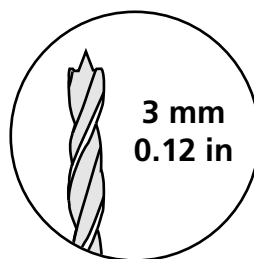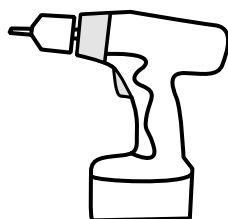

How to set up Omlet Fido Nook Curtains



1

Instructions shown for front. If fitting to rear, follow the same steps measuring from the rear

DE Abbildung zeigt das Abmessen von vorne. Wenn der Vorhang hinten angebracht wird, bitte an der Rückseite messen

FR Instructions pour l'avant. Si positionné à l'arrière, suivez les mêmes instructions en mesurant depuis l'arrière

NL Instructies voor voorkant. Indien bevestigd aan de achterzijde: volg dezelfde stappen maar meet vanaf de achterzijde

 
 
 
IT Istruzioni mostrate per la parte anteriore. Se si adatta alla parte posteriore, seguire gli stessi passaggi misurando dalla parte posteriore

SE Manualen visar för montering mot framsida. Om du vill montera mot baksidan, följ samma steg från andra hållet





DK Instruktationer vist foran. Hvis du monterer på bagsiden, skal du følge de samme trin, der måles bagfra

NO Instruksjoner vist foran. Hvis du passer til baksiden, følg de samme trinnene som måles bakfra




PL Poniższa instrukcja pokazuje montaż kurtyn z przodu. Jeśli montujesz je z tyłu, wszystkich pomiarów dokonuj od tyłu kójca

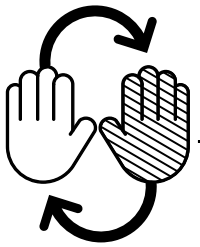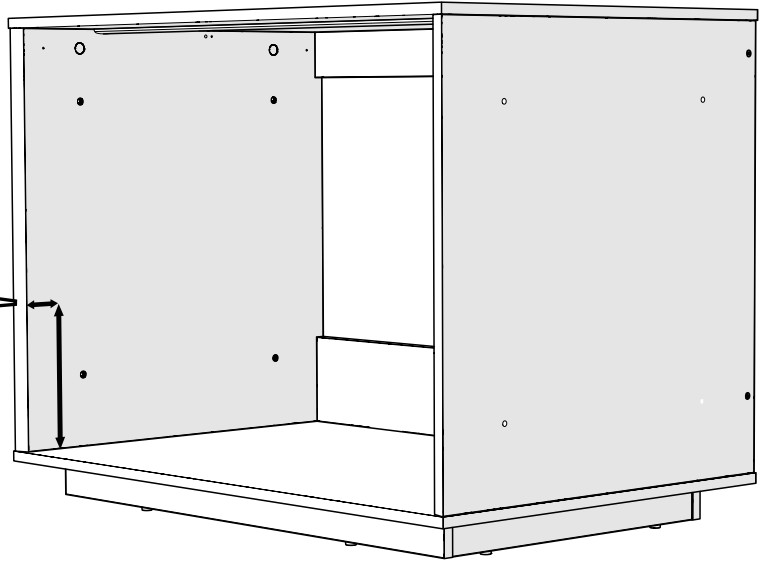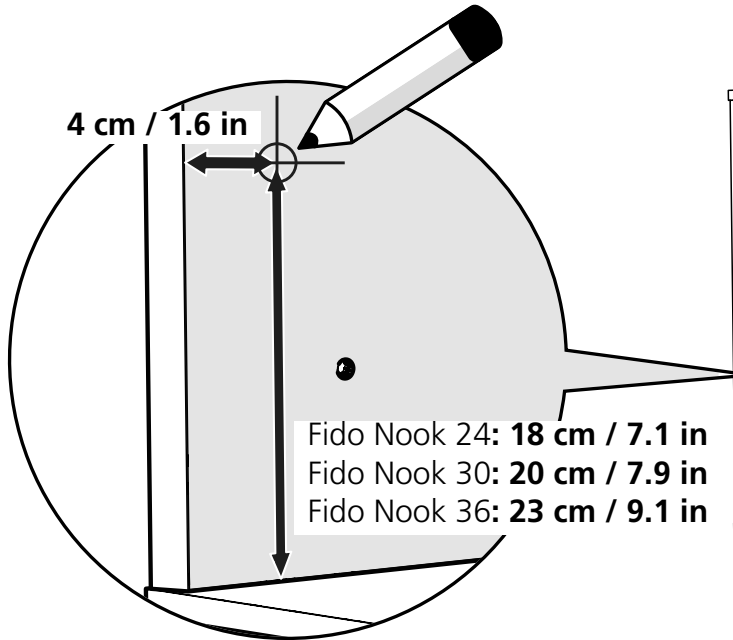

  
 
 
UK Repeat on other side
DE Auf der anderen Seite wiederholen
FR Répétez l'opération de l'autre côté
NL Herhaal aan het andere zijde
IT Ripetere sul lato opposto
SE Upprepa på andra sidan
DK Gentag på den anden side
NO Gjenta på den andre siden
PL Zrób to samo po drugiej stronie

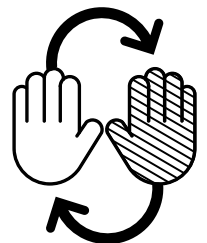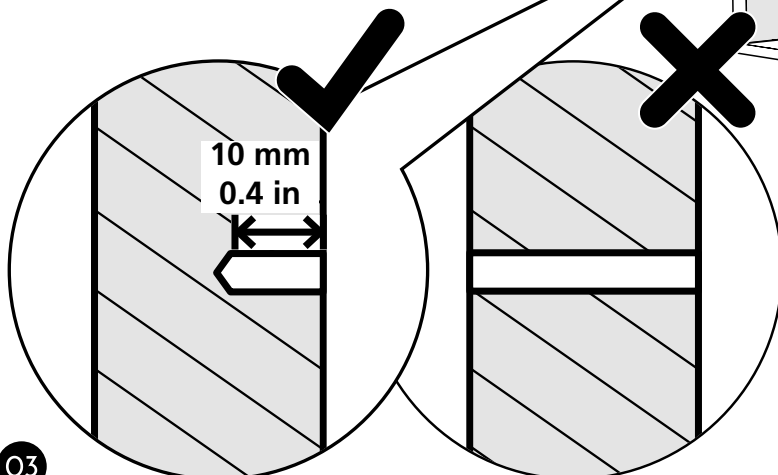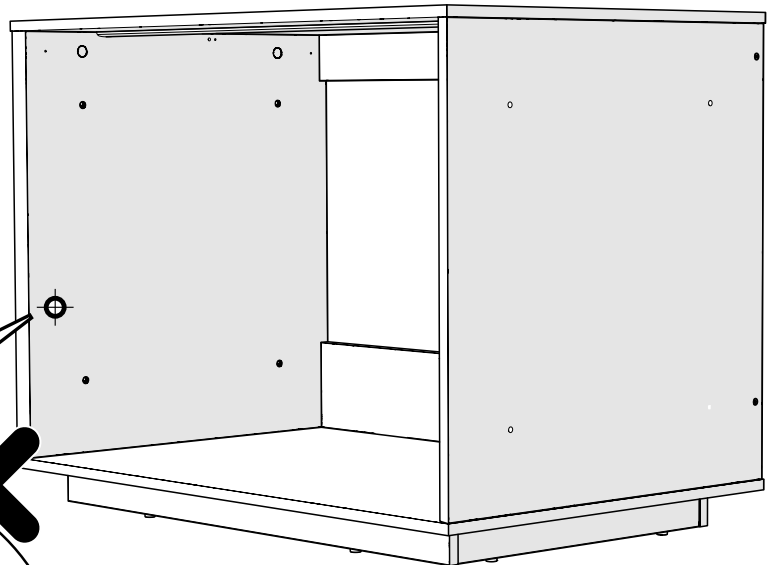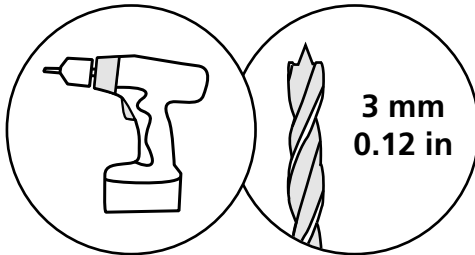2

   3

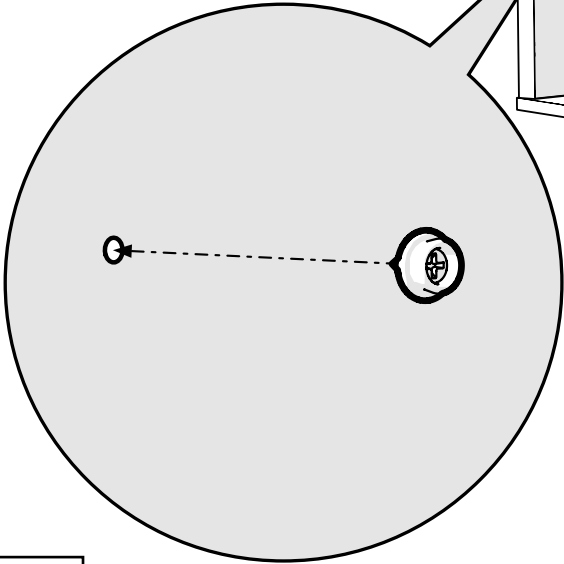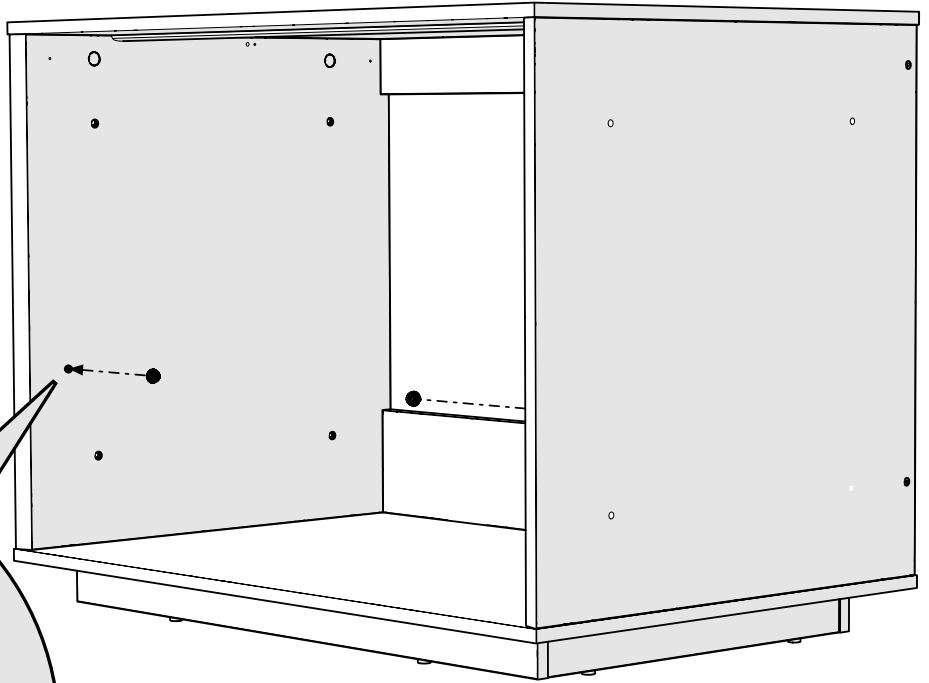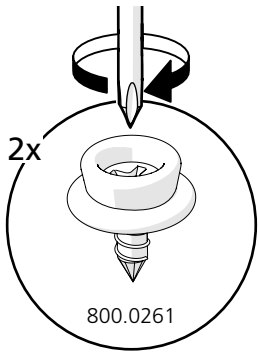


4

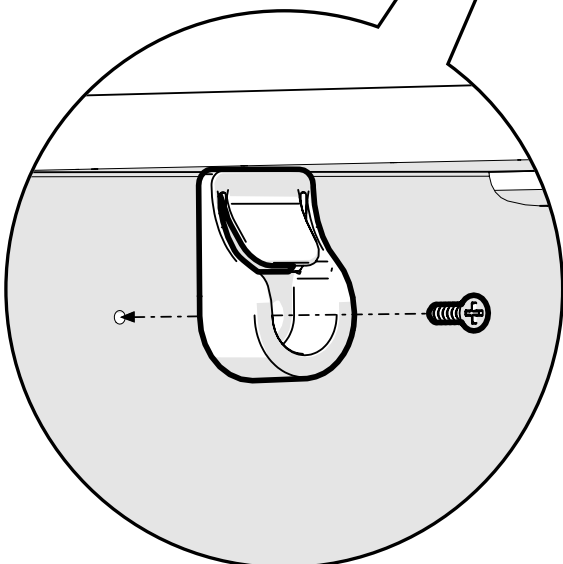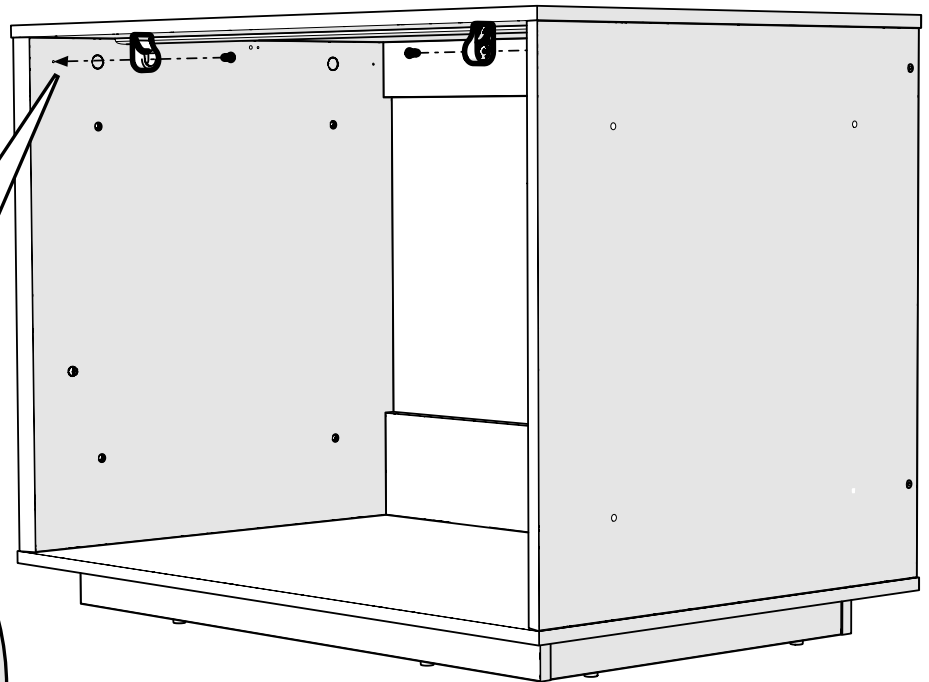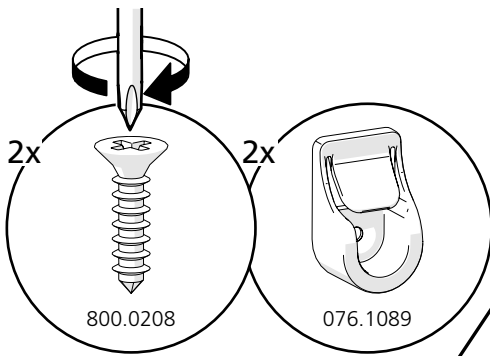   


5

 2x

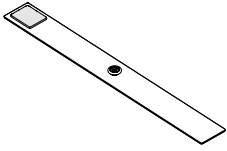

 Fido Nook 24: 076.1076
Fido Nook 30: 076.1077
Fido Nook 36: 076.1078

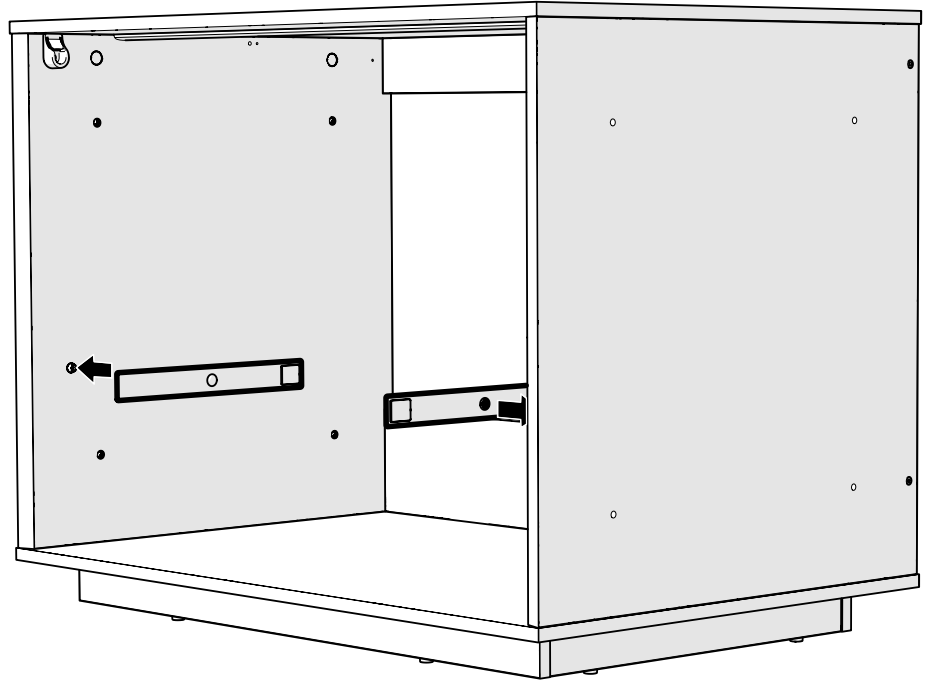


6

2x




 076.1090


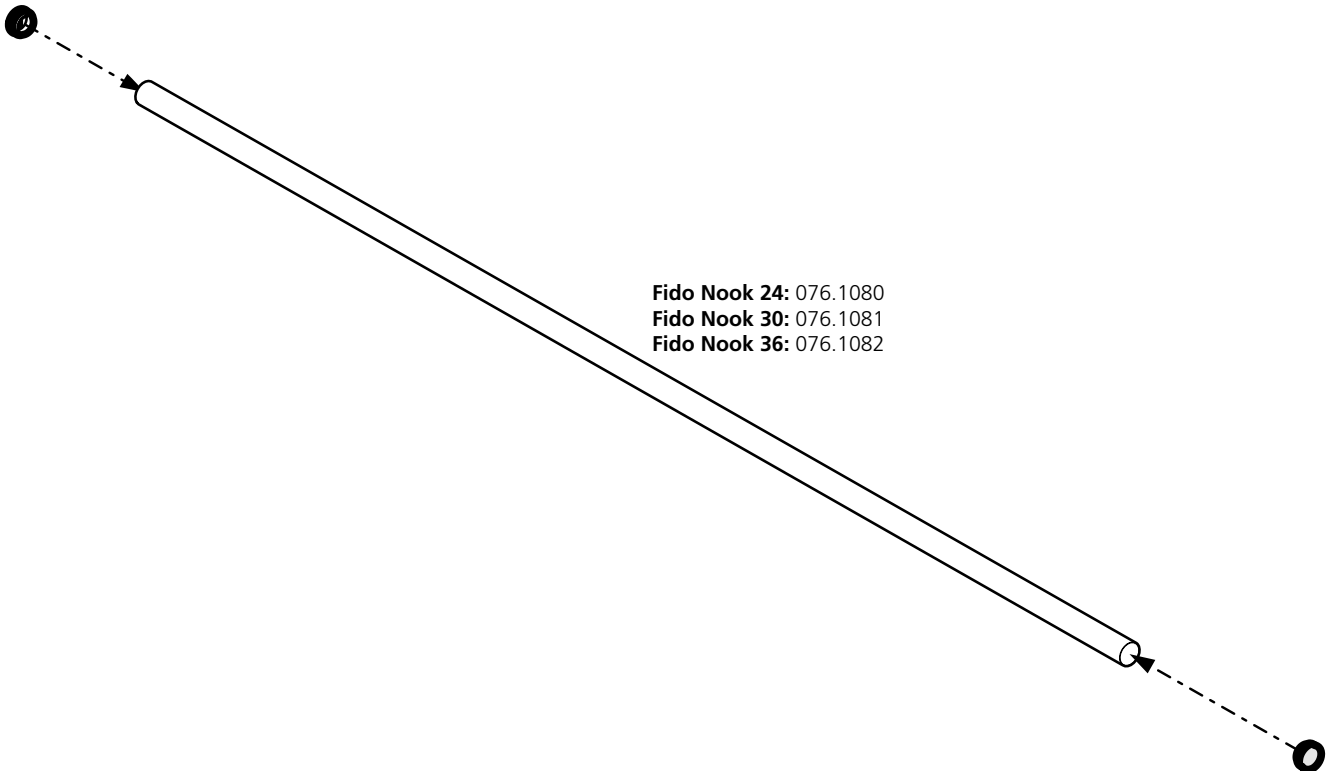


Fido Nook 24: 076.1080
Fido Nook 30: 076.1081
Fido Nook 36: 076.1082

 
7

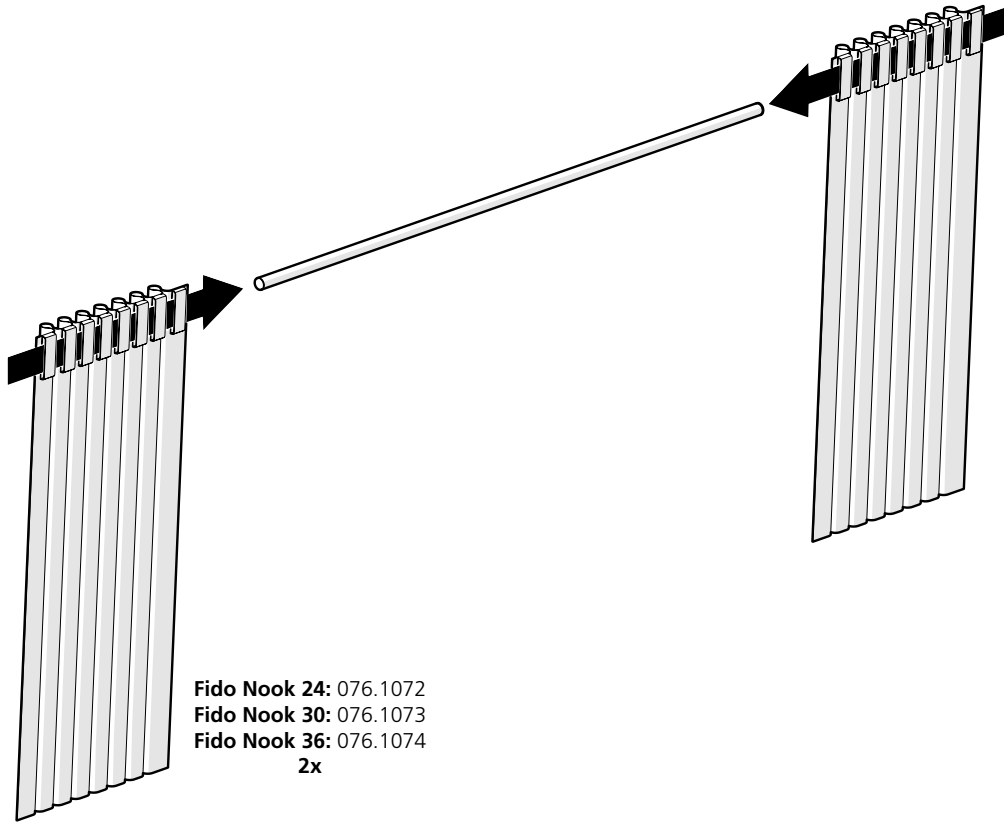

8

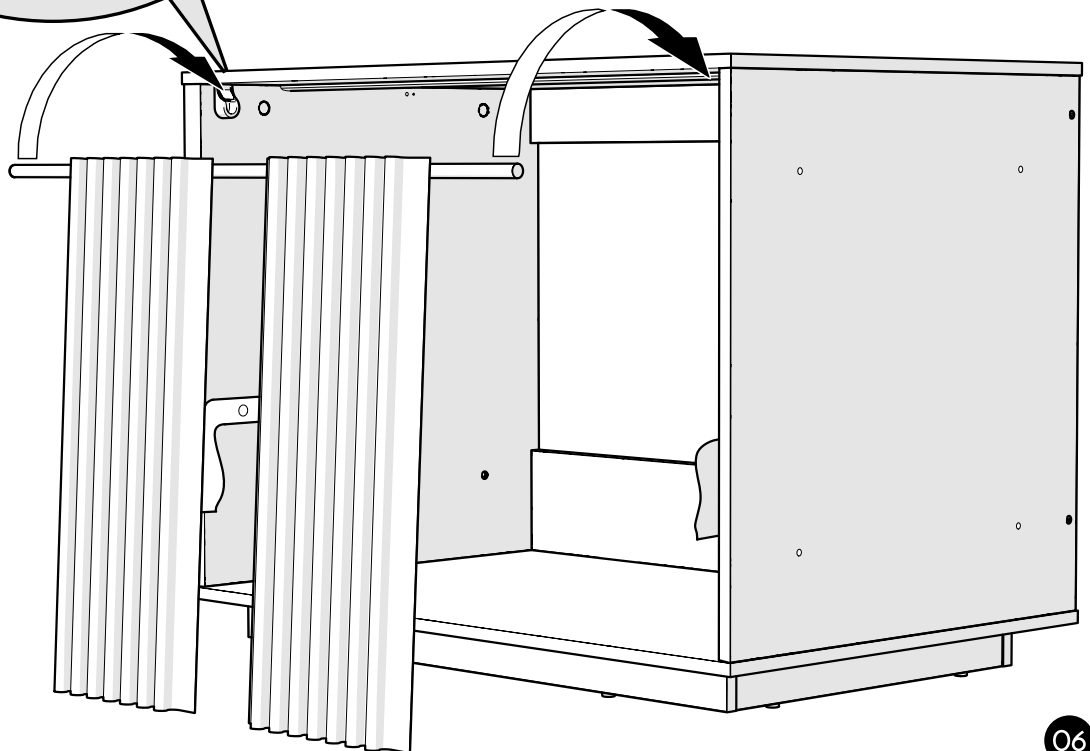 
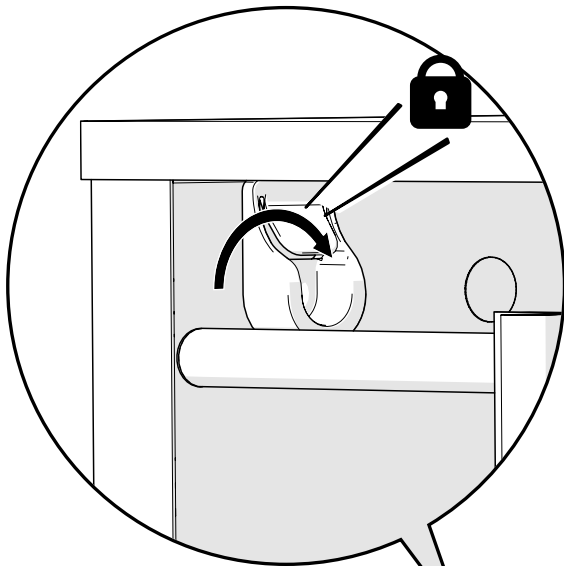 


9

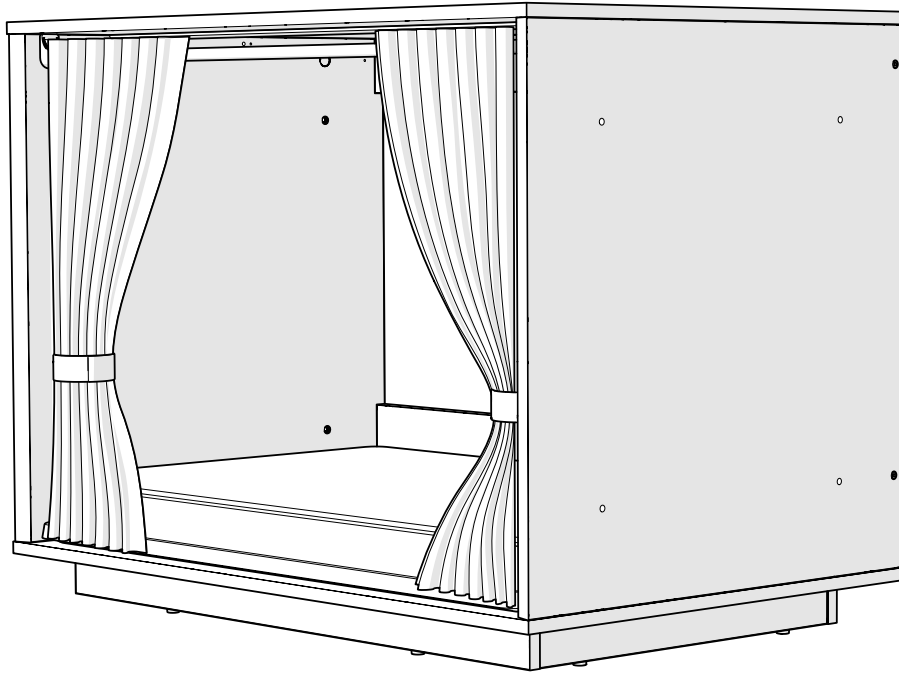 

or

  oder · ou · of · oppure · eller · lub

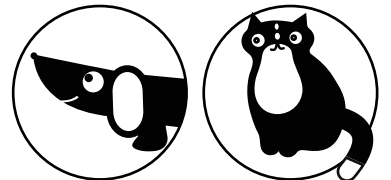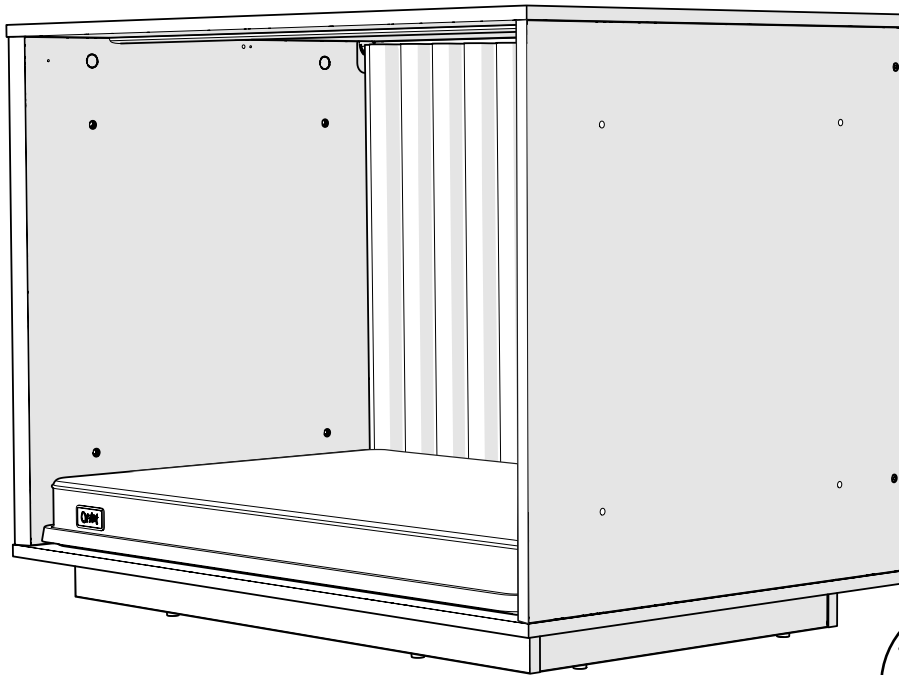

Omlet®

