 


Omlet®

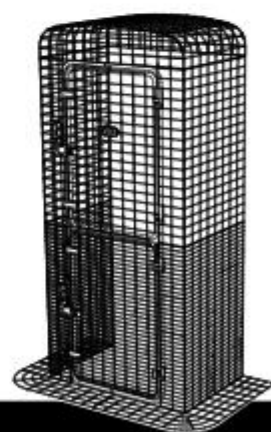

outdoor pet run®
porch

Watch the 'How to Build' video now
www.omlet.co.uk/how_to_build





United Kingdom	01295 500900	hello@omlet.co.uk	www.omlet.co.uk
United States	646-434-1104	info@omlet.us	www.omlet.us
Australia	02 8103 4124	info@omlet.com.au	www.omlet.com.au
Ireland	01 513 7973	hello@omlet.co.uk	www.omlet.ie
Deutschland	0451 8118 9058	hallo@omlet.de	www.omlet.de
Austria	0720 115240	hallo@omlet.de	www.omlet.de
France	04 11 92 12 80	info@omlet.fr	www.omlet.fr
Nederland	085 888 3571	vrage@omlet.nl	www.omlet.nl
Belgium FR	02 808 85 07	info@omlet.fr	www.omlet.fr
Belgium NL	09 298 04 69	vrage@omlet.nl	www.omlet.nl
Switzerland DE	022 518 24 59	hallo@omlet.de	www.omlet.de
Switzerland FR	021 588 14 88	info@omlet.fr	www.omlet.fr
Italia	0294 752010	info@omlet.it	www.omlet.it
España	0932 201 199	info@omlet.es	www.omlet.es
Sverige	084468 6558	hej@omlet.se	www.omlet.se
Danmark	89 87 06 83	info@omlet.dk	www.omlet.dk
Norge	08 4468 6558	hei@omlet.no	www.omlet.no
Polska	22 307 01 69	czesc@omlet.com.pl	www.omlet.com.pl


Thank you for buying an Omlet Outdoor Pet Run Porch. It is designed to fit perfectly to the Outdoor Pet Run and will make it easier for you to enter into and exit the Outdoor Pet Run without your pets nipping out with you!

Please remember that both the Omlet Outdoor Pet Run and its Porch are designed for adult animals. Once set up we recommend spending a couple of hours observing your pets in the run before you leave them there. This is to ensure they are safe and secure in the run and the size of the holes in the mesh is appropriate for them.


Omlet Outdoor Pet Run Porch is not a toy. You must follow the assembly instructions to make sure the product works as intended. Any other use beyond what is specified shall be considered as improper use. Any direct commercial or industrial use is also deemed to be improper. Omlet is not liable for any damage resulting from such use. The user alone bears the risk.

What you have received


041.0180: Outdoor Pet Run Porch

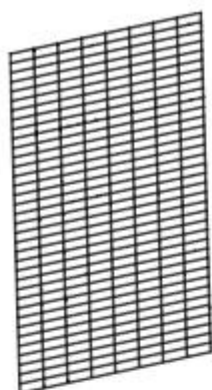


Lower Porch Panel
041.1104
x2

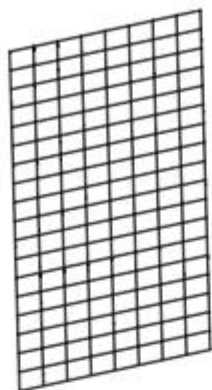


Upper Porch Panel
041.1105
x2

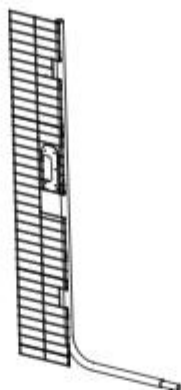

Door Frame Bottom
Lock Side MK3
041.0132
x1

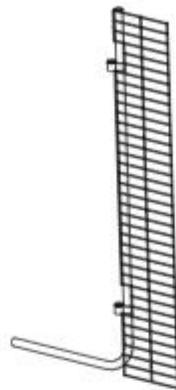

Door Frame Bottom
Hinge Side MK3
041.0130
x1

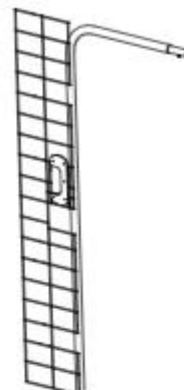


Door Frame Top
Lock Side MK3
041.0133
x1



Door Frame Top
Hinge Side MK3
041.0131
x1



 
Mk3 Lower Door
041.0297
x1

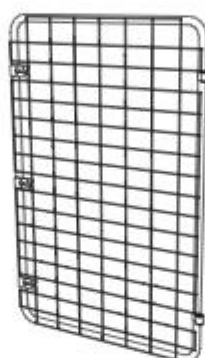


Mk3 Top Door
041.0298
x1



 Porch Panel Roof
041.1106
x1

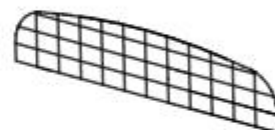

Porch Panel Gable
041.1107
x2

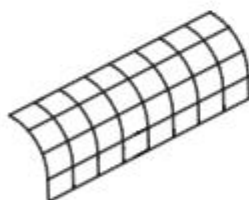 

Porch Panel Infill
041.1115
x2



Porch Panel Skirt
041.1108
x2



Run Panel Skirt Corner
041.1003
x2



Mighty Clip C
810.0134
x76



Mighty Clip E
810.0185
x4

 
041.0099: Porch Fixings



Door Catch with Sleeve
041.0096
x2



Door Catch Cap
041.1118
x6



Door Stop
MK3
041.1244
x4



Bolt Assembly
041.0024
x2



Tube Connection Pin
041.1043
x2



Screw 3.5x12mm
800.0002
x36

2 x 041.0246: Hinge Fixings Pack



Hinge Cap
041.1045
x4



Hinge Pin
041.1046
x2

810.0138: Bagged Omlet Badge



 
 
Omlet Badge
810.0137
x2

You will need...




1

Steps 1 to 11 are the same for both orientations

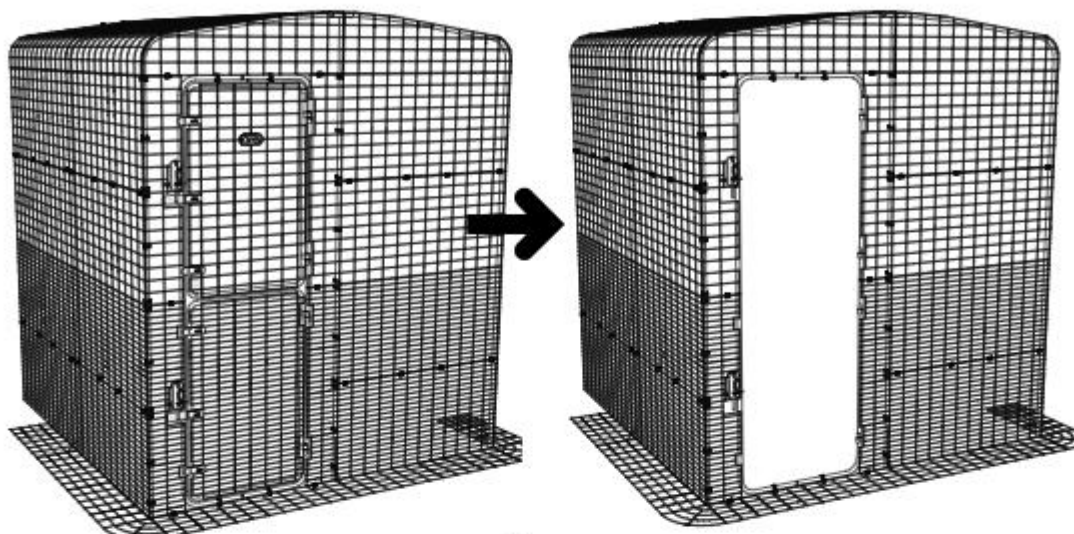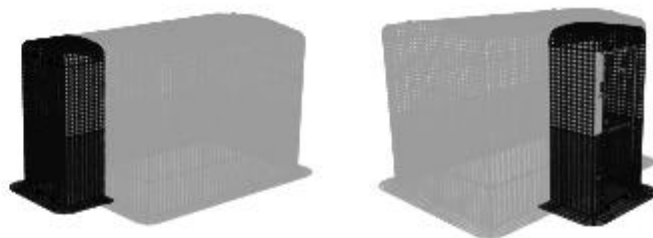



Keep the Doors safe until Step 20

 2


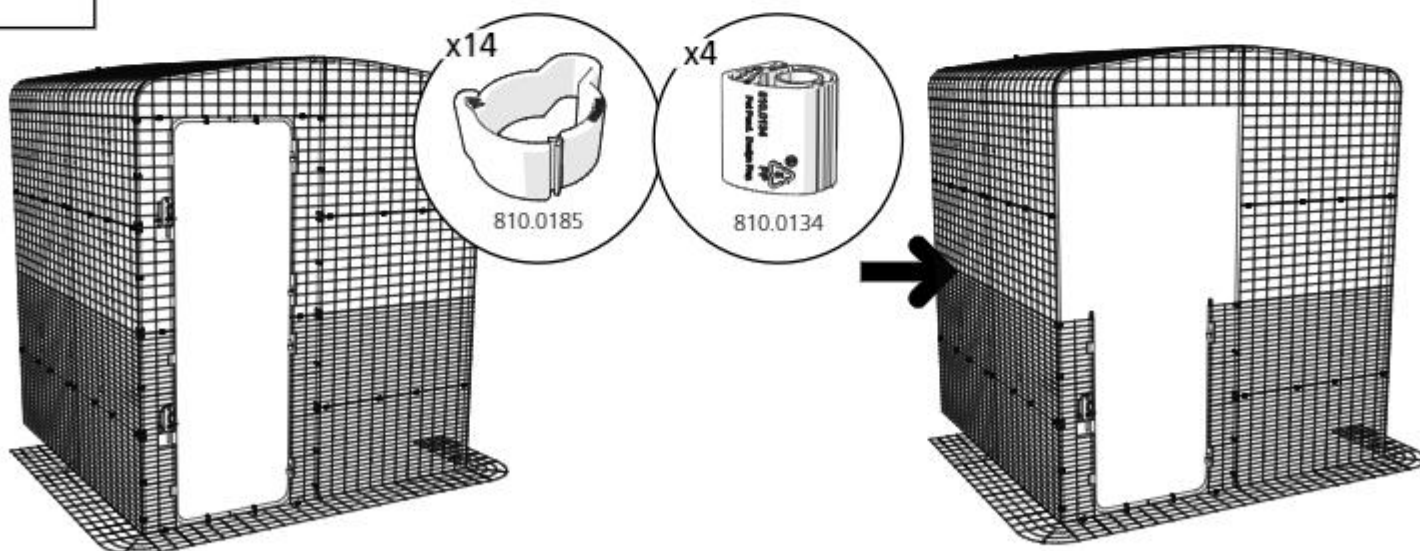


Keep the Parts safe until Steps 4-5

 
 
3

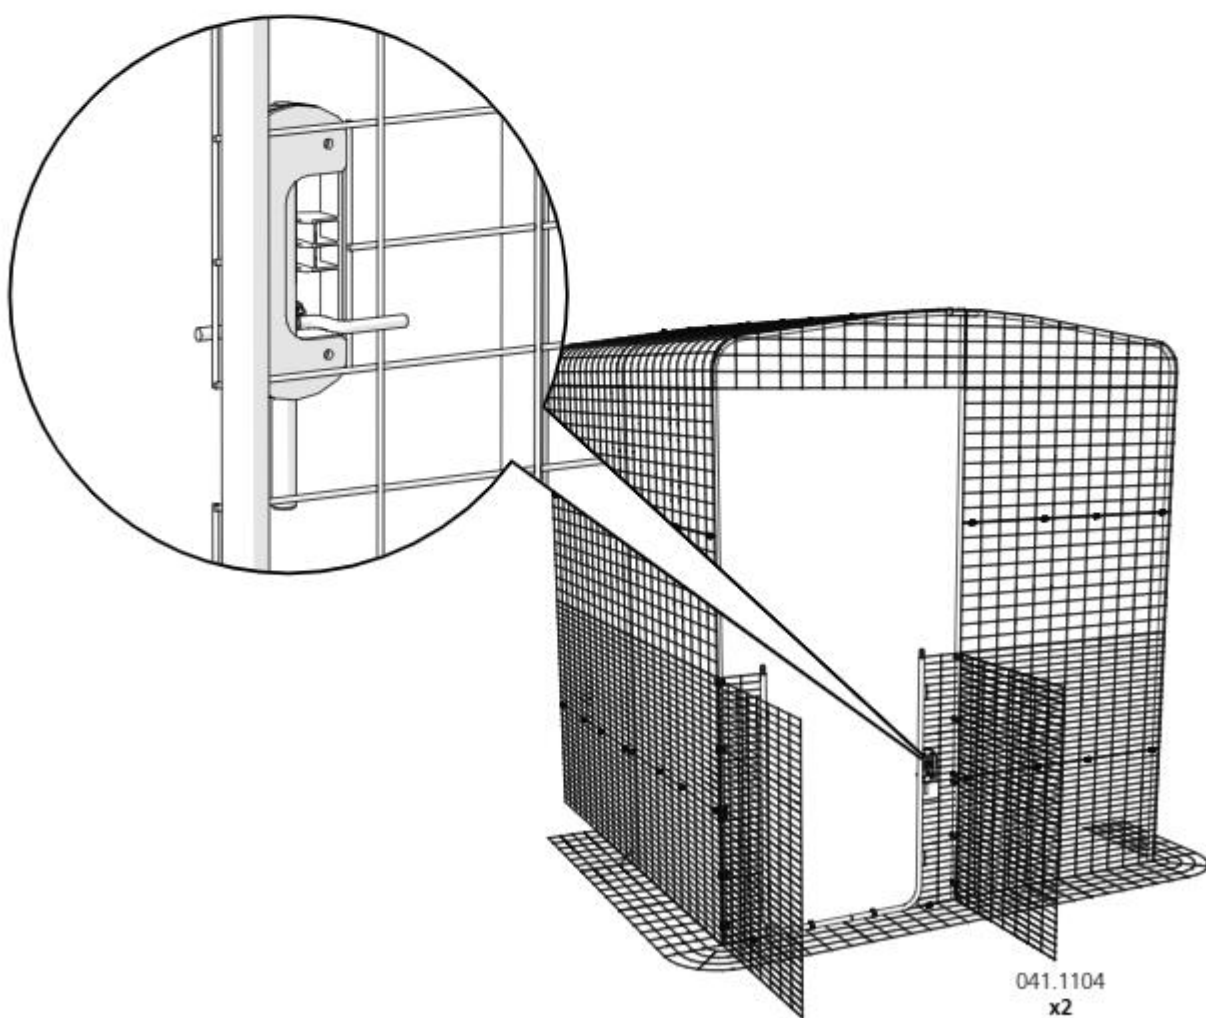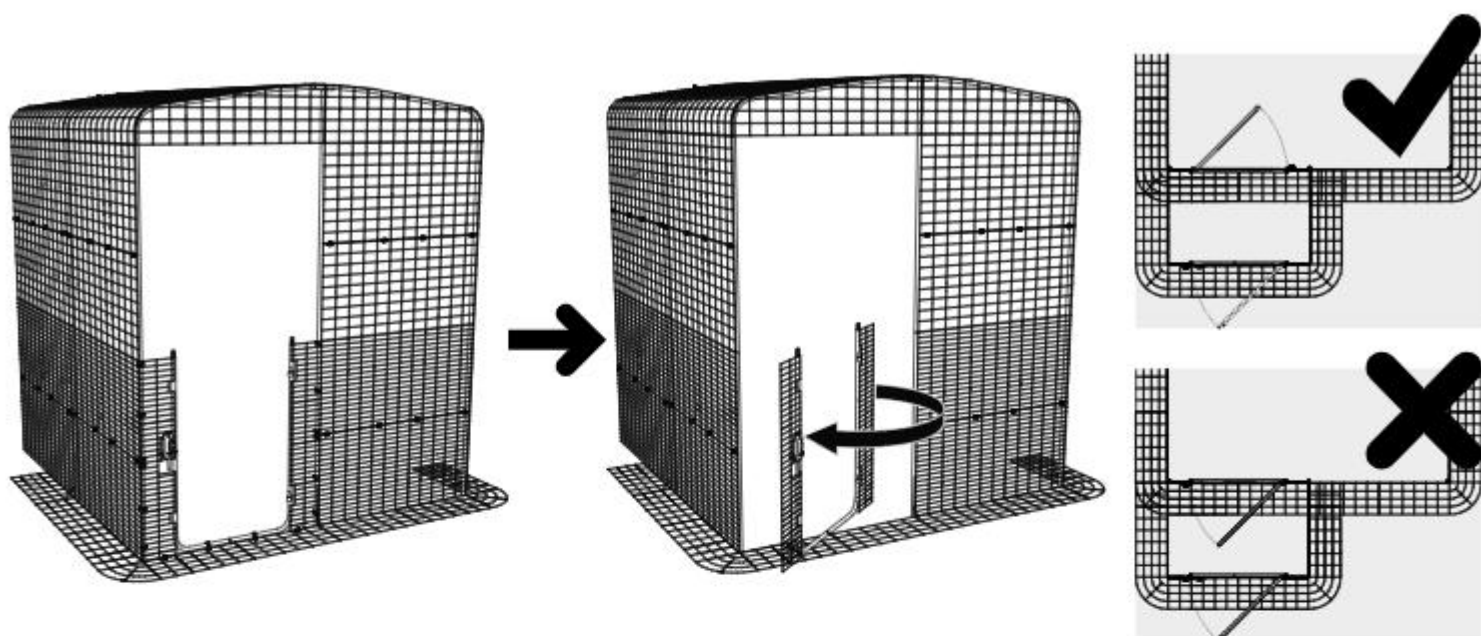

4

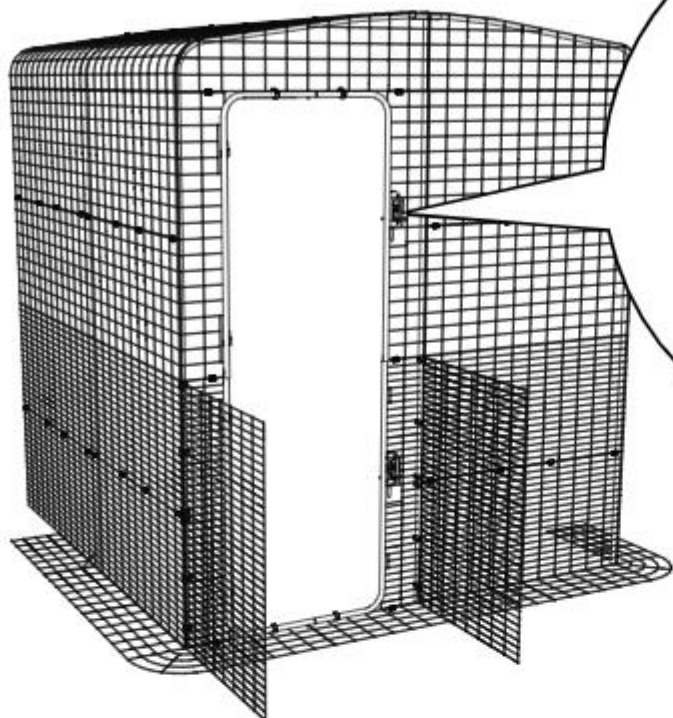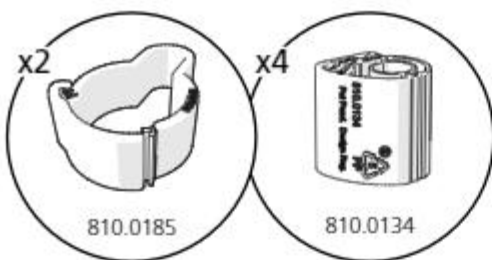  

5

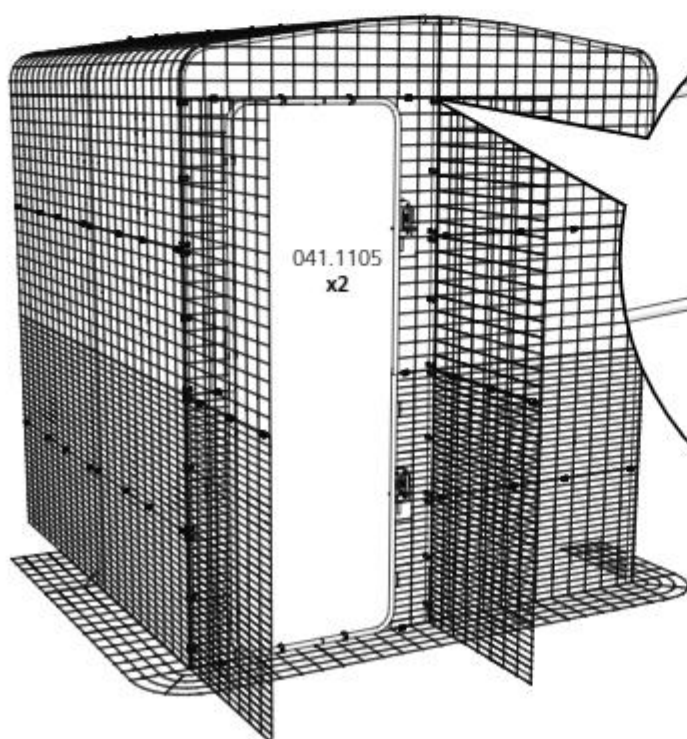 
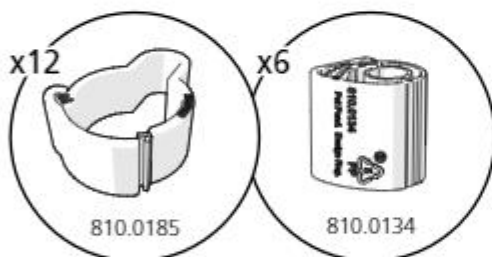 


6


x16



  
810.0134

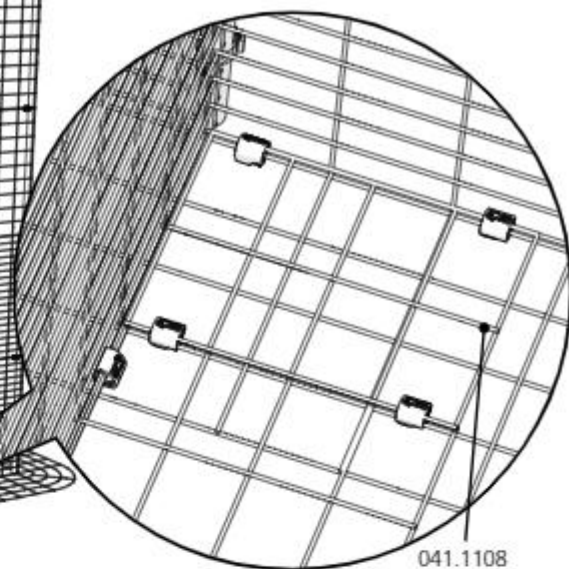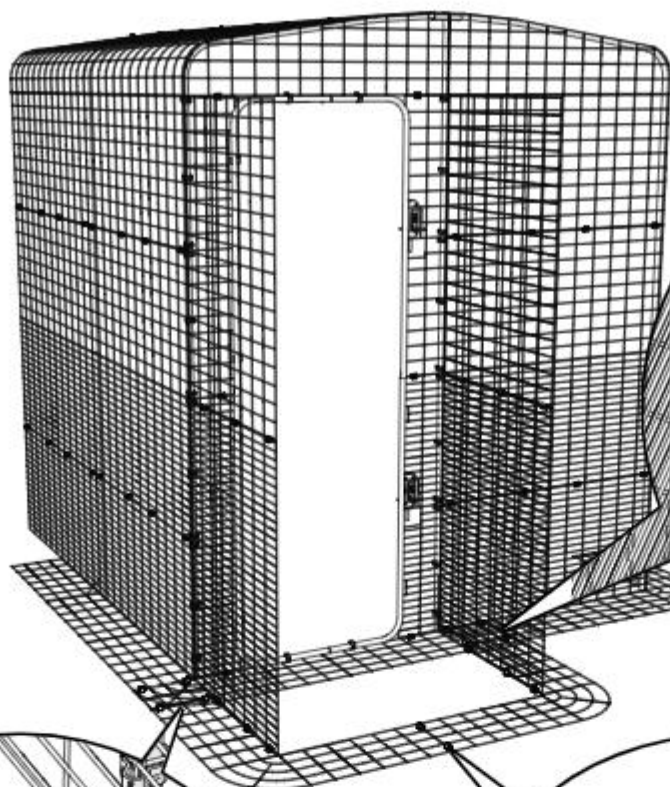

 041.1108

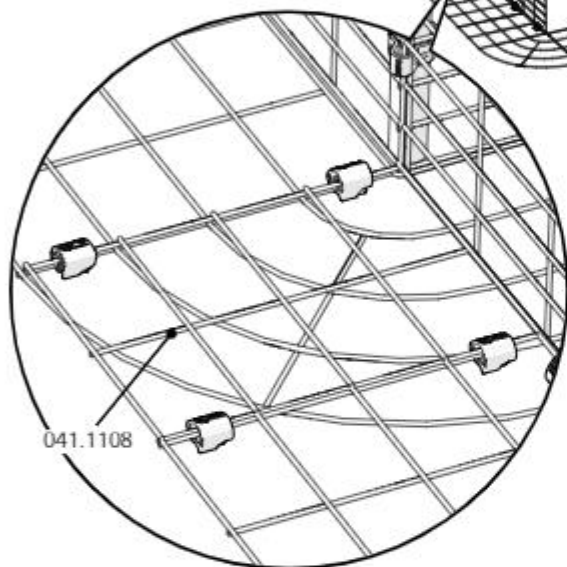

 041.1108

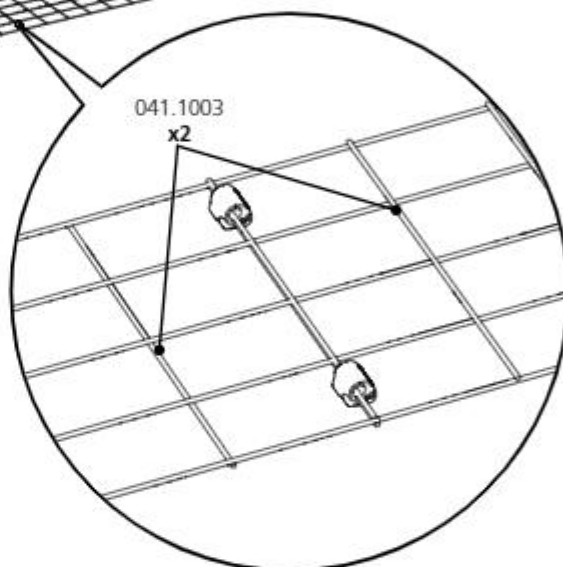

041.1003

 
x2

7

x2



041.1043

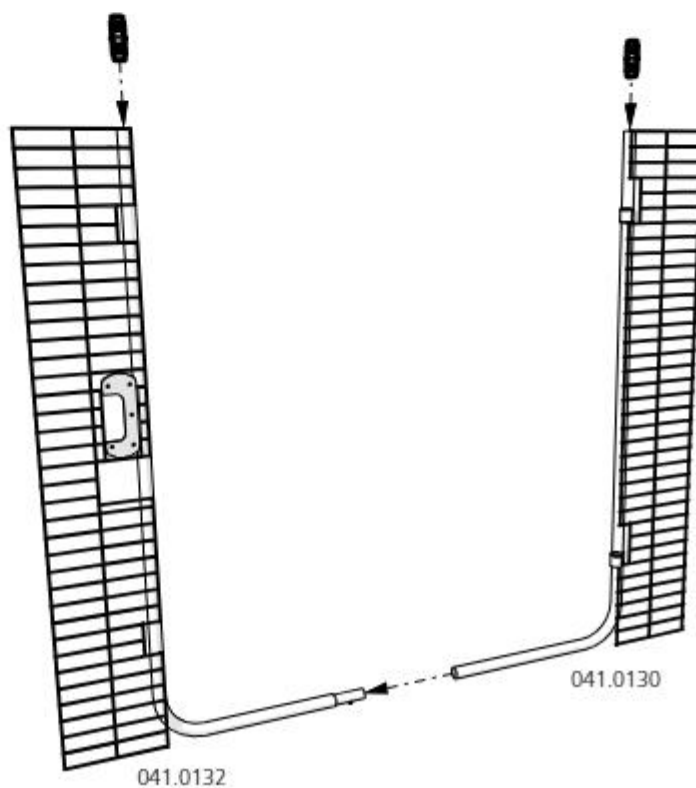

041.0130

041.0132

8

x12

 
 
 


810.0134


x2



810.0185

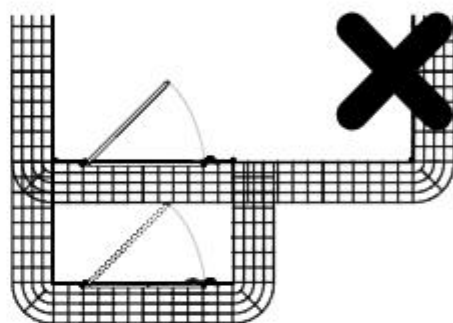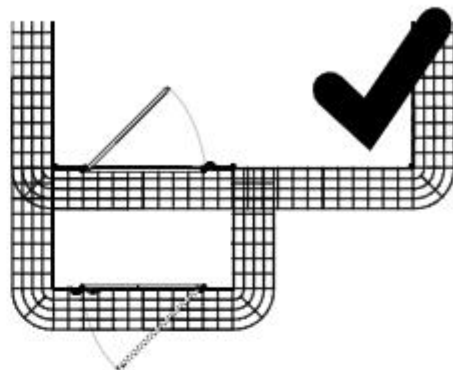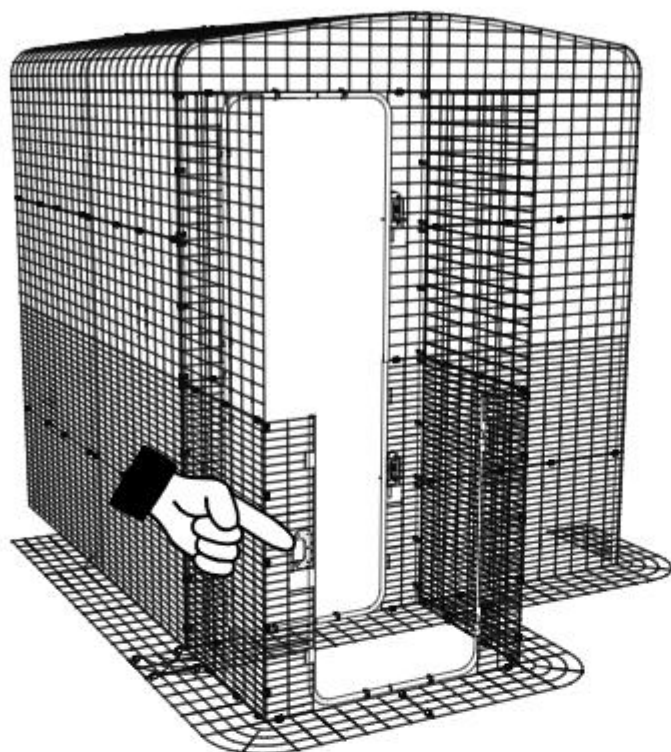


9

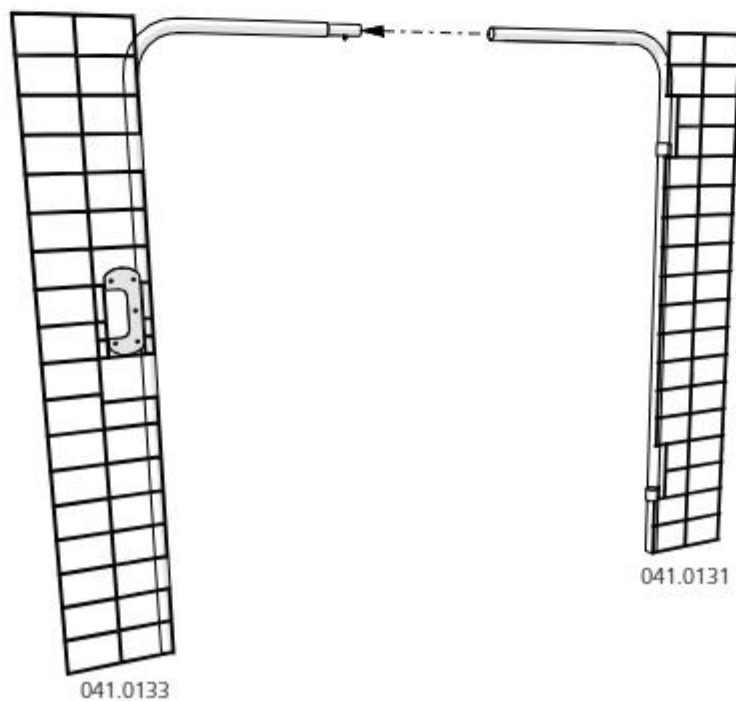 


041.0133

041.0131

 10

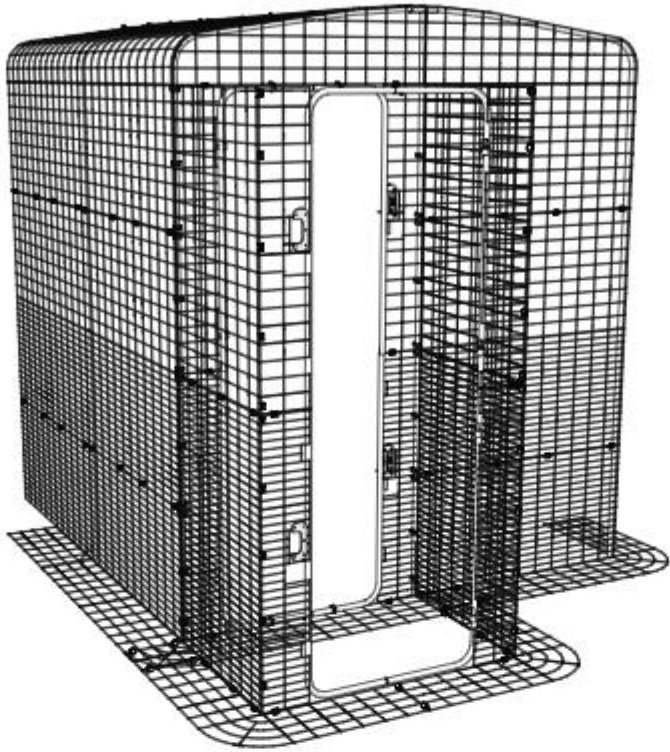

11

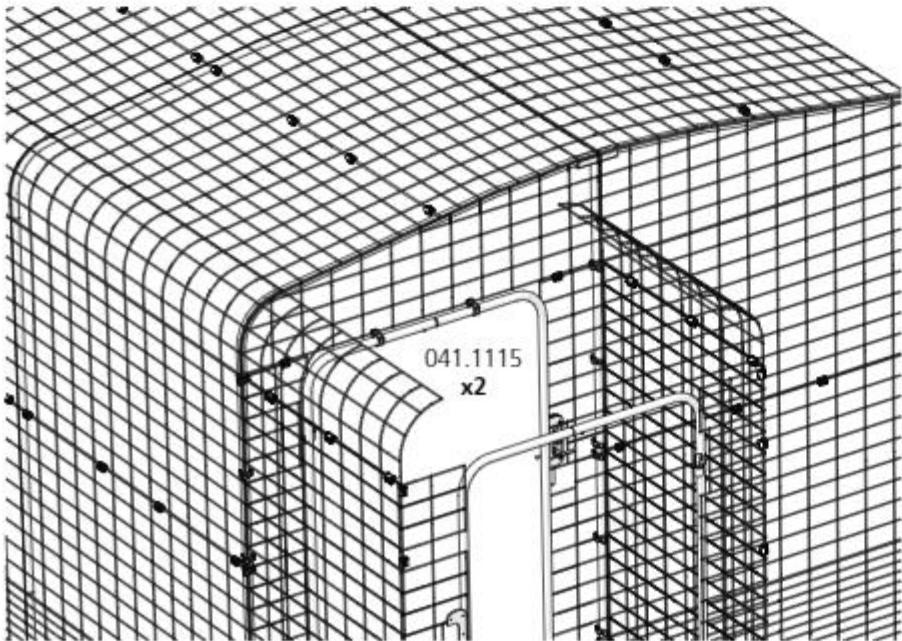 

12

 
x10



810.0134

041.1107

x2

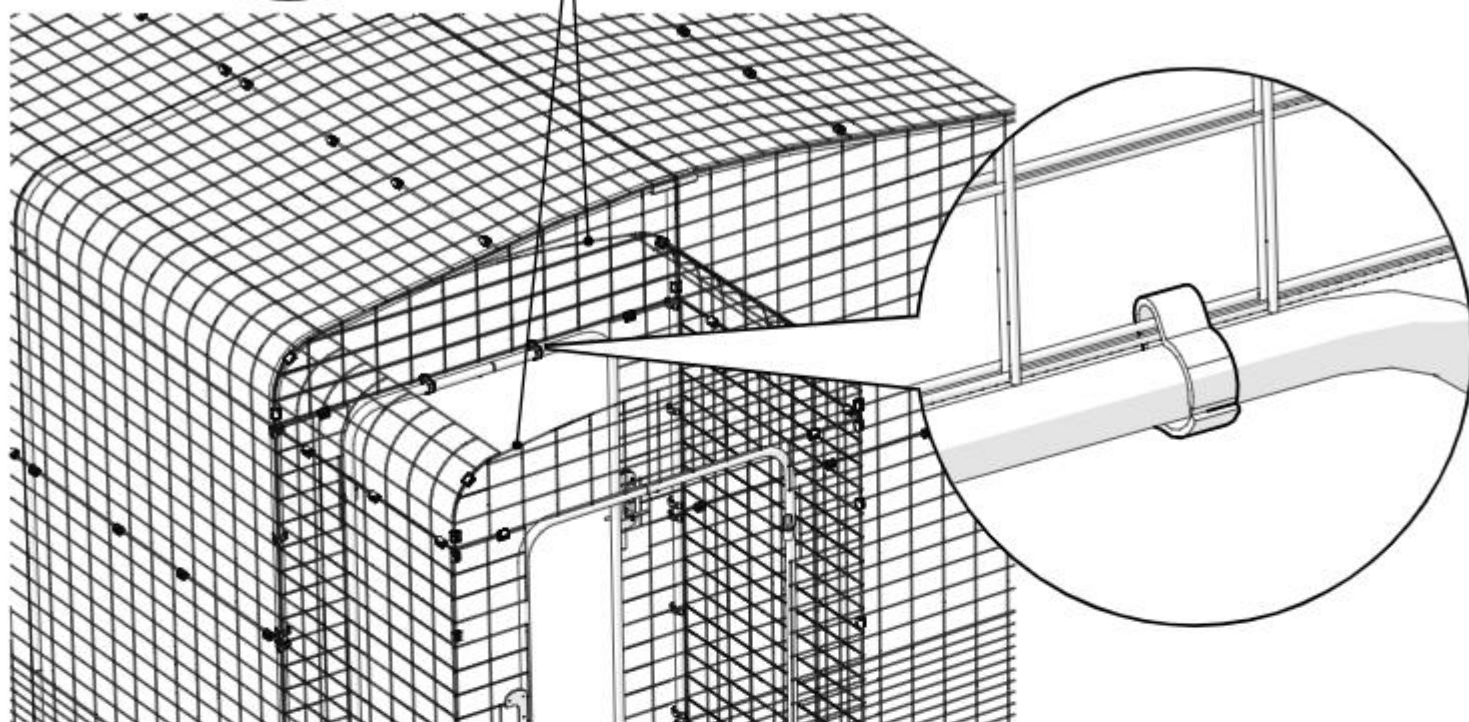


13

x14



810.0134

 041.1106

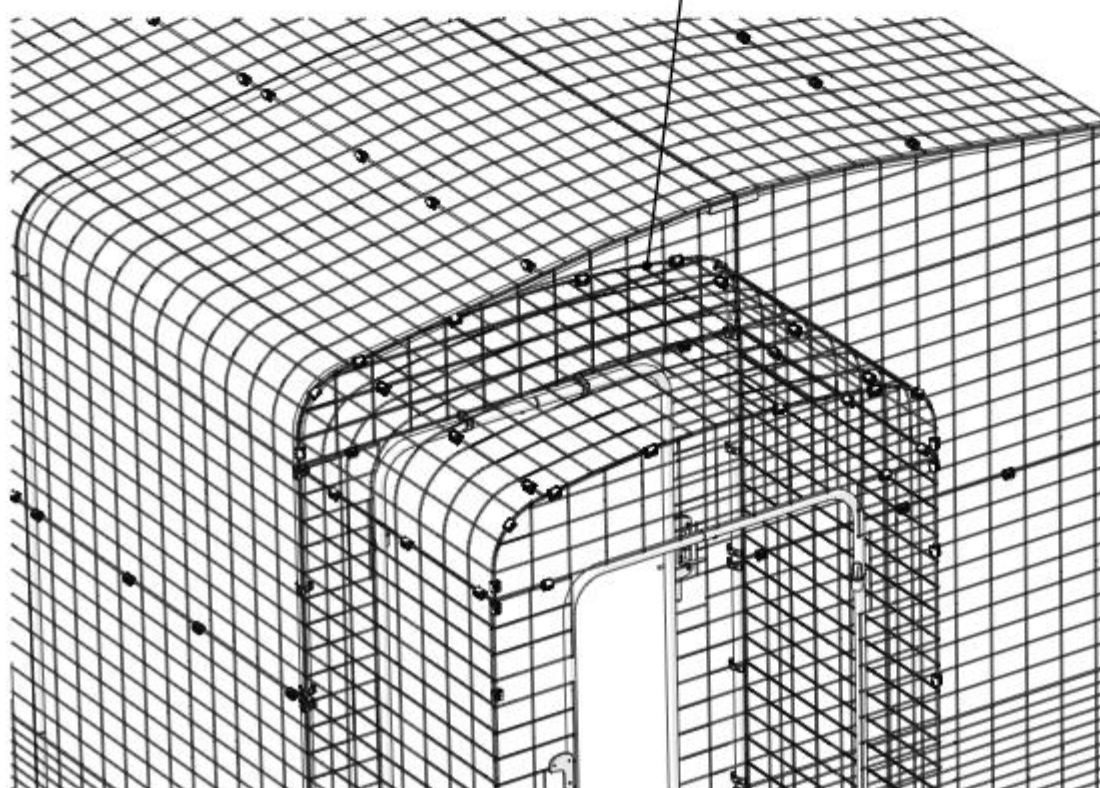

14

 
x10



810.0134

041.1107

x2

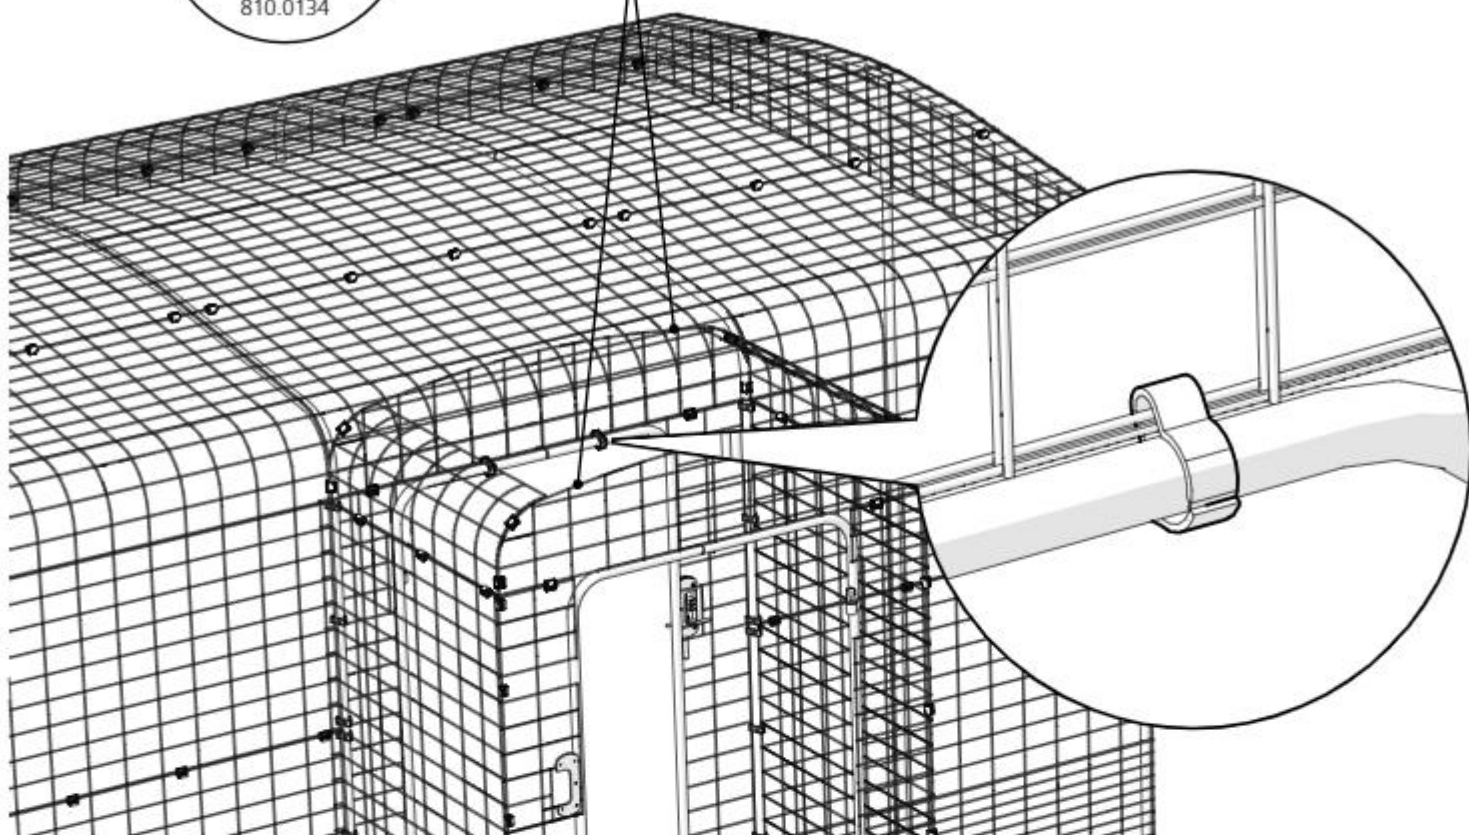


15

x14



810.0134


 
041.1106

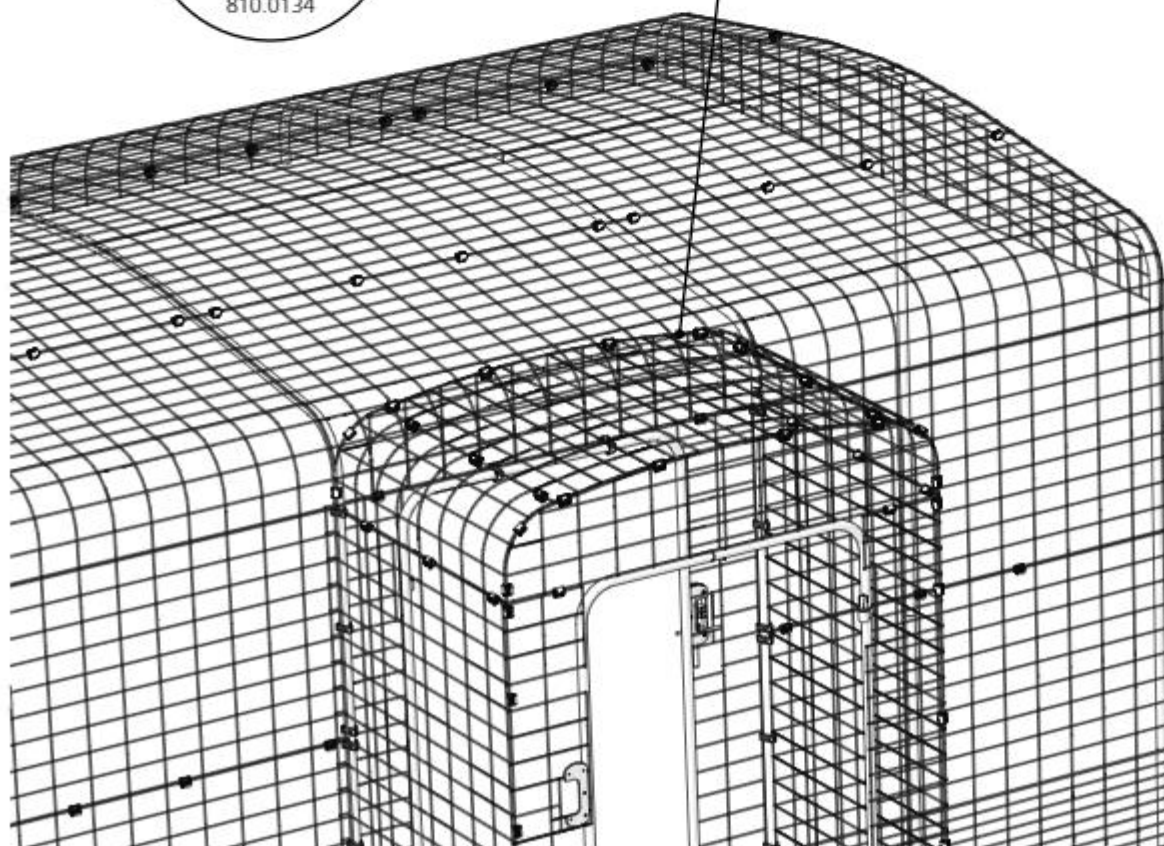



13

12

 
 
16

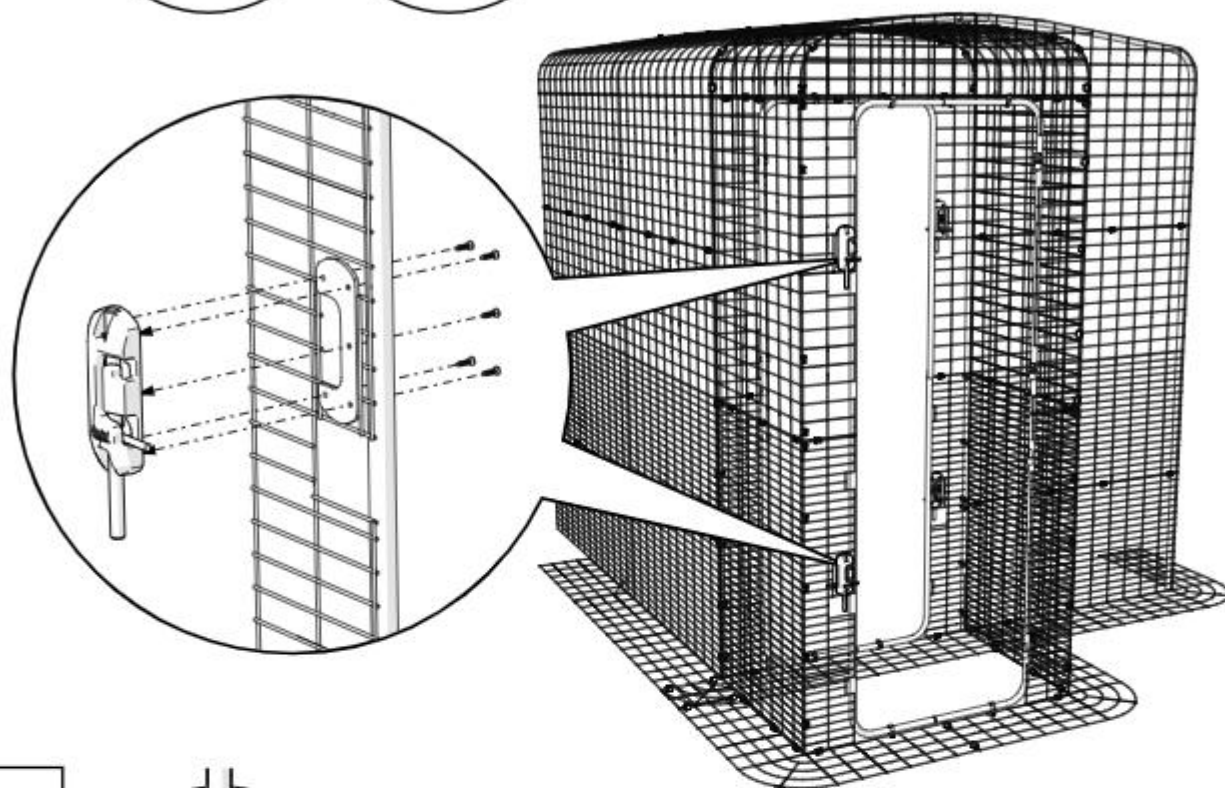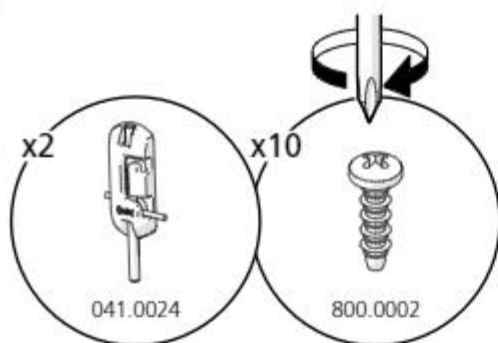



17

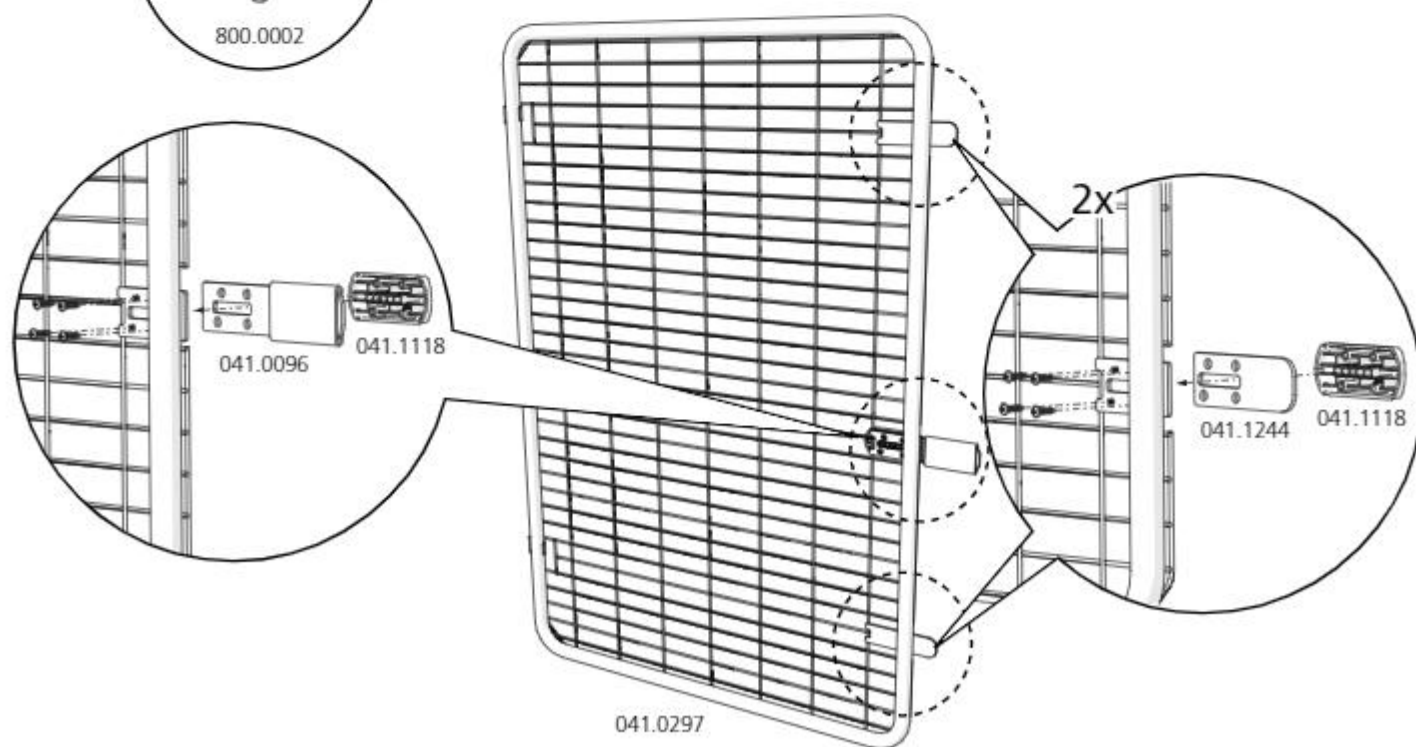 
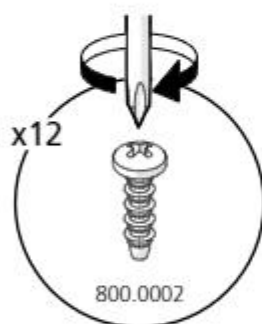 


18

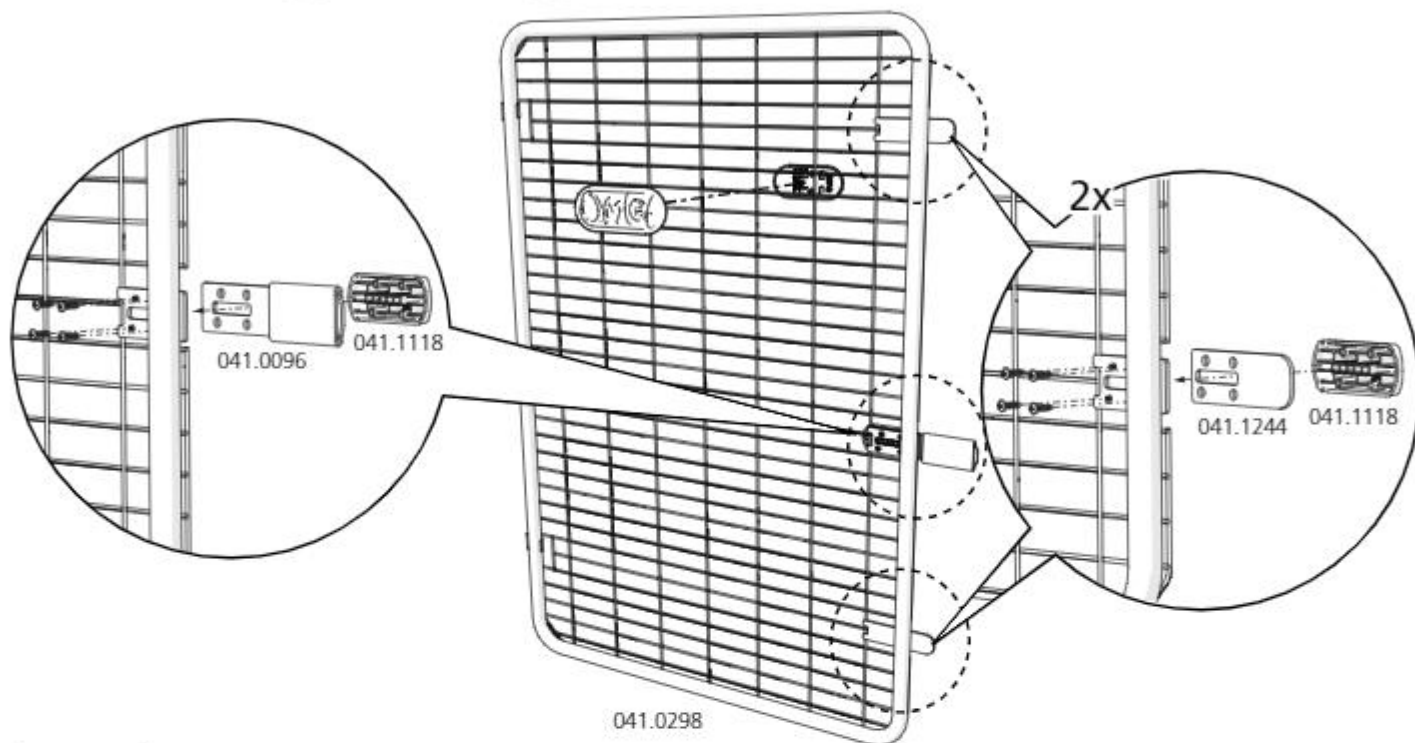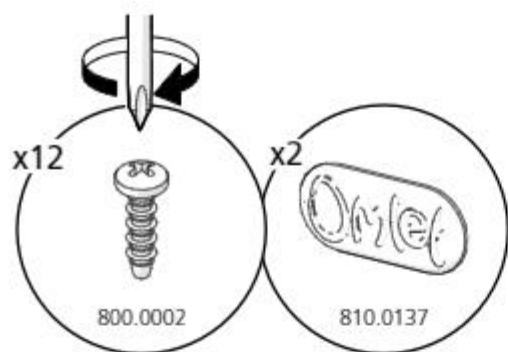  

19

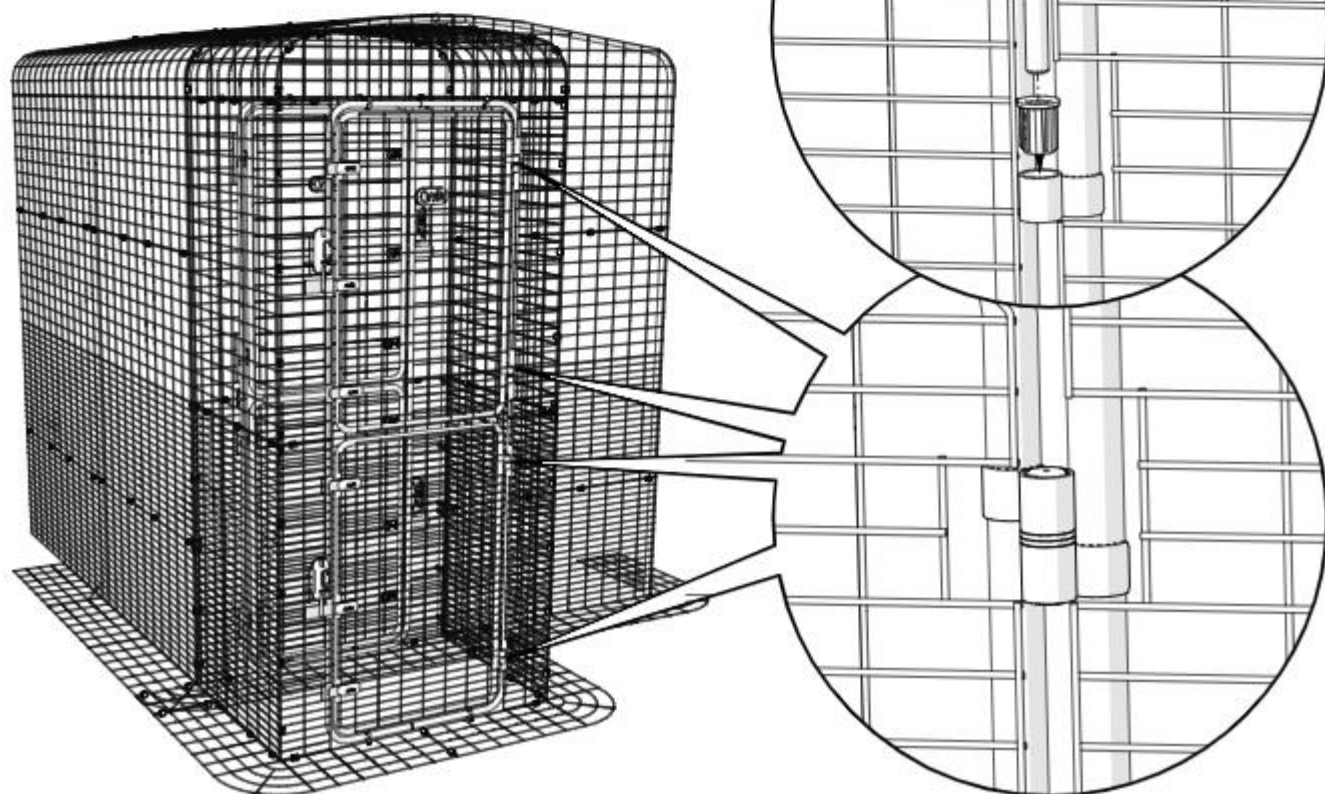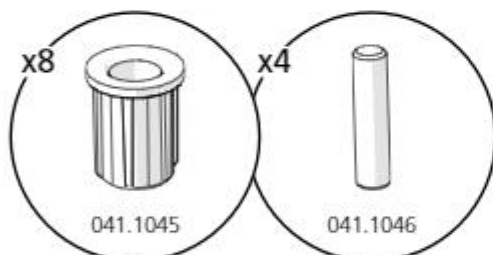  

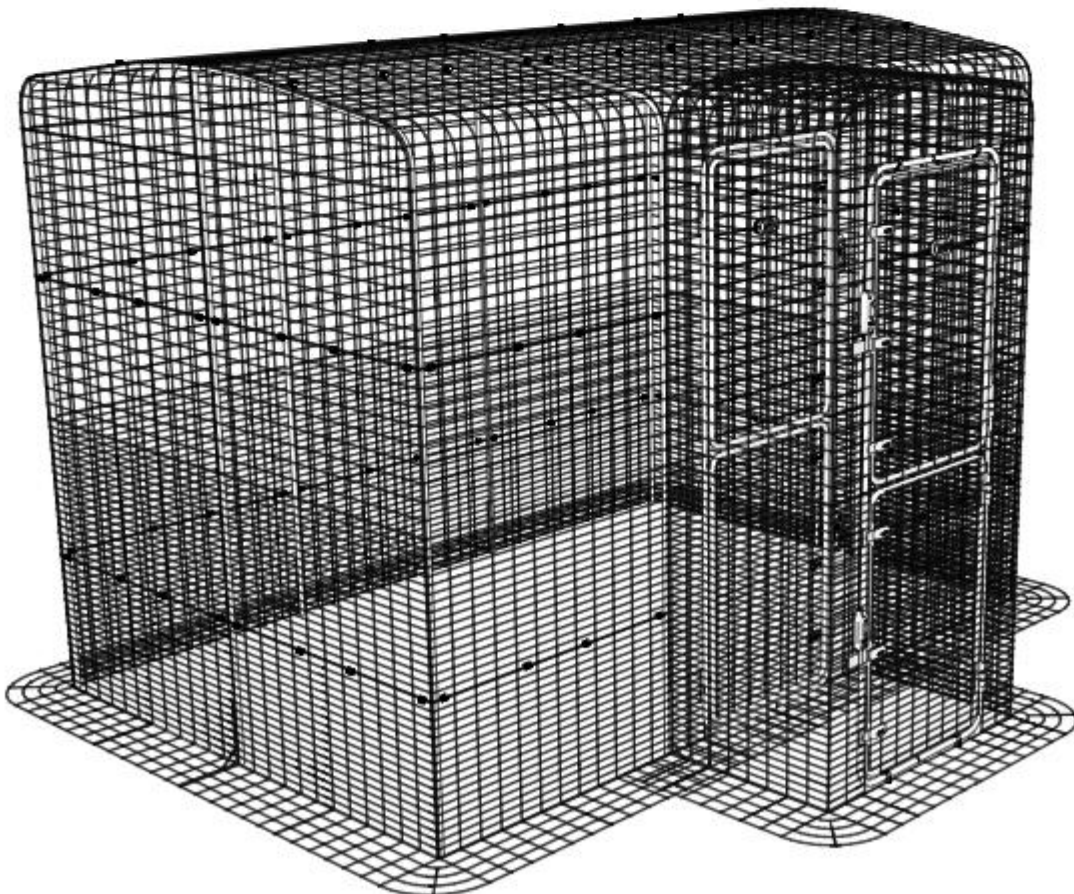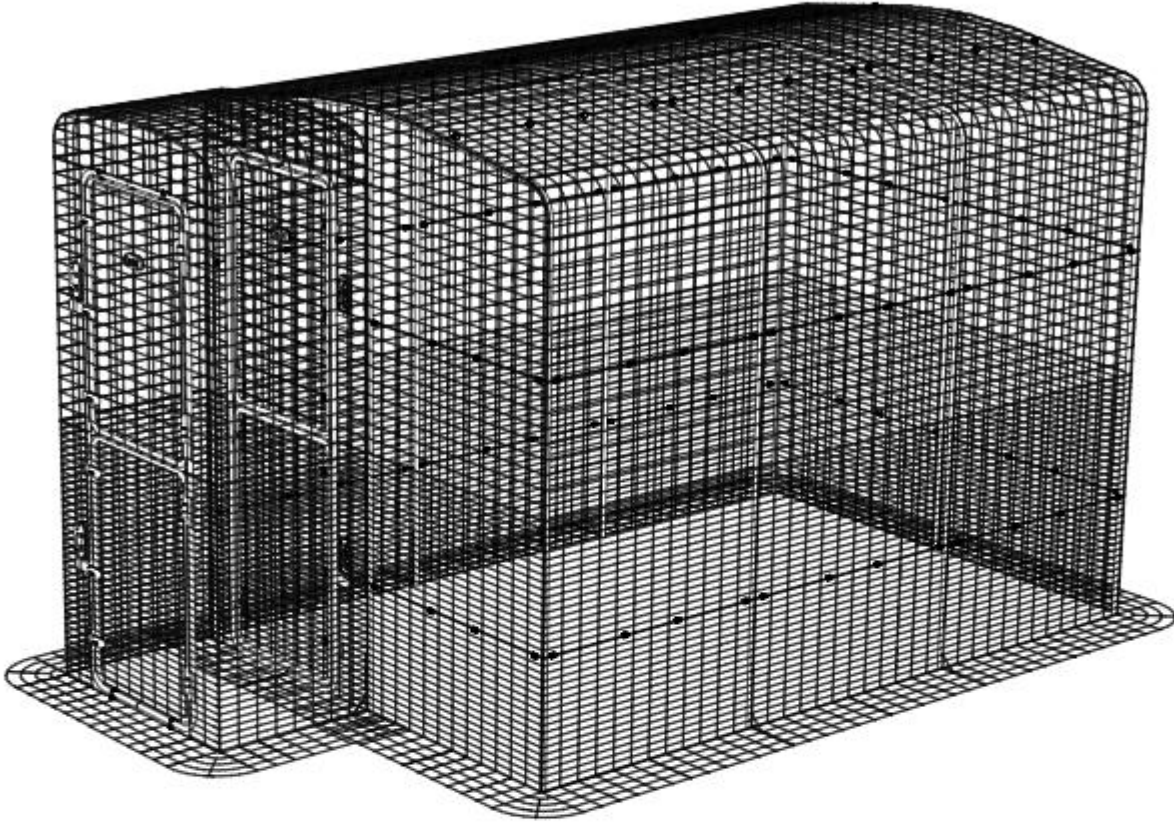  

DOs

Make sure your pets always have access to fresh food and water.

Make sure the size of the holes in the mesh are appropriate for your pets.

Make sure the Outdoor Pet Run and Porch doors are always closed and locked when you're absent, so no predators can get in.

Supervise your children when they are using the Outdoor Pet Run and Porch.

Regularly check all round to make sure your Pet Run and Porch are secure.

Check the clips regularly. If any have been damaged or weakened, they should be replaced to keep the run secure. The run is designed to be used outdoors for years to come. However, we recommend that you check your run regularly for signs of corrosion especially if you live somewhere with extreme weather conditions or close to the sea. Corrosion will occur if the coating has been scratched or scraped for example. If you do see some, remove any loose rust and touch up with a weather resistant paint.

DON'Ts

Do not climb on the Outdoor Pet Run or its Porch. This is not only dangerous but can lead to the Run and Porch being damaged.

Do not set up the Outdoor Pet Run nor the Porch on uneven ground as this will make the Run less secure. It can also cause a tripping hazard.

Do not keep your pets in the Porch area. The Porch is designed as a security measure, not as a separate area to keep your pets. If you need to divide your existing Outdoor Pet Run into separate areas, please visit Omlet website and search for Outdoor Pet Run Partition.



Please Reuse,
Compost,
Recycle.

Omlet®



5 055358 830644 >

Copyright Omlet Ltd. 2023
Design Registered, Patent Pending
Omlet is a Registered Trademark of Hebe Studio Ltd.

820.1673_Outdoor Pet Run Porch Instruction Manual_19/06/2023