 


WALK IN RUN

 
Mk3 Assembly guide

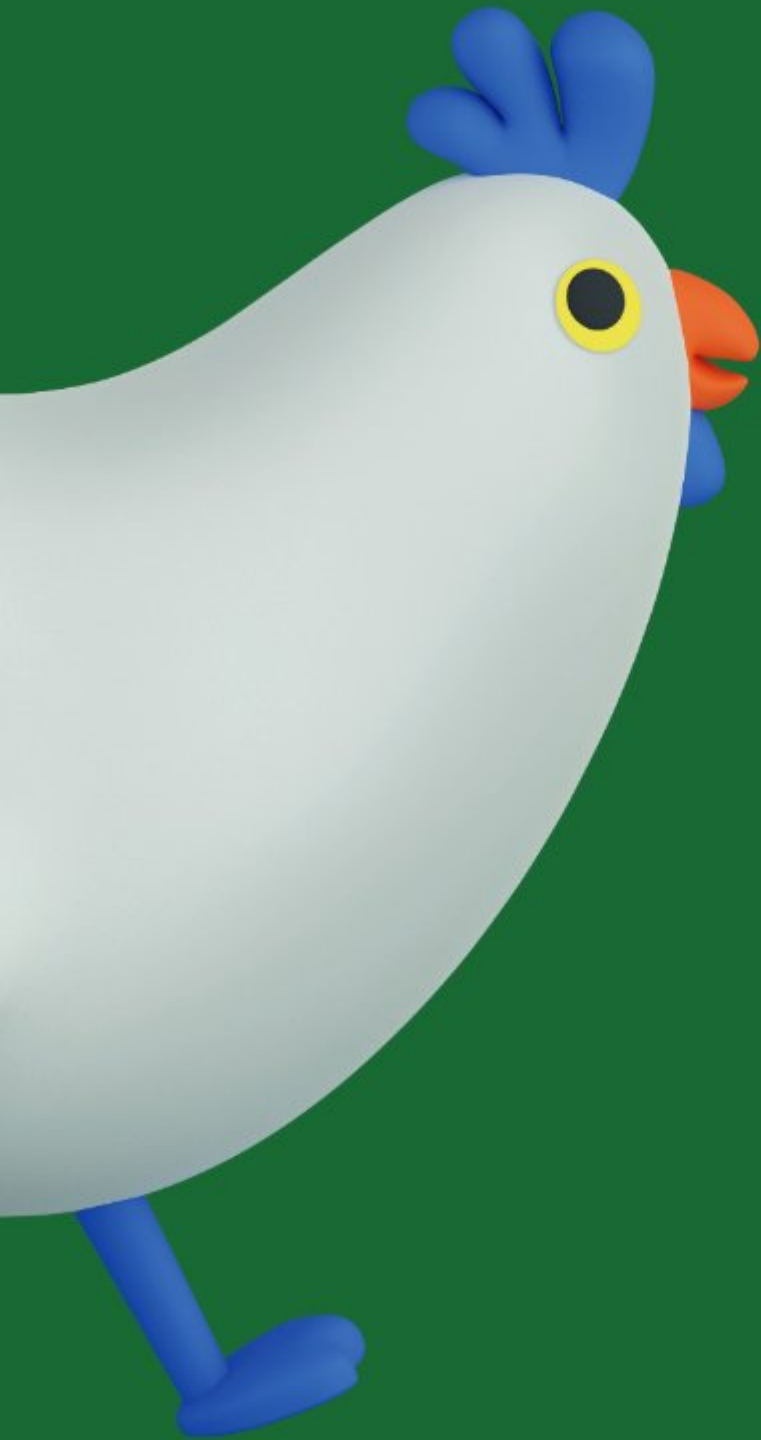

Omlet

Check your clips regularly for signs of wear and tear. Weakened clips will affect the integrity of your run, as will misplaced clips. Give your product a little TLC over time. The coating on metal components may require some maintenance; we recommend rinsing occasionally with tap water, particularly if you live near the coast, where salt can accelerate erosion. If you see rust spots, repair the area. Seek professional advice if you're not sure how to do so. To make your build as straightforward as possible, begin by checking you have all the boxes required for your run size (pages 4 and 5). Next, open all boxes and check you have all the correct parts (pages 6-7) and sort the parts by type.

Example of Outdoor Pet Run sizing

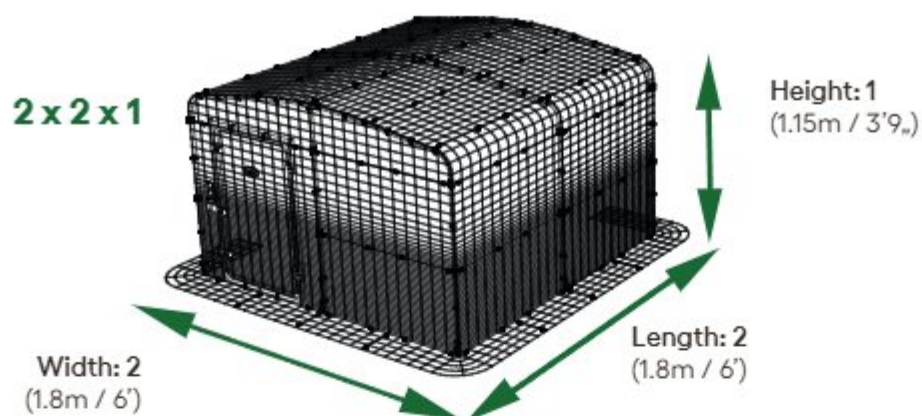

What you have received - Main Run sizes

Run Sizes				Pack Quantities															
				A Mesh	A Poles	B Door	C Mesh	C Poles	D Door	E Mesh	E Poles	F Mesh	F Poles	G Mesh	G Poles	H Pole	J Mesh	J Poles	N Pack
	2	2	1	1	1	1										1			
	2	2	2	1	1	1	1	1	1										
	2	3	2	1	1	1	1	1	1	1	1								
	3	3	2	1	1	1	1	1	1	1	1	1	1						
	3	4	2	1	1	1	1	1	1	1	1	1	1	1	1				
	4	4	2	1	1	1	1	1	1	1	1	2	2	1	1				1
	4	5	2	1	1	1	1	1	1	1	1	2	2	2	2				2

Extension Sizes				Pack Quantities															
				A Mesh	A Poles	B Door	C Mesh	C Poles	D Door	E Mesh	E Poles	F Mesh	F Poles	G Mesh	G Poles	H Pole	J Mesh	J Poles	N Pack
	2	1	1														1	1	
	2	2	1				1	1	1										
	2	1	2							1	1								
	1	3	2									1	1						
	3	1	2											1	1				
	1	4	2									1	1						1
	4	1	2											1	1				1

Part #	Part Name	A Mesh	A Poles	B Door	C Mesh	C Poles	D Door	E Mesh	E Poles	F Mesh	F Poles	G Mesh	G Poles	H Poles	J Mesh	J Poles	N Poles
EN Mesh Panels • DE Gitterelemente • FR Panneaux grillagés • NL Gaaspanelen IT Pannelli in rete • SE Nätpaneler • DK Netpaneler																	
041.0080	Run Panel Lower Assembly	7						2		2		2			2		
041.0081	Run Panel Upper Assembly				7			2		5		3					1
041.0089	Door Frame Top Hinge						1										
041.0091	Door Frame Top Bolt with Button Clip						1										
041.0130	Door Frame Bottom Hinge			1													
041.0132	Door Frame Bottom Bolt with Button Clip			1													
041.0201	Run Panel Roof Assembly	4						2				2			2		
041.0297	Door Bottom Mk3			1													
041.0298	Door Top Mk3						1										
041.1002	Run Panel Skirt	4						2		2		2			2		
041.1003	Run Panel Skirt Corner	4															
041.1004	Run Panel Gable Centre									2							
041.1005	Run Panel Gable Side	4															
041.1007	Run Panel Infill		4						2				2			2	
041.1008	Skirt Support	4						2		2		2			2		

Part #	Part Name	A Mesh Poles	A Poles	B Door	C Mesh Poles	C Poles	D Door	E Mesh Poles	E Poles	F Mesh Poles	F Poles	G Mesh Poles	G Poles	H Pole	J Mesh Poles	J Poles	N Poles	Pack
EN Tubes • DE Stangen • FR Poteaux • NL Buizen • IT Tubi • SE Rör • DK Rør																		
041.0001	Pole Support		2							4		1					1	
041.0112	Pole Stand									2		1					1	
041.0233	Door Brace													1				
041.1010	Pole Straight		8			8			4	12		7				2	3	
041.1011	Pole Corner Left		3						1			1				1		
041.1012	Pole Corner Right		3						1			1				1		
EN Other Parts • DE Andere Teile • FR Autres pièces • NL Andere onderdelen • IT Altre parti • SE Andra delar • DK Andre dele																		
041.0025	Bolt Assembly (Bagged)			1			1											
041.0026	Tube Connection Pin (Bagged)			1														
041.0230	Door Fixings			1			1											
041.0246	Hinge Fixings			1			1											
800.0103	Cable Tie		2							7		2					2	
800.0137	Omlet Badge			2			2											
810.0134	Mighty Clip C		105			32			42	42		47				34	4	
810.0135	Mighty Clip A		8						4	4		4				4		
810.0185	Mighty Clip E		103			51			40	47		45				28	4	
810.1067	Hook on Bung		8						2	2		2				2		

Why read when you can watch? Here's our 'How to Build' video.

www.omlet.us/shop/chicken_keeping/walk_in_chicken_run/support/



You will need...



Do not use a power drill to tighten screws.



Tip: Warm your clips in warm water to make them easier to use

 
 
 
 
 
 
How to attach **Mighty Clips A (810.0135)** and **Mighty Clips C (810.0134)**

 


How to attach **Mighty Clip E (810.0185)**




If the Outdoor Pet Run you're building is bigger than 4x5x2, please check the extension examples on the next two pages, and use those along with the information here. The assembly principles are the same for all size runs.

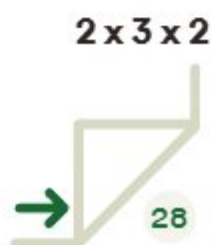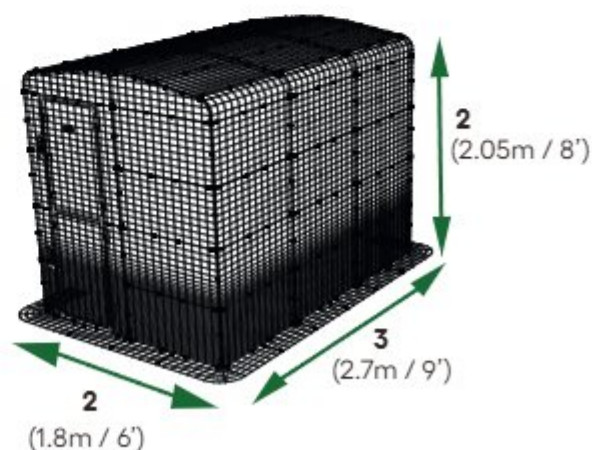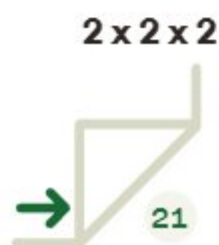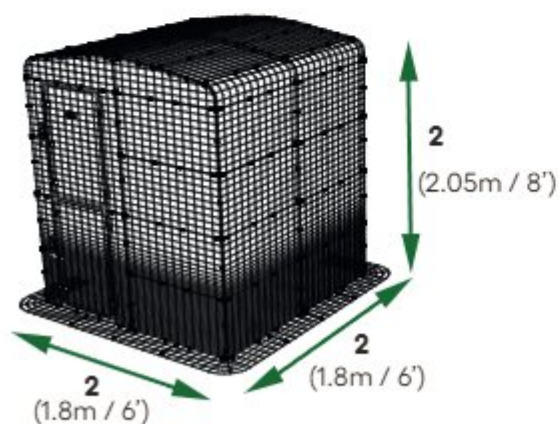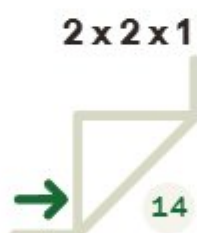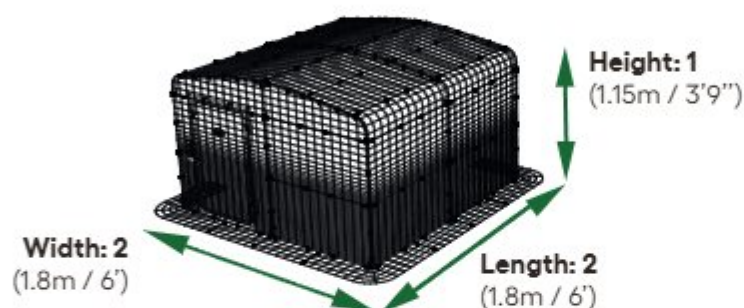


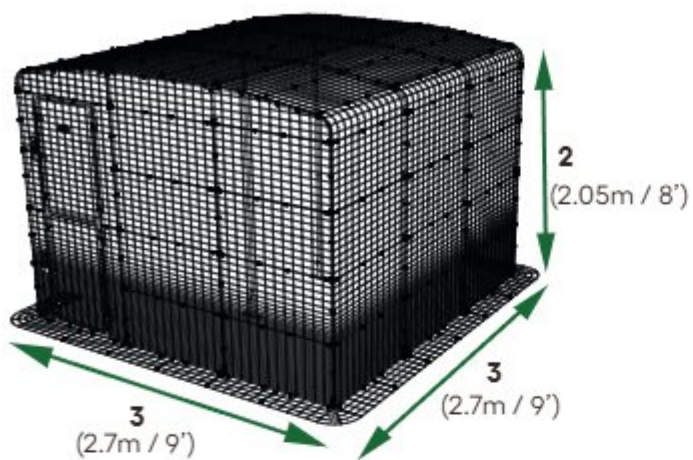


3 x 3 x 2

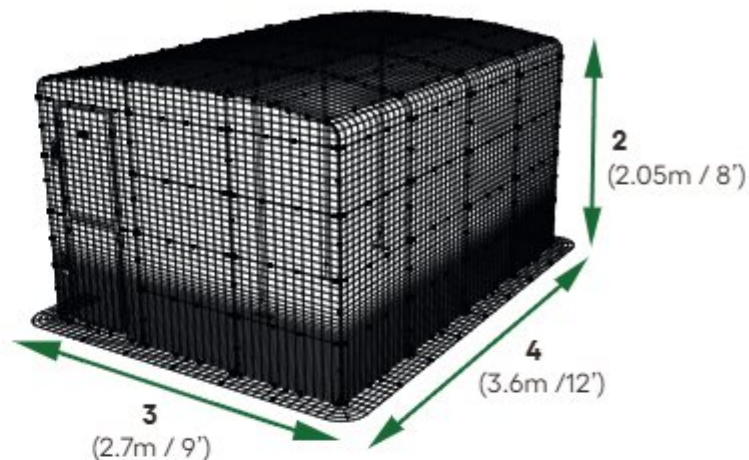 

3 x 4 x 2

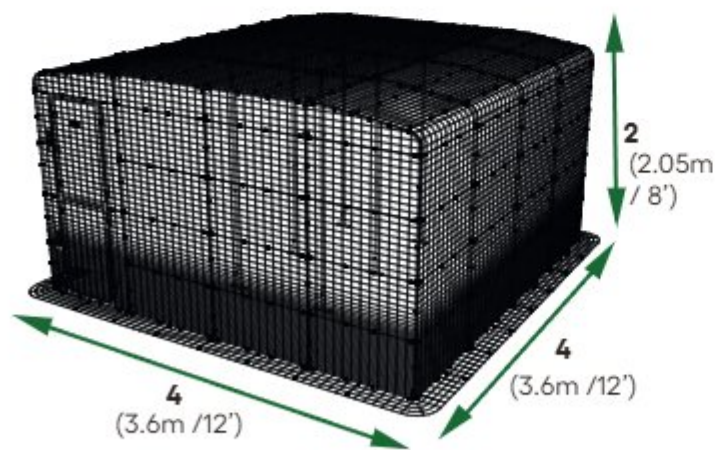 


4 x 4 x 2

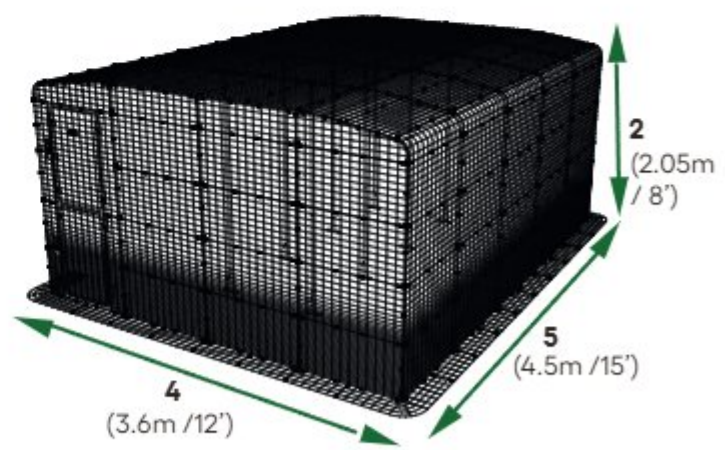 

4 x 5 x 2




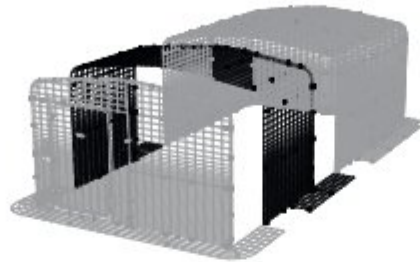 

2 x 1 x 1 Extension




 2 x 2 x 1 Extension

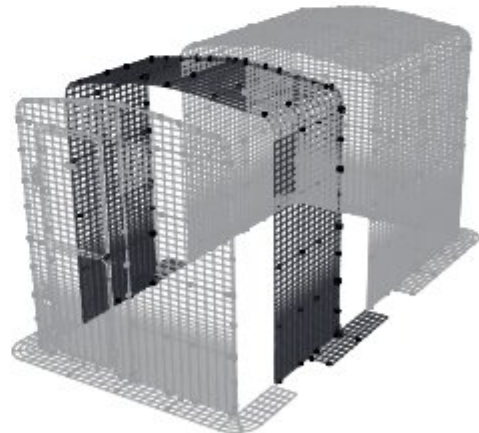


2 x 1 x 2 Extension




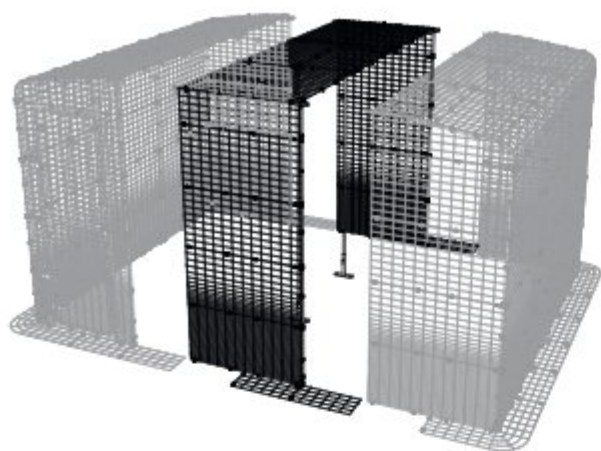 


1 x 3 x 2 Extension

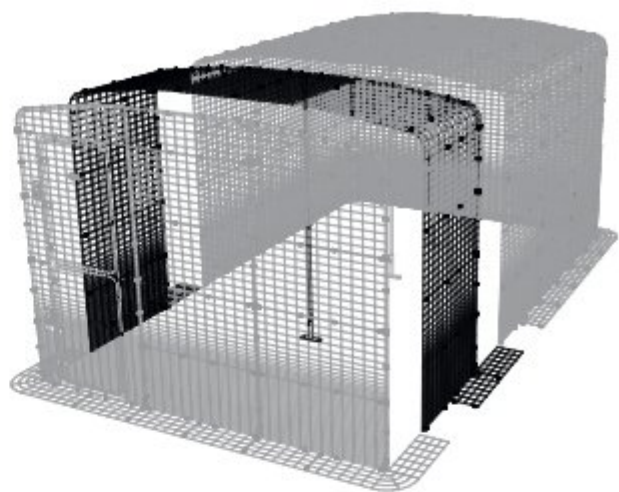 

3 x 1 x 2 Extension

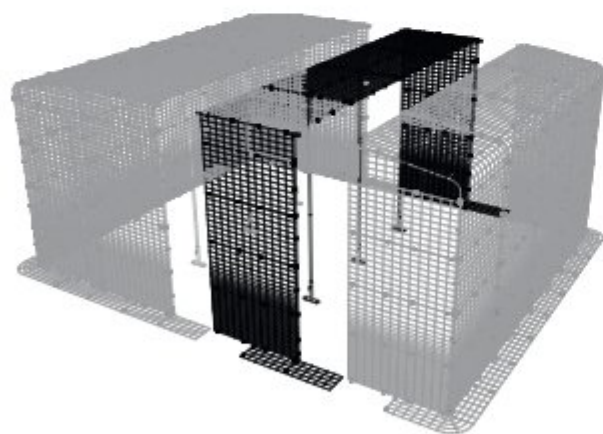 






1 x 4 x 2 Extension

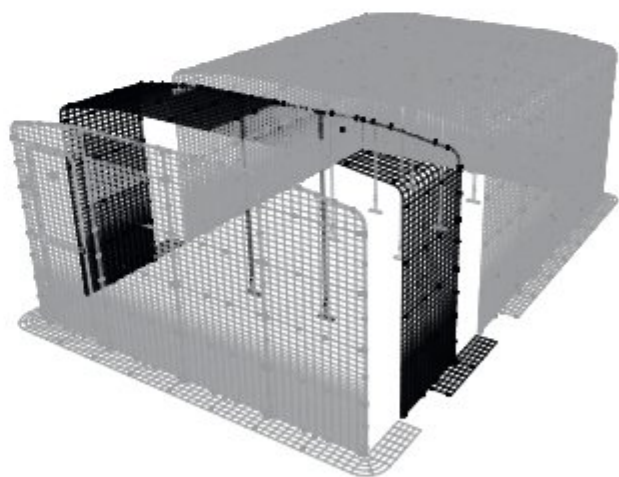 

4 x 1 x 2 Extension



     Diagram showing all Mighty Clip (810.0135, 810.0134, 810.0185) positions

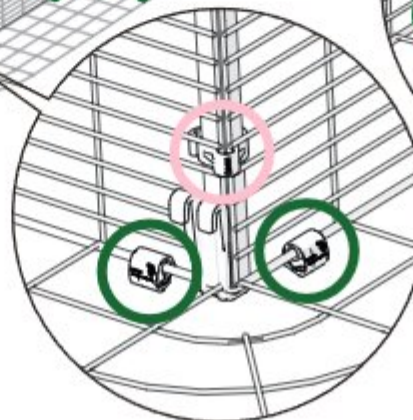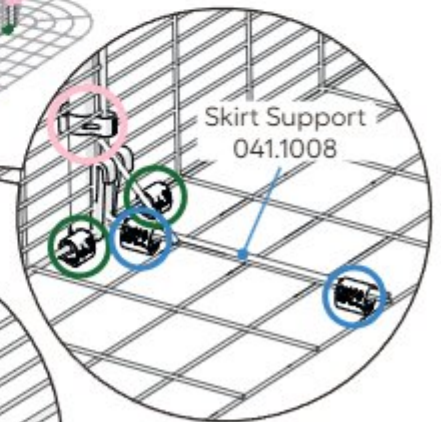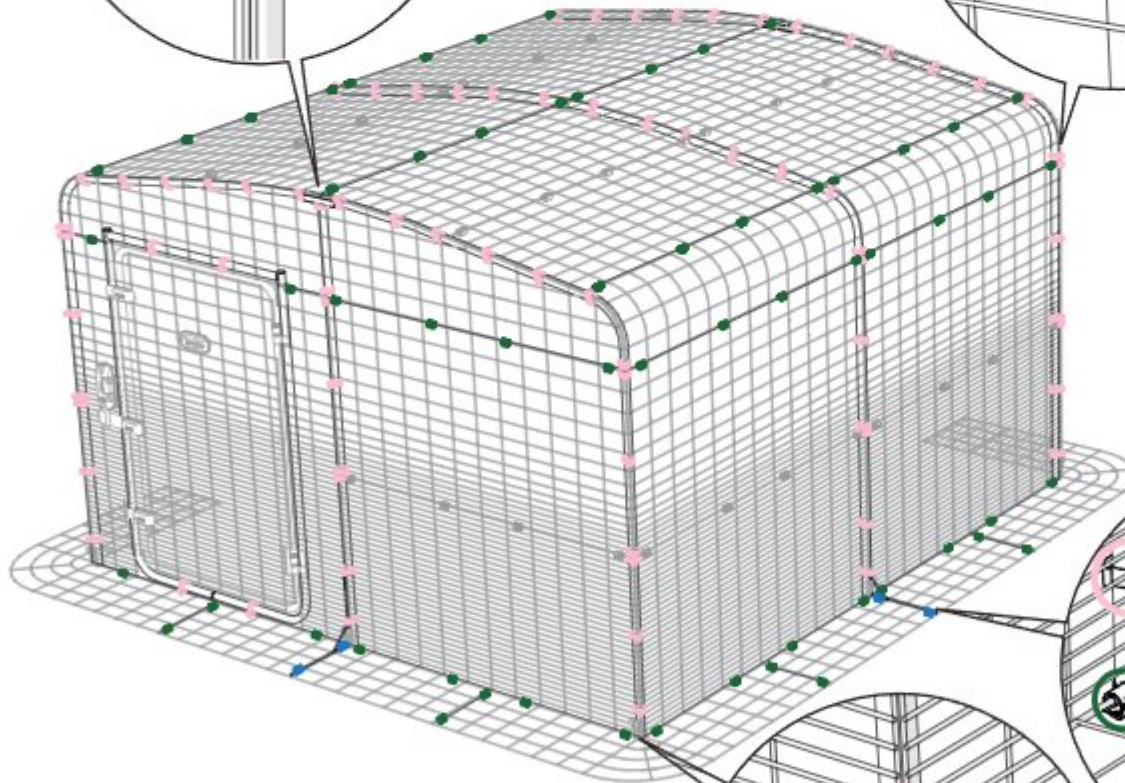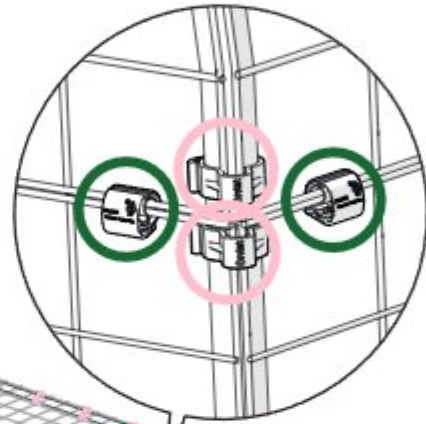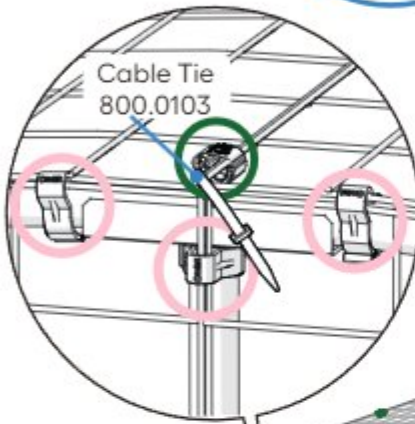


See page 09 for how to use clips and page 84 for how to assemble door. (Attach doors once run is complete.)

Pack Contents


2 x 2 x 1

 041.0310 A Mesh

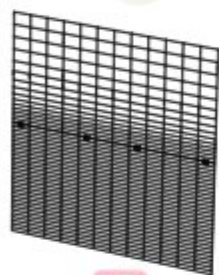

x7

 Run Panel Lower Assembly
041.0280

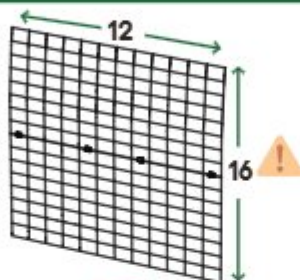

x4

Run Panel Roof Assembly
041.0201



x4

Run Panel Skirt
Corner
041.1003

041.0232 H Pole



x1

Door Brace
041.0233

041.0301 A Pole



 
x2

Pole Support
041.0001




x4

Run Panel Skirt
041.1002

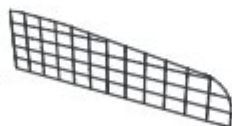

x4

 Run Panel Gable
Side
041.1005

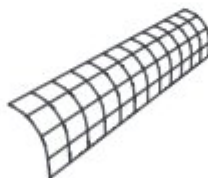

x4

Run Panel Infill
041.1007



x4

Skirt Support
041.1008



x8

Pole Straight
041.1010



x3

Pole Corner Left
041.1011



x3

Pole Corner Right
041.1012



x2

Cable Tie
800.0103



x8

Mighty Clip A
810.0135



x105

Mighty Clip C
810.0134



x103

Mighty Clip E
810.0185



x8

Hook On Bung
810.1067



x1

Door Frame
Bottom Hinge
MK3
041.0330



x1

Door Frame
Bottom Bolt With
Button Clip MK3
041.0332



x1

Door Bottom
MK3
041.0397

041.0230: Door Fixings Pack



x1

Door Catch
MK2 with sleeve
041.0096



x2

Door Stop
MK3
041.1244



x3

Door Catch Cap
MK2
041.1118



x12

Screw
3.5 x 12mm
800.0002

041.0026: Tube Connection Fixings Pack



x2

Tube Connection
Pin
041.1043

041.0025: Bolt Assembly Fixings Pack



x1

Bolt Assembly
041.0024



x5

Screw
3.5 x 12mm
800.0002

041.0246: Hinge Fixings Pack



x4

Hinge Cap
041.1045



x2

 
Hinge Pin
041.1046

810.0138: Bagged Omlet Badge



x2

Omlet Badge
810.0137

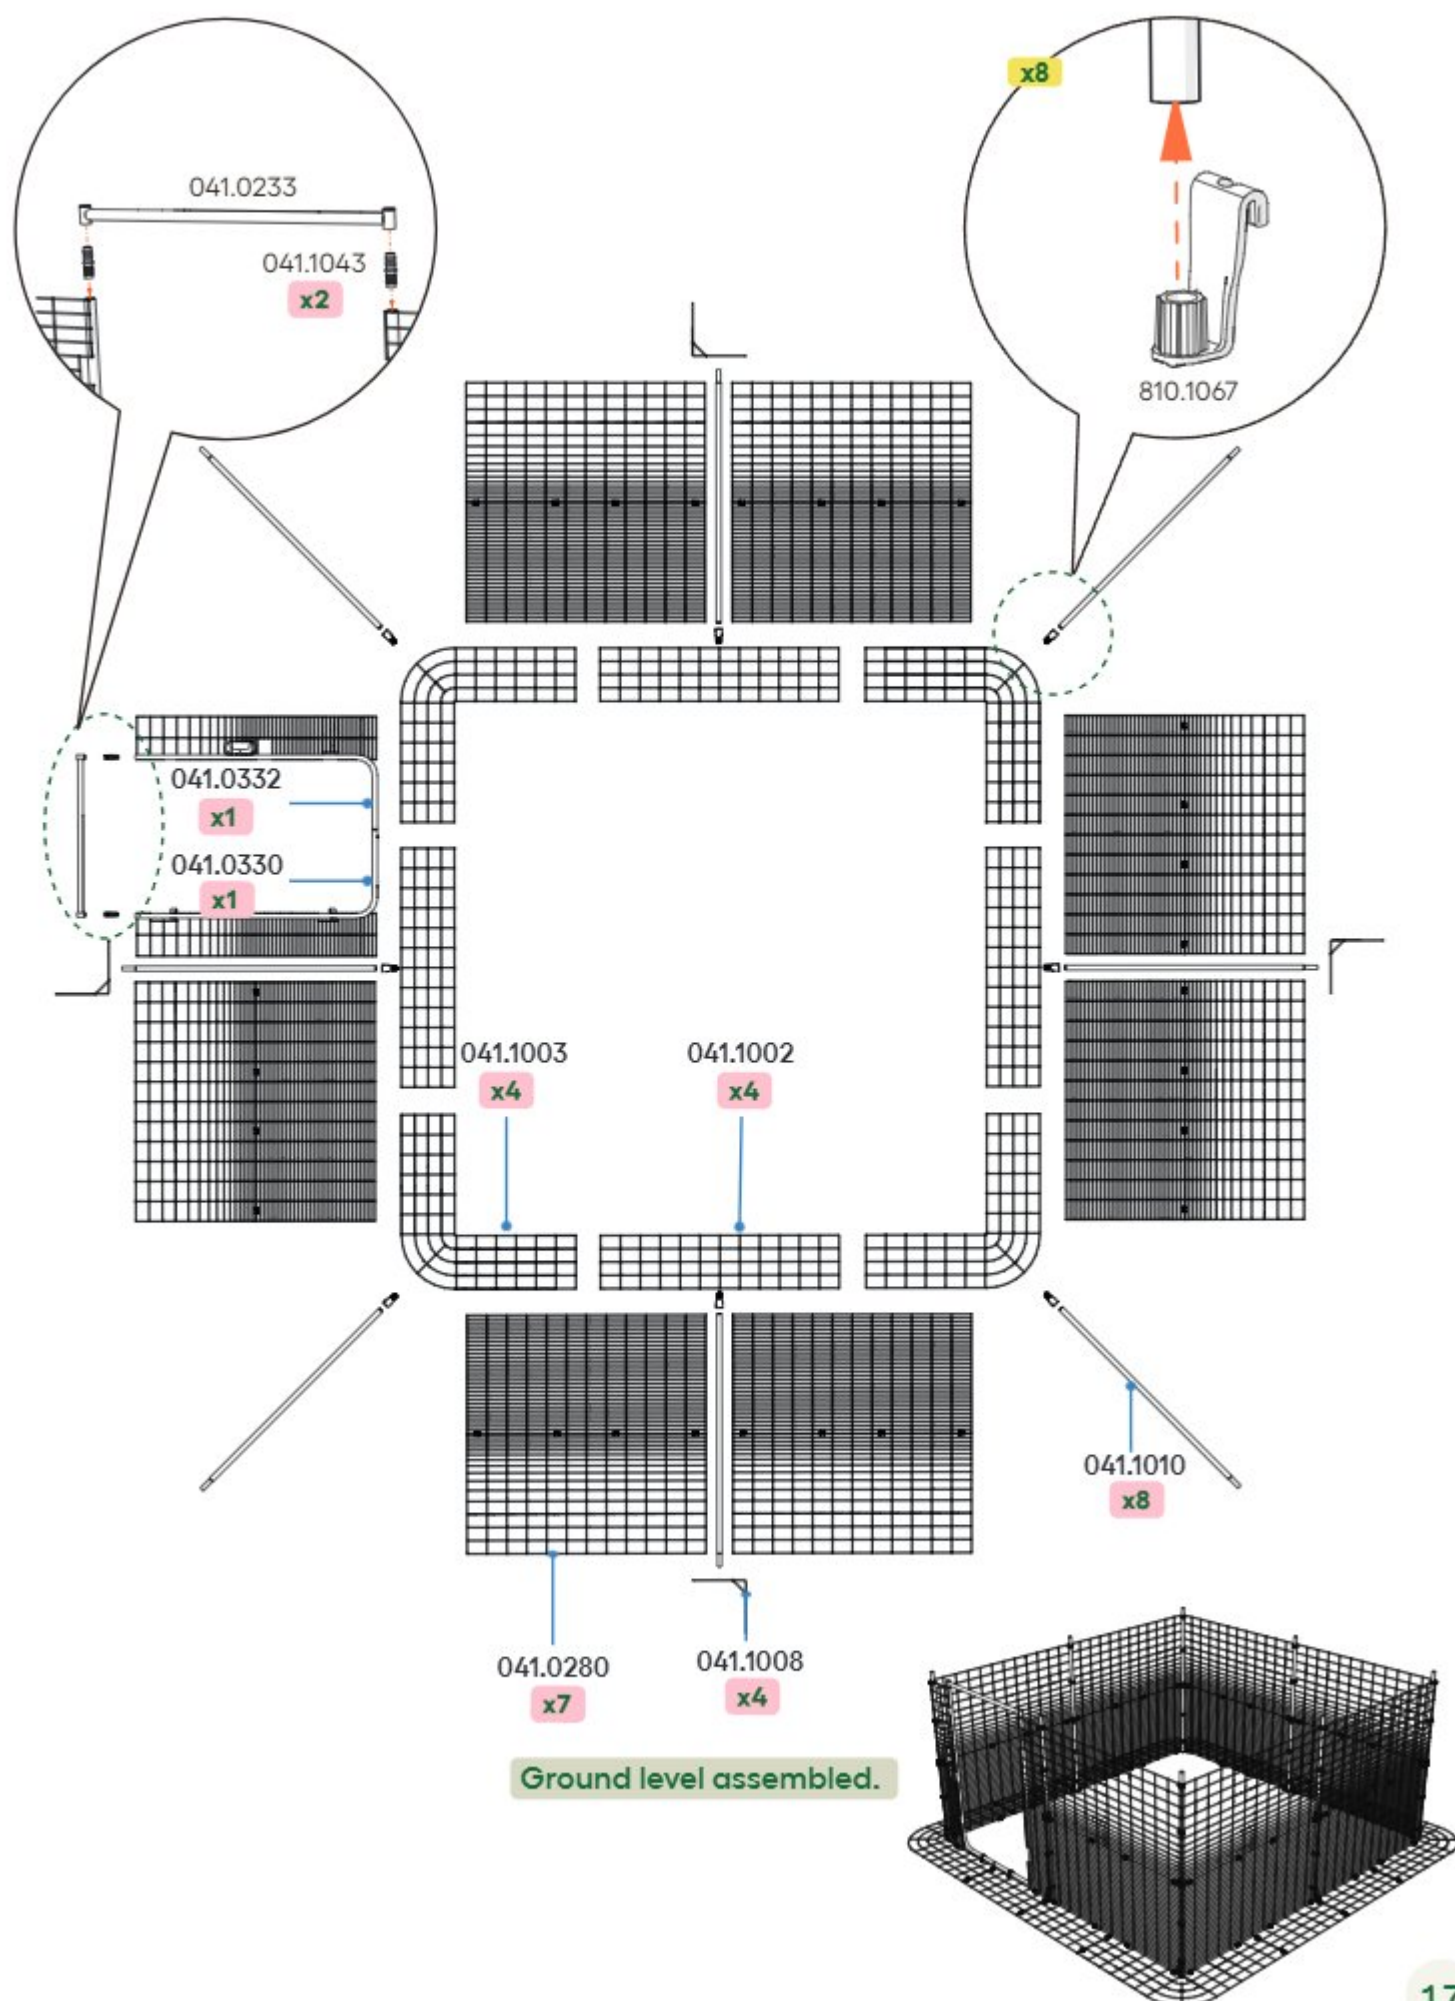


1 **EN** Lay the parts for the ground level on the floor. Clip the **skirt panels 041.1002** and **041.1003** together. See page 14 for clip types and positions.

2 **EN** Choose where you want to put the door frame. It can go in any position. Doors open outwards with lock on the left. (Attach doors once run is complete.)

3 **EN** Start at a corner and clip **Pole Straight (041.1010)** to 2 **Run Panel Lowers (041.0280)** using 6 **Mighty Clips E (810.0185)**. See page 09 for how to use clips.

4 **EN** Complete the ground level referring to the diagram on page 14 for clip types and positions.

 
5 **EN** Attach the **Door Brace (041.0233)** to the door frame using 2 **Tube Connection Pins (041.1043)**.

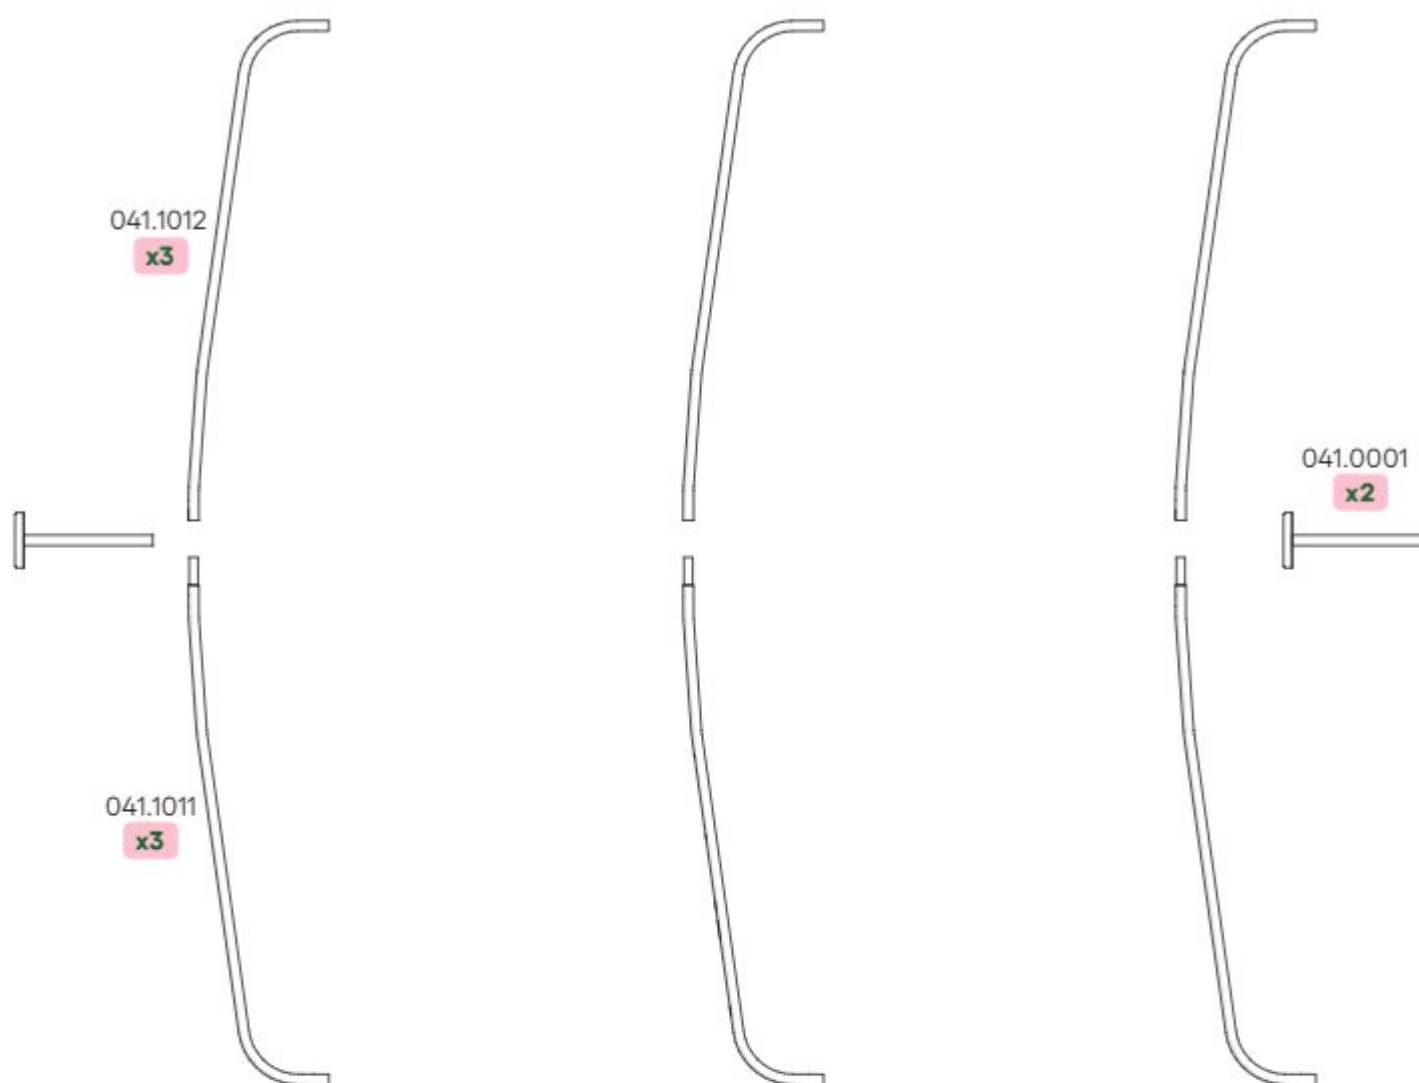

1 EN Assemble the **Roof Poles (041.1011 + 041.1012)**. They simply slide together.


2 EN Schieben Sie die soeben zusammengebauten Bögen auf die erste Ebene Ihres Outdoor Haustiergeheges.

 3 EN Slide the **Pole Supports (041.0001)** onto the **Pole Straight (041.1010)** at both ends of the run.

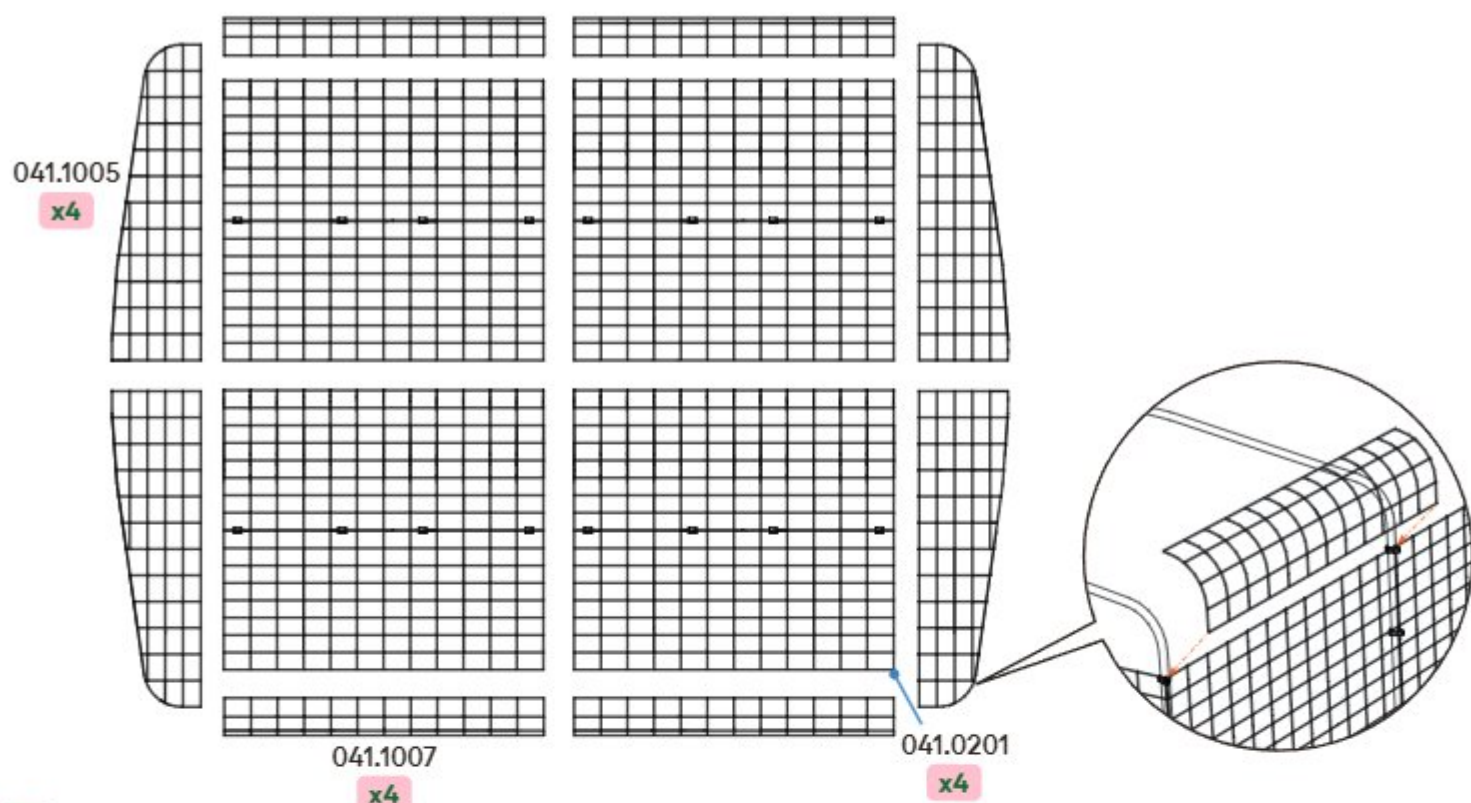


1 EN Clip Infill Panels (041.1007) and Gable Side Panels (041.1005) to level below.

 
2 EN Clip Roof Panels (041.0201).

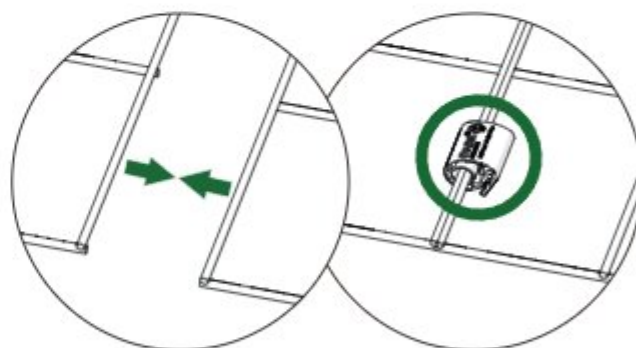

3 EN Cable tie the top of each Pole Support (041.0001) to the pole and panels above it.

  
Assemble doors.

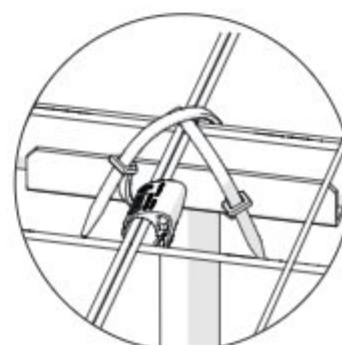

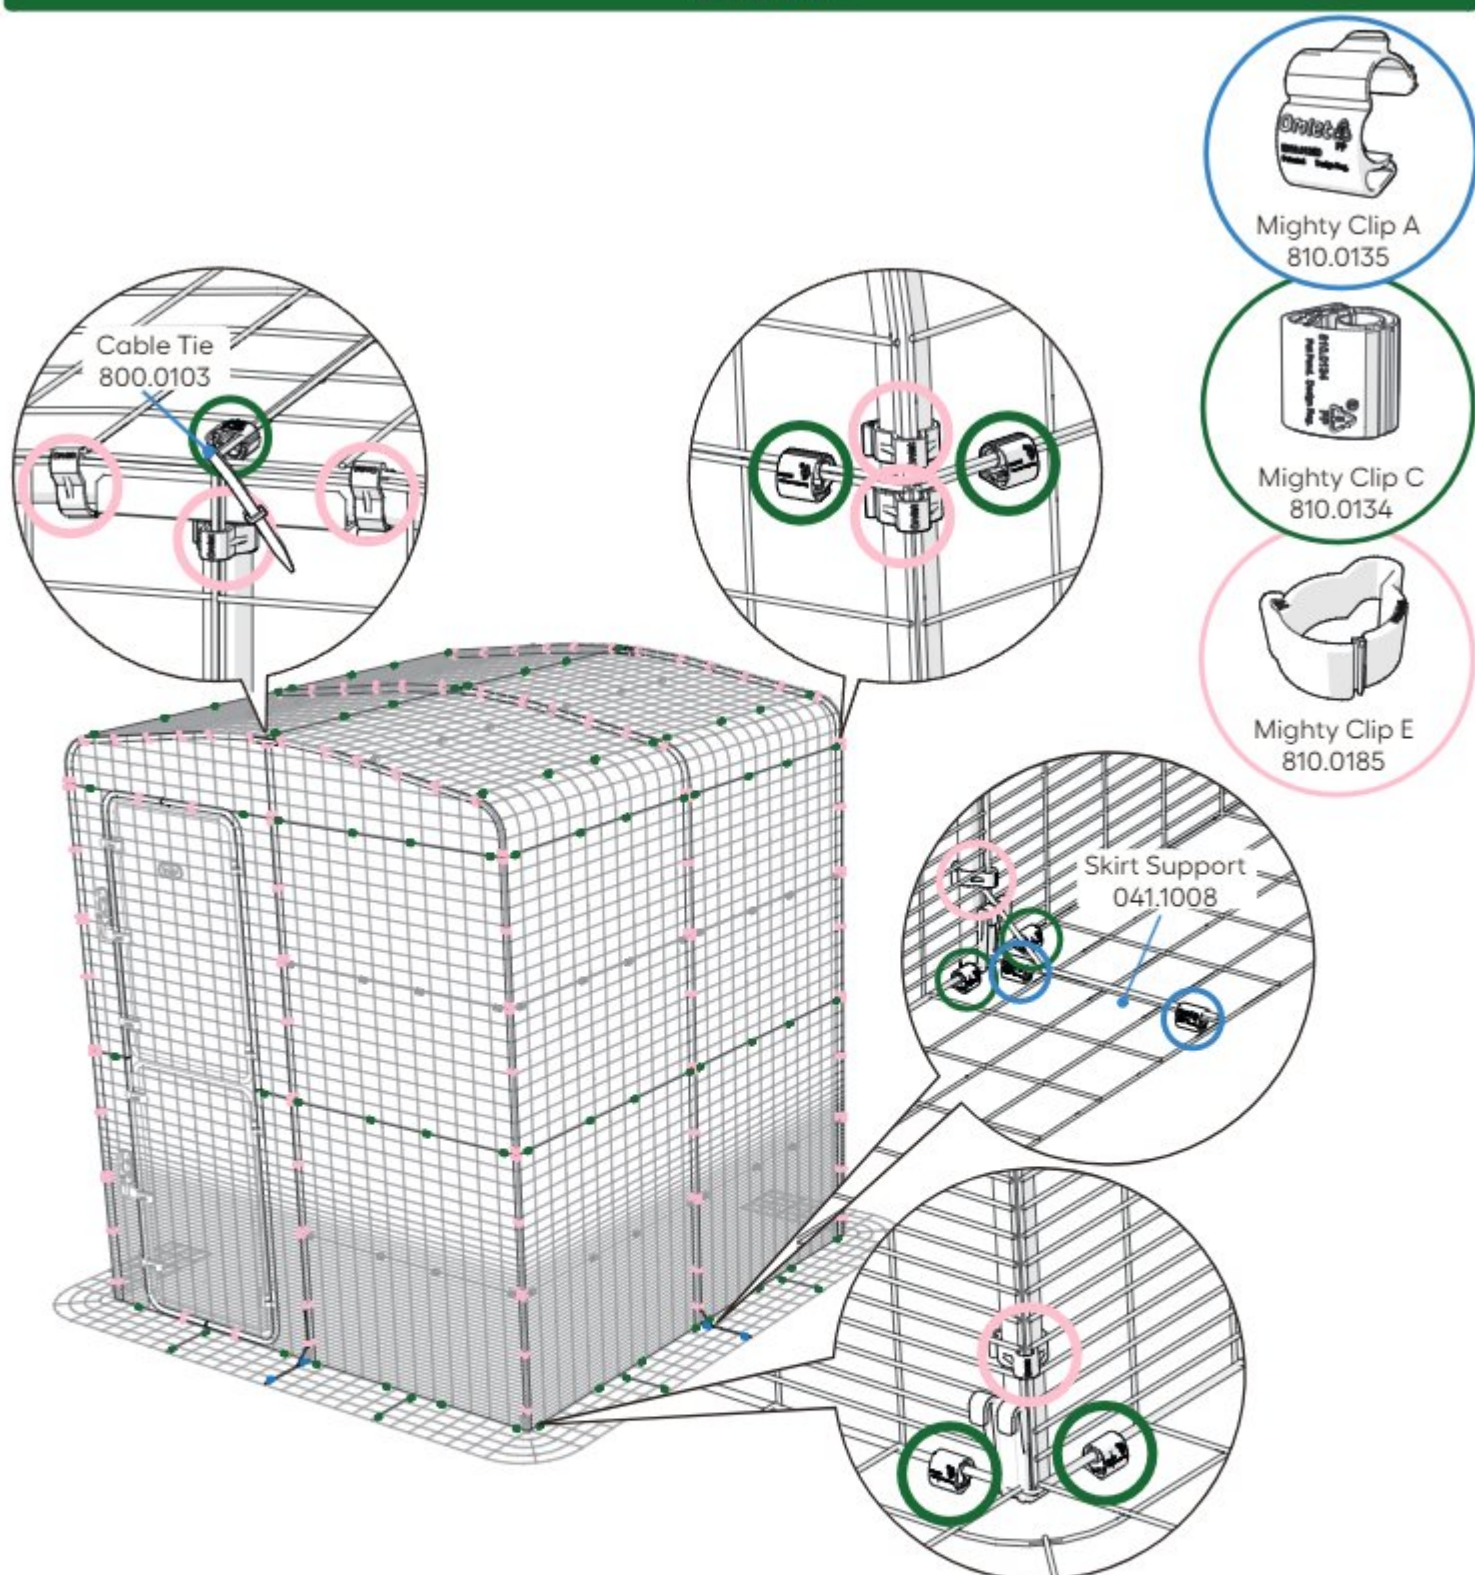


See page 09 for how to use clips and page 84 for how to assemble door. (Attach doors once run is complete.)

 
041.0310 A Mesh

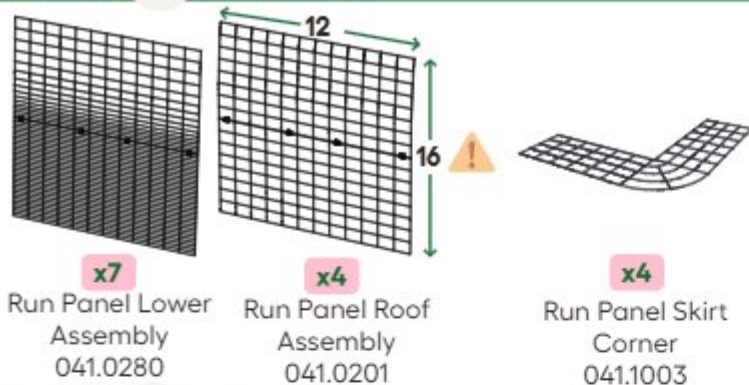

 041.0301 A Pole

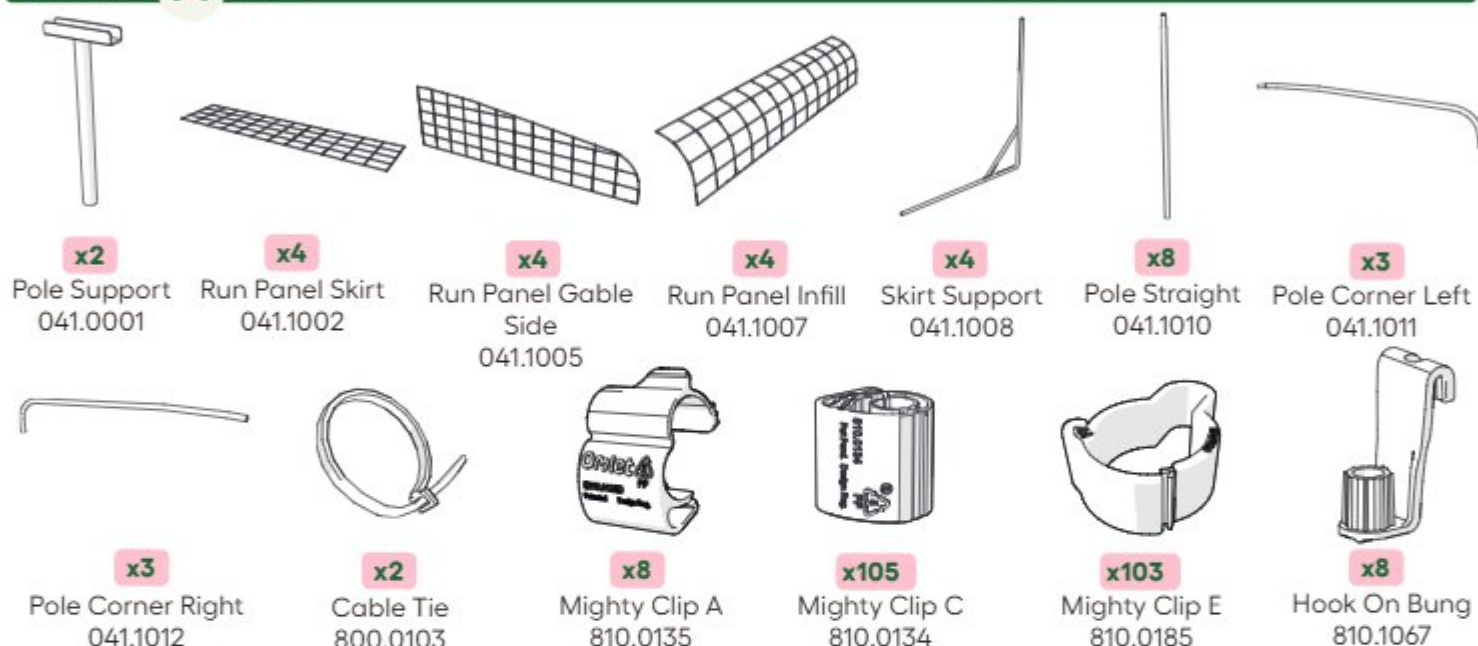

 
041.0326 B Door

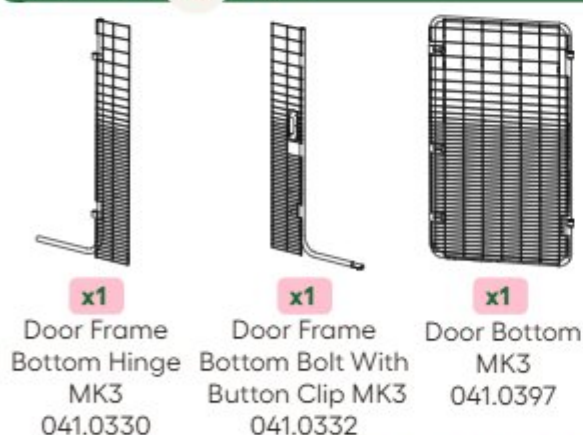

041.0230: Door Fixings Pack



 
041.0026: Tube Connection Fixings Pack

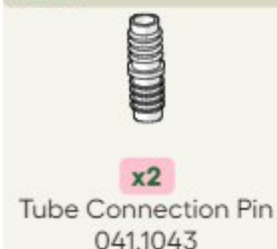

041.0025: Bolt Assembly Fixings Pack



 041.0246: Hinge Fixings Pack

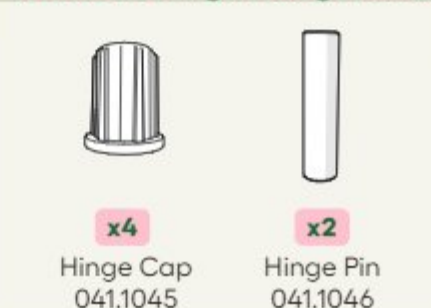


810.0138: Bagged Omlet Badge



041.0202



 Mesh

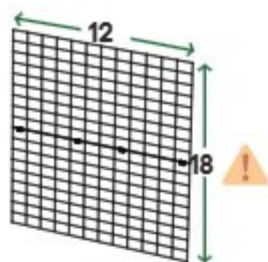

x7

Run Panel Upper
Assembly

041.0103



Poles



x8

Pole Straight
041.1010

x32

Mighty Clip C
810.0134

x51

Mighty Clip E
810.0185

041.0228



Door



x1

Door Frame
Top Hinge
MK3
041.0131

x1

Door Frame
Top Bolt With
Button Clip MK3
041.0133

 
x1

Door Top
MK3
041.0298

041.0230: Door Fixings Pack



x1

Door Catch
MK2 with sleeve
041.0096

x2

Door Stop
MK3
041.1244

x3

Door Catch Cap
MK2
041.1118

x12

Screw
3.5 x 12mm
800.0002041.0025: Bolt
Assembly Fixings Pack

x1

Bolt Assembly
041.0024

x5

Screw
3.5 x 12mm
800.0002

041.0246: Hinge Fixings Pack



x4

 
Hinge Cap
041.1045

x2

Hinge Pin
041.1046810.0138: Bagged
Omlet Badge

x2

Omlet Badge
810.0137

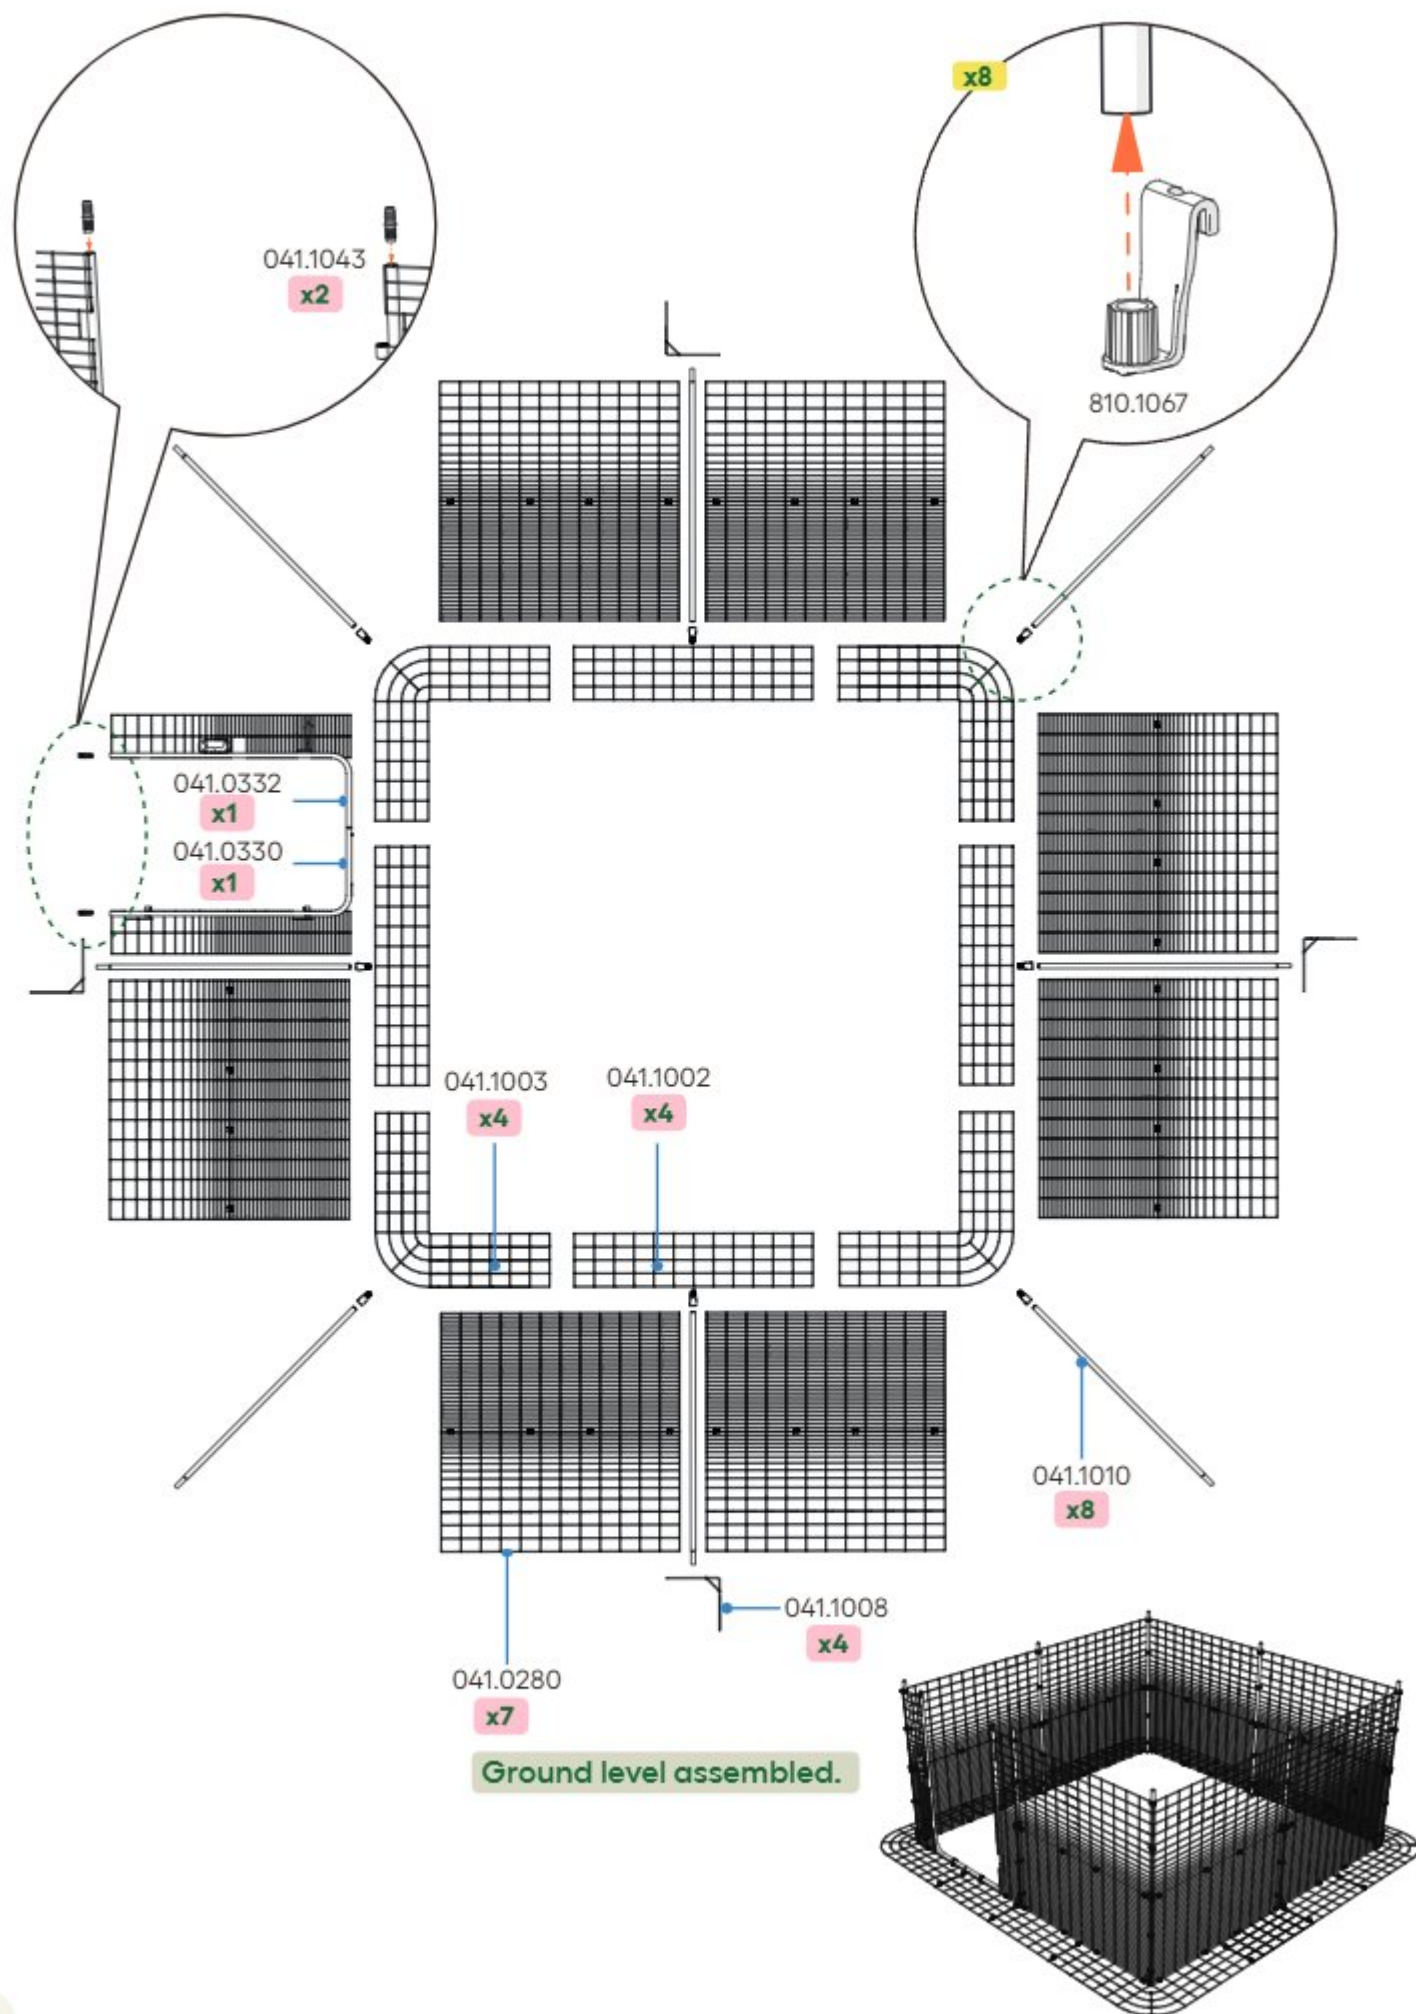


1 **EN** Lay the parts for the ground level on the floor. Clip the **skirt panels 041.1002** and **041.1003** together. See page 21 for clip types and positions.

2 **EN** Choose where you want to put the door frame. It can go in any position. Doors open outwards with lock on the left. (Attach doors once run is complete.)


3 **EN** Start at a corner and clip **Pole Straight (041.1010)** to 2 **Run Panel Lowers (041.0280)** using 6 **Mighty Clips E (810.0185)**. See page 09 for how to use clips.

4 **EN** Complete the ground level referring to the diagram on page 21 for clip types and positions.

 5 **EN** Attach 2 **Tube Connection Pins (041.1043)**.

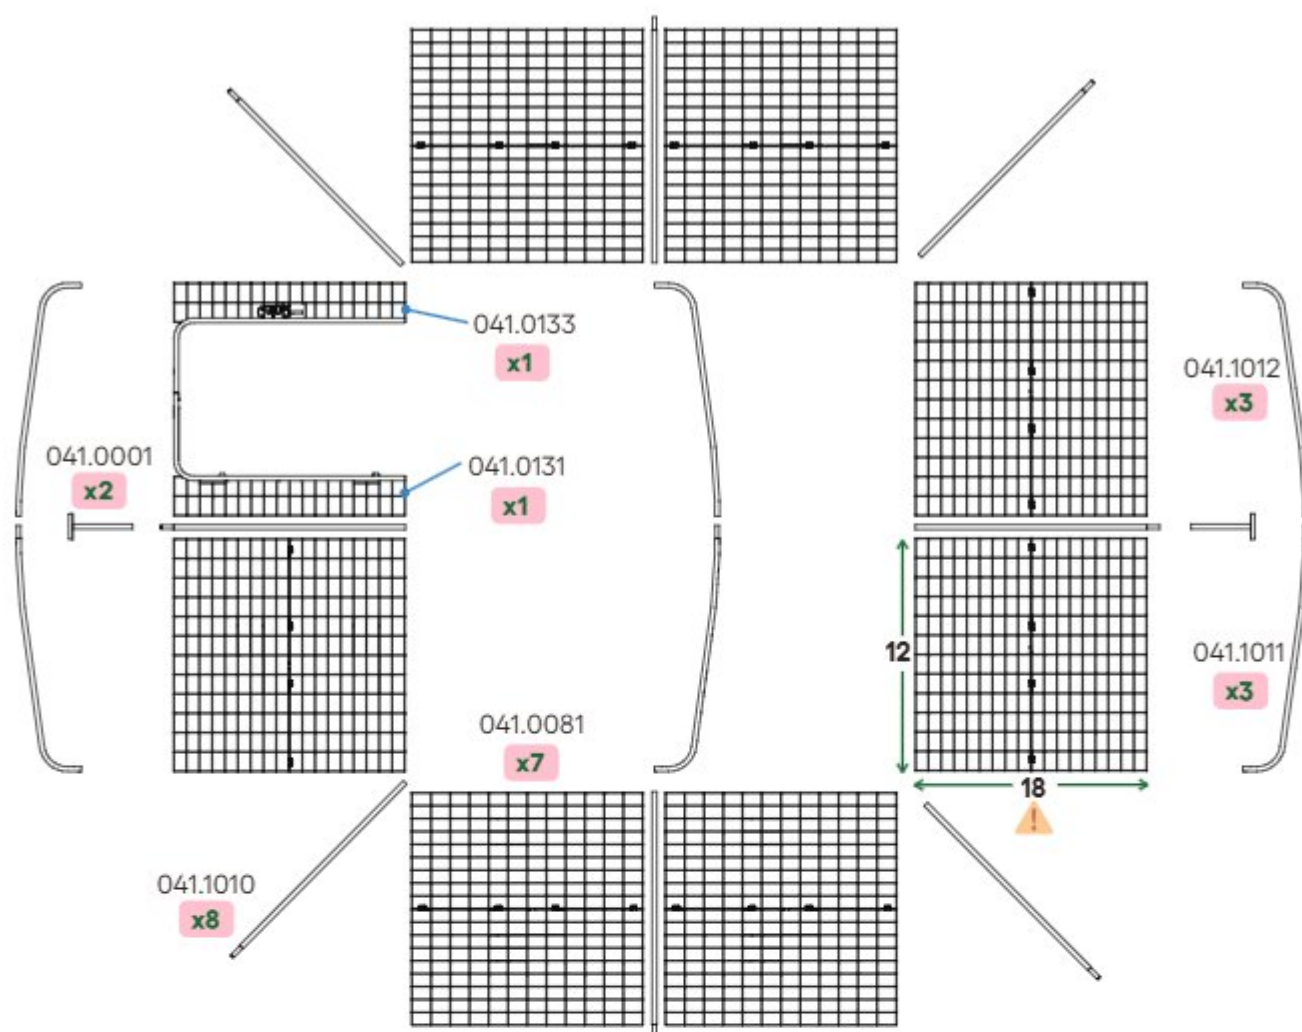


- 1 **EN** Assemble the **Roof Poles (041.1011 + 041.1012)**. They simply slide together.
- 2 **EN** Slide the arches you have just assembled, the door frame and all upright poles onto the ground level of your Outdoor Pet Run.
- 3 **EN** Slide the **Pole Supports (041.0001)** onto the **Pole Straight (041.1010)** at both ends of the run.
- 4 **EN** Complete the Mid level referring to the diagram on page 21 for clip types and positions.

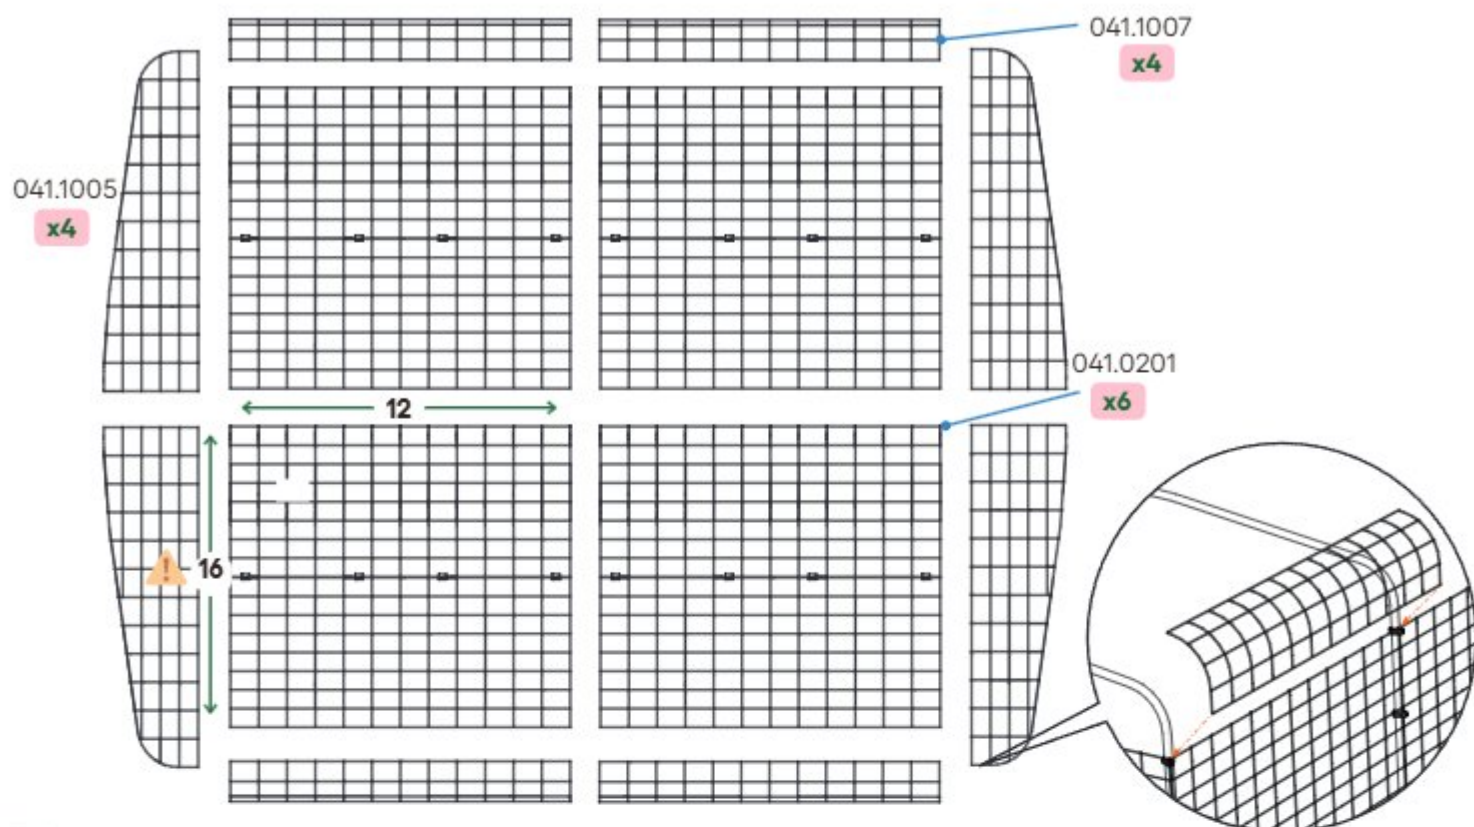 


1 EN Clip Infill Panels (041.1007) and Gable Side Panels (041.1005) to level below.

 2 EN Clip Roof Panels (041.0201).

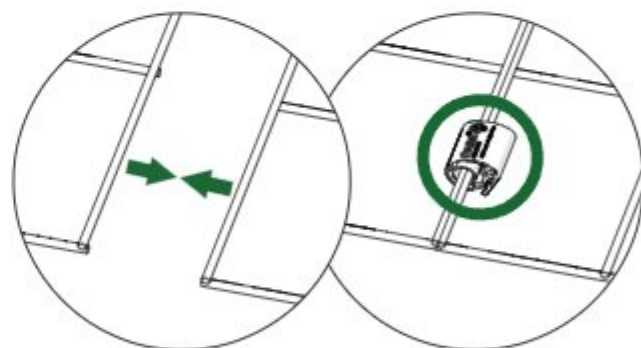


3 EN Cable tie the top of each Pole Support (041.0001) to the pole and panels above it.

 Assemble doors.

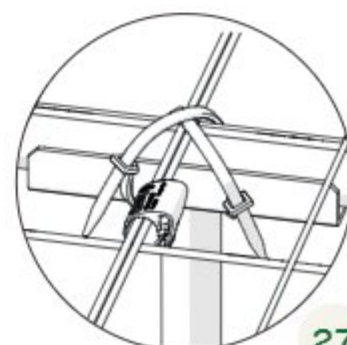


EN Diagram showing all **Mighty Clip** (810.0135, 810.0134, 810.0185) positions

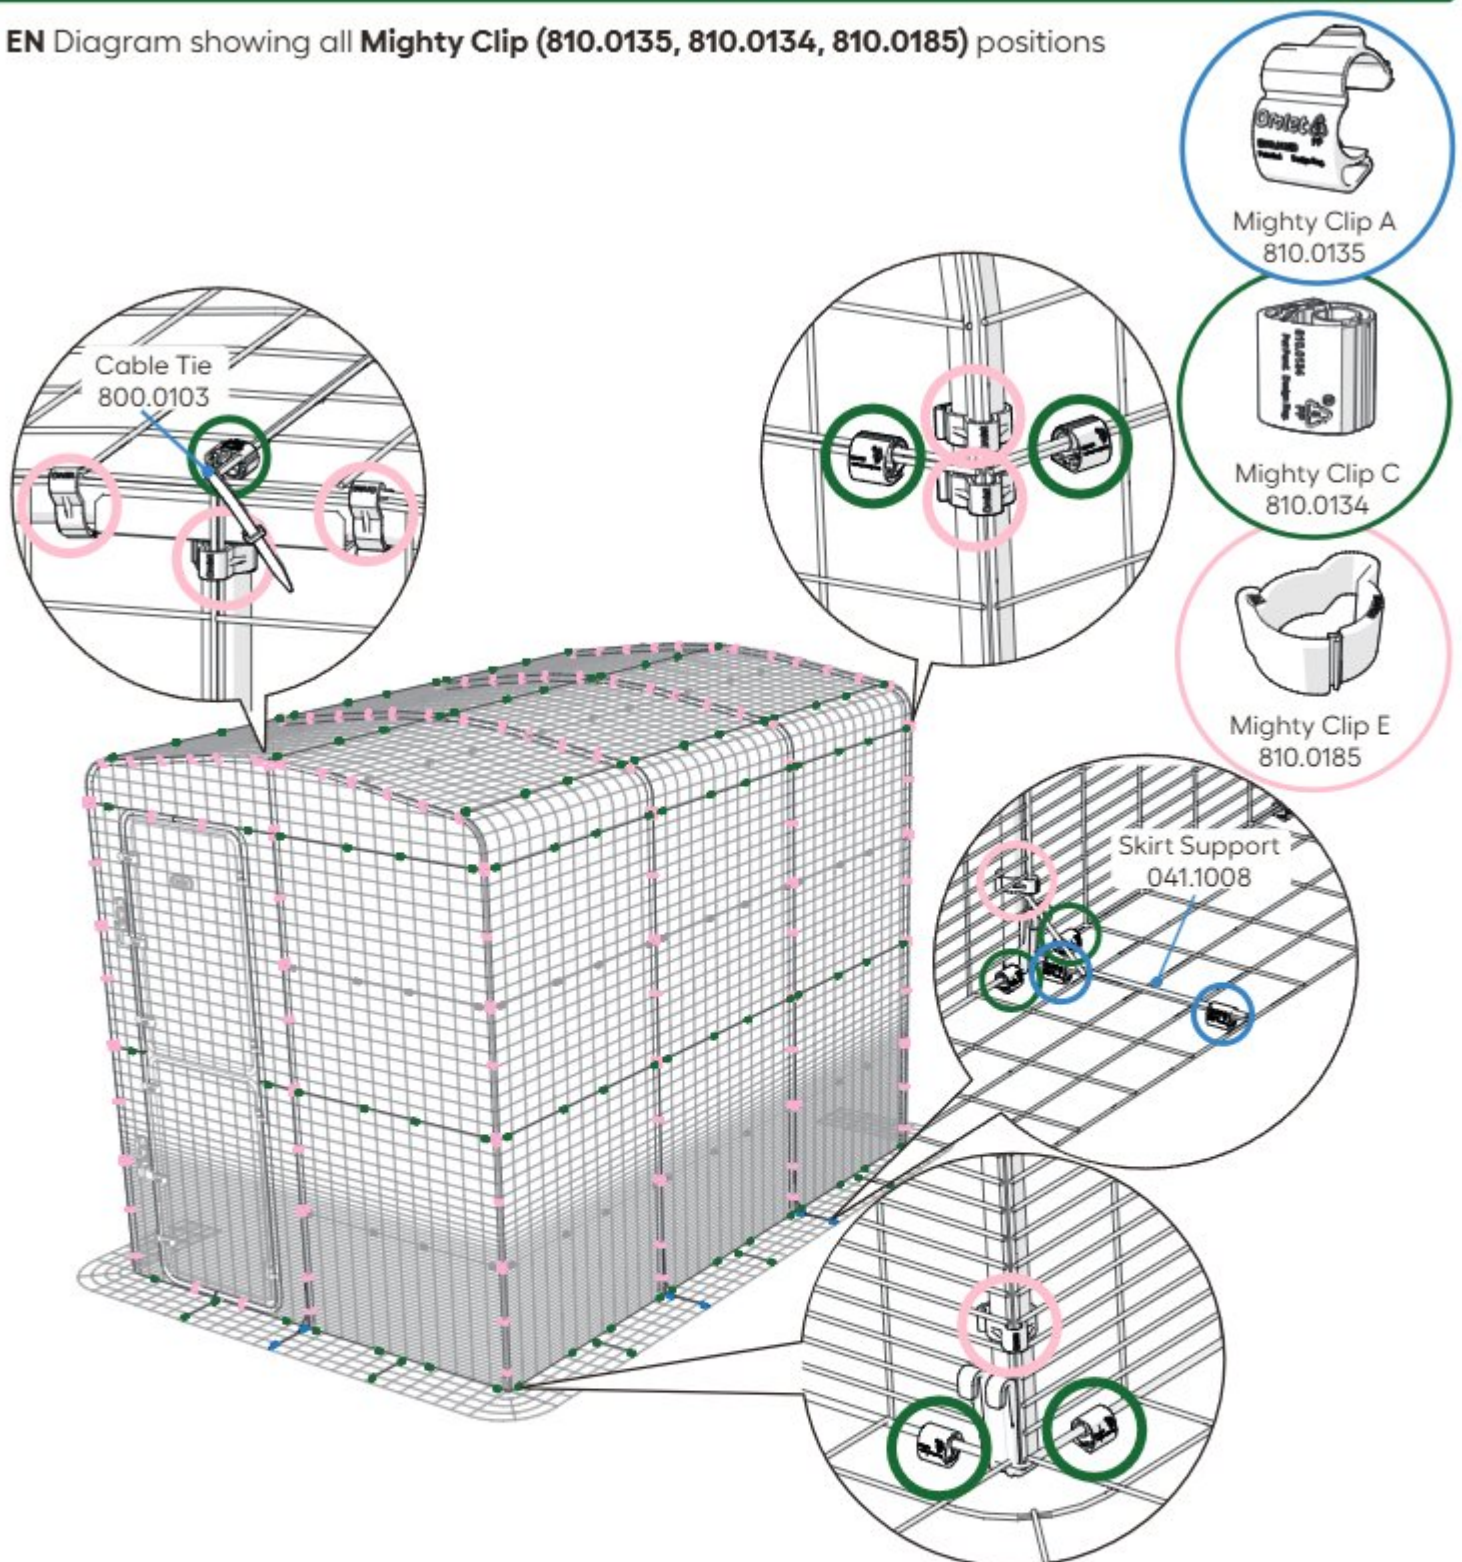 


See page 09 for how to use clips and page 84 for how to assemble door. (Attach doors once run is complete.)

 
041.0310 A Mesh

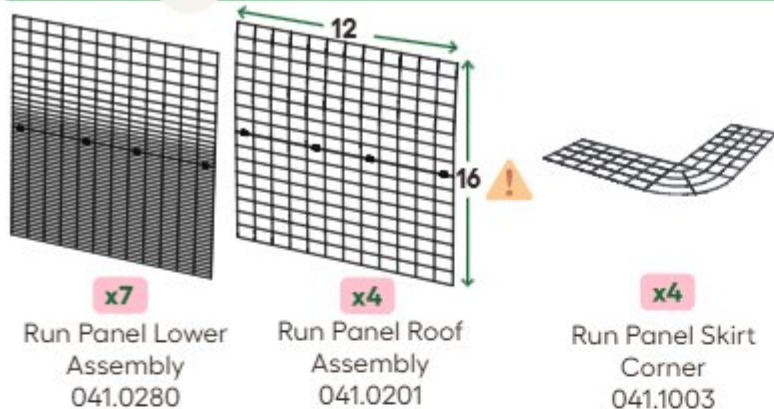

 041.0301 A Pole

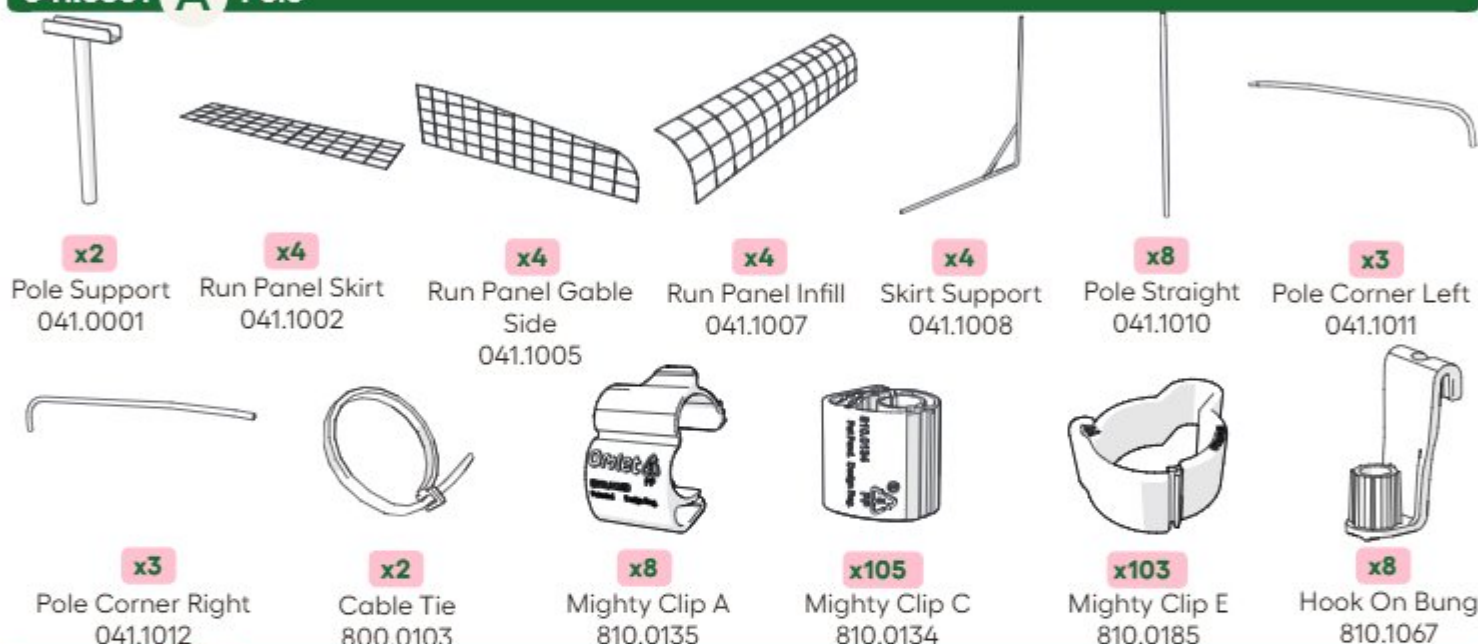

 
041.0326 B Door

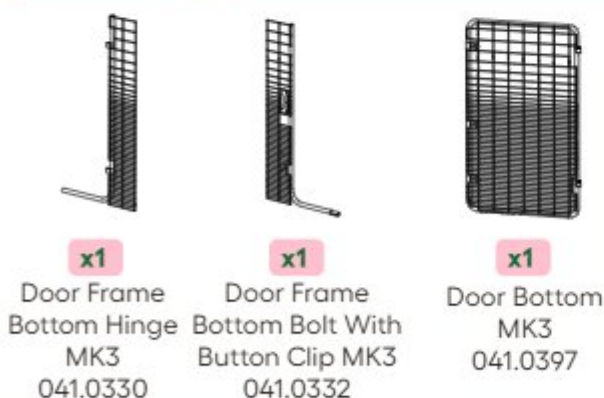

041.0230: Door Fixings Pack



 
041.0026: Tube Connection Fixings Pack

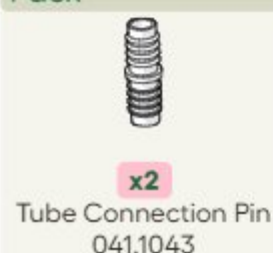

041.0025: Bolt Assembly Fixings Pack



 
041.0246: Hinge Fixings Pack

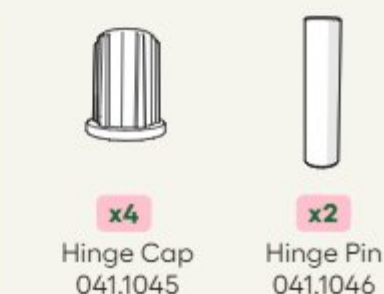

810.0138: Bagged Omlet Badge



 041.0202 C Mesh

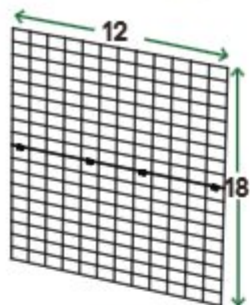

x7

Run Panel Upper Assembly
041.0081

041.0103 C Poles



x8

Pole Straight
041.1010



x32

Mighty Clip C
810.0134



x51

Mighty Clip E
810.0185

041.0228 D Door



x1

Door Frame Top Hinge
MK3
041.0131



x1

Door Frame Top Bolt With
Button Clip MK3
041.0133



x1

 
Door Top
MK3
041.0298

041.0230: Door Fixings Pack



x1

Door Catch
MK2 with sleeve
041.0096



x2

Door Stop
MK3
041.1244



x3

Door Catch Cap
MK2
041.1118



x12

Screw
3.5 x 12mm
800.0002

041.0025: Bolt Assembly Fixings Pack



x1

Bolt Assembly
041.0024



x5

Screw
3.5 x 12mm
800.0002

041.0246: Hinge Fixings Pack



x4

Hinge Cap
041.1045



x2

Hinge Pin
041.1046

 
810.0138: Bagged Omlet Badge



x2


Omlet Badge
810.0137

041.0304 E Mesh

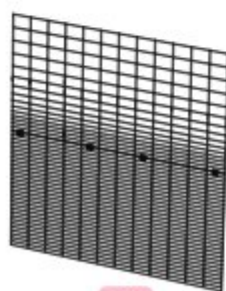


x2

 Run Panel Lower Assembly
041.0280

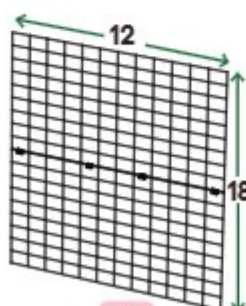

x2

 Run Panel Upper Assembly
041.0081

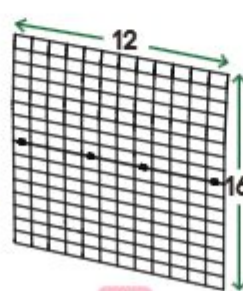

x2

Run Panel Roof Assembly
041.0201



 
x2


Run Panel Skirt
041.1002



x2

Skirt Support
041.1008

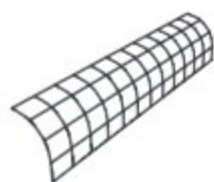 **x2**Run Panel Infill
041.1007**x4**Pole Straight
041.1010**x1**Pole Corner Left
041.1011**x1**Pole Corner Right
041.1012**x4**Mighty Clip A
810.0135**x42**Mighty Clip C
810.0134**x40**Mighty Clip E
810.0185**x2**Hook On Bung
810.1067

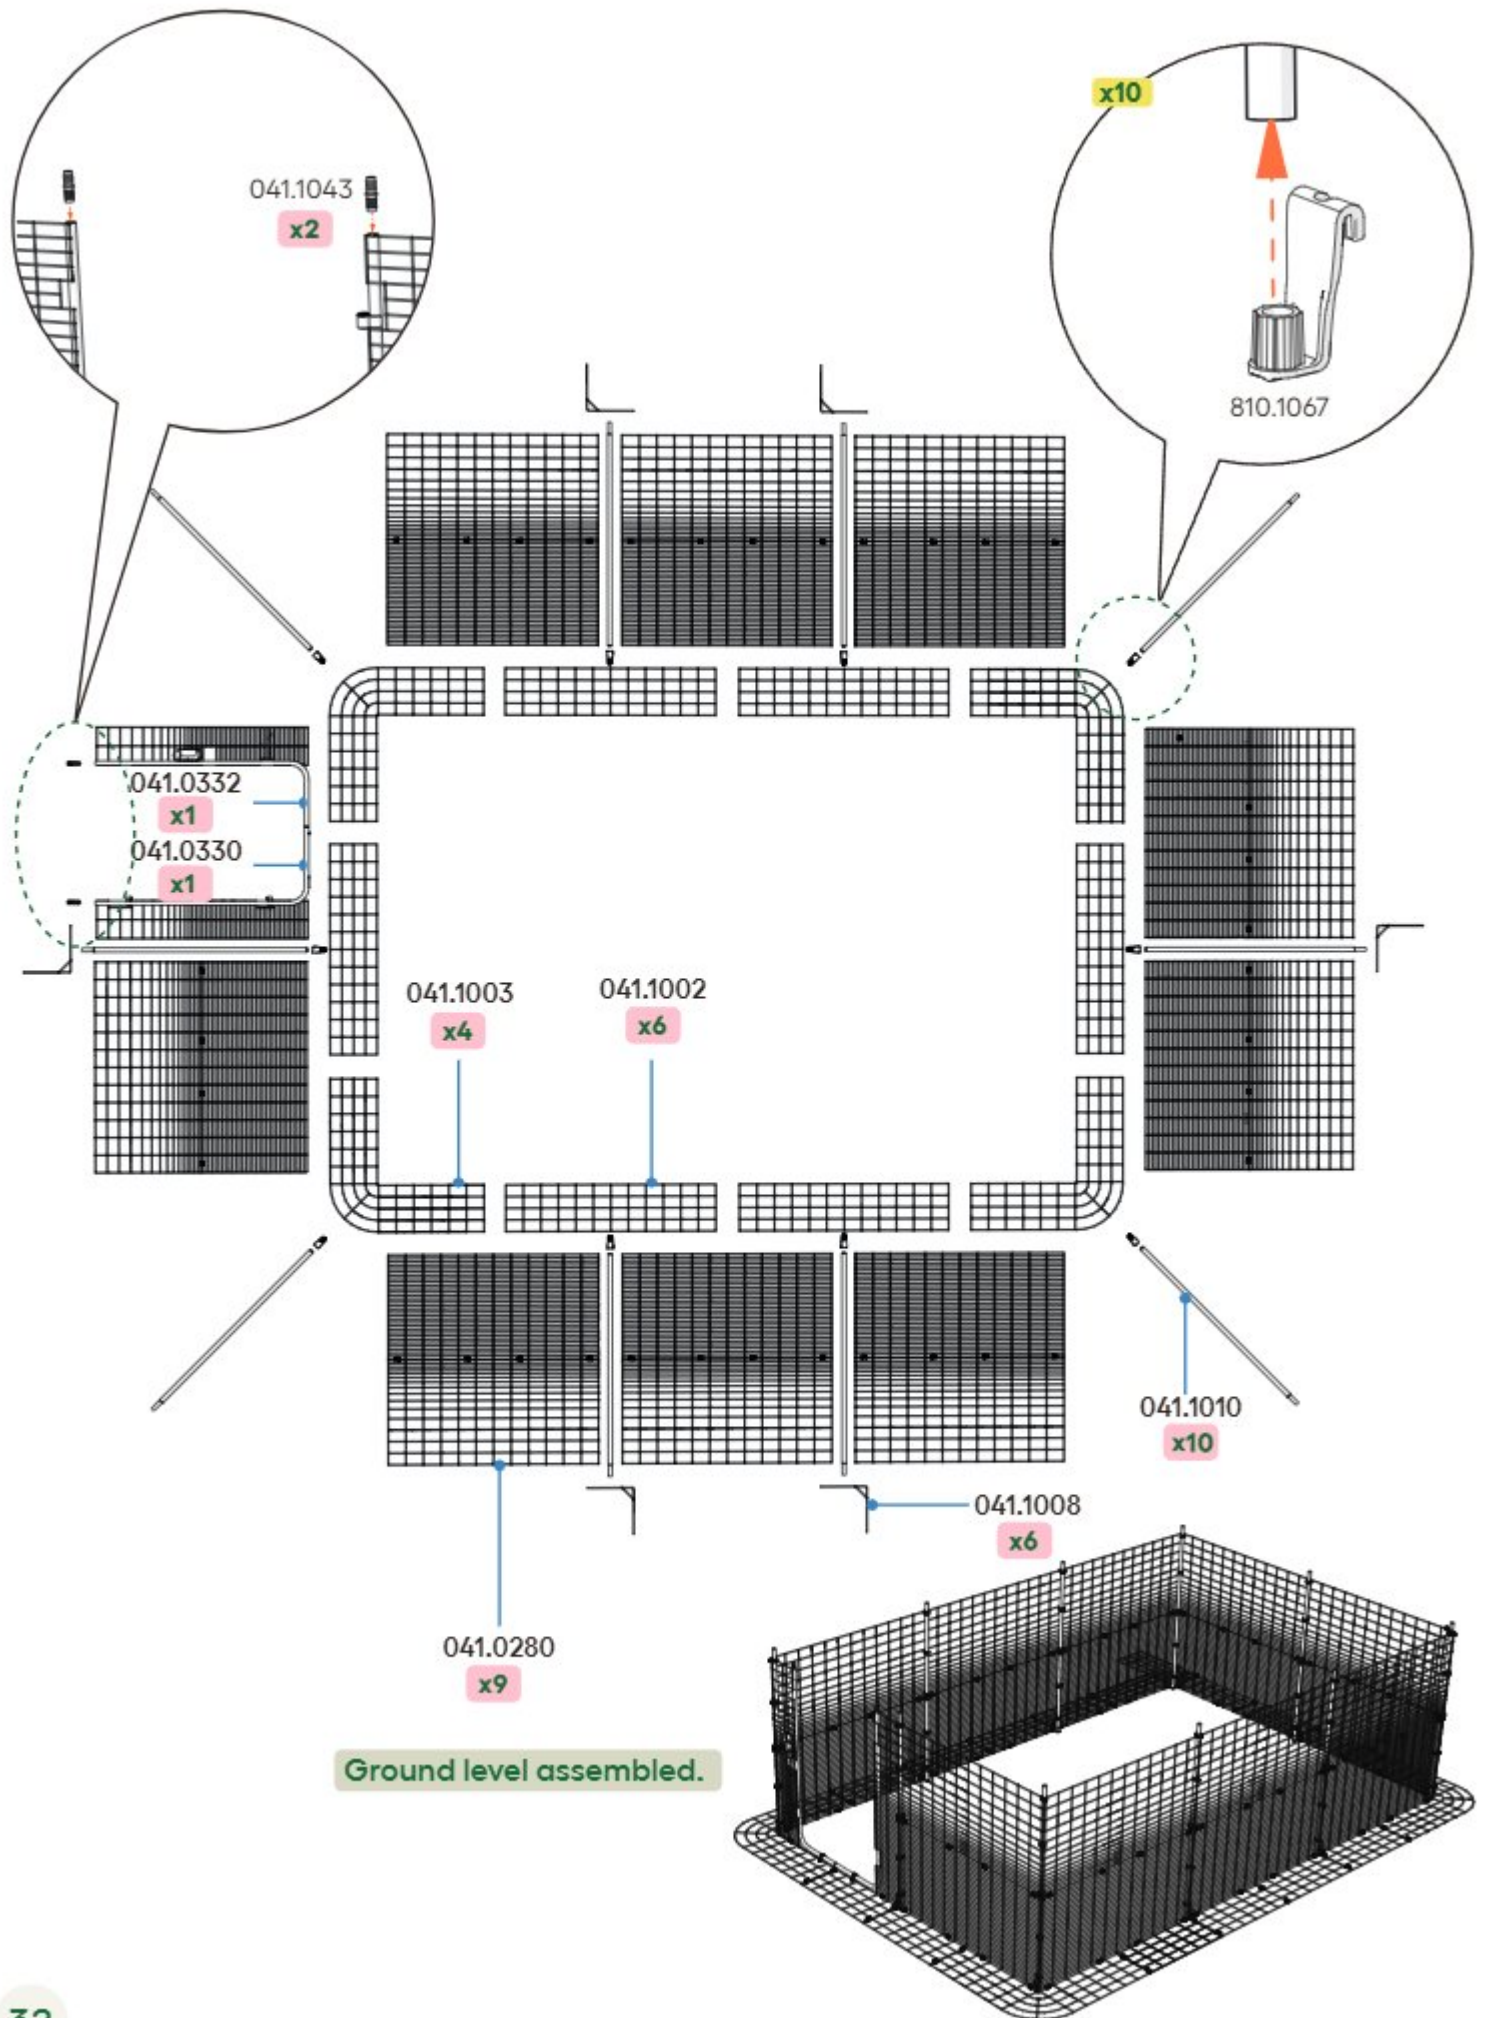


1 **EN** Lay the parts for the ground level on the floor. Clip the **skirt panels 041.1002** and **041.1003** together. See page 28 for clip types and positions.

2 **EN** Choose where you want to put the door frame. It can go in any position. Doors open outwards with lock on the left. (Attach doors once run is complete.)


3 **EN** Start at a corner and clip **Pole Straight (041.1010)** to 2 **Run Panel Lowers (041.0280)** using 6 **Mighty Clips E (810.0185)**. See page 09 for how to use clips.

4 **EN** Complete the ground level referring to the diagram on page 28 for clip types and positions.

 5 **EN** Attach 2 **Tube Connection Pins (041.1043)**.

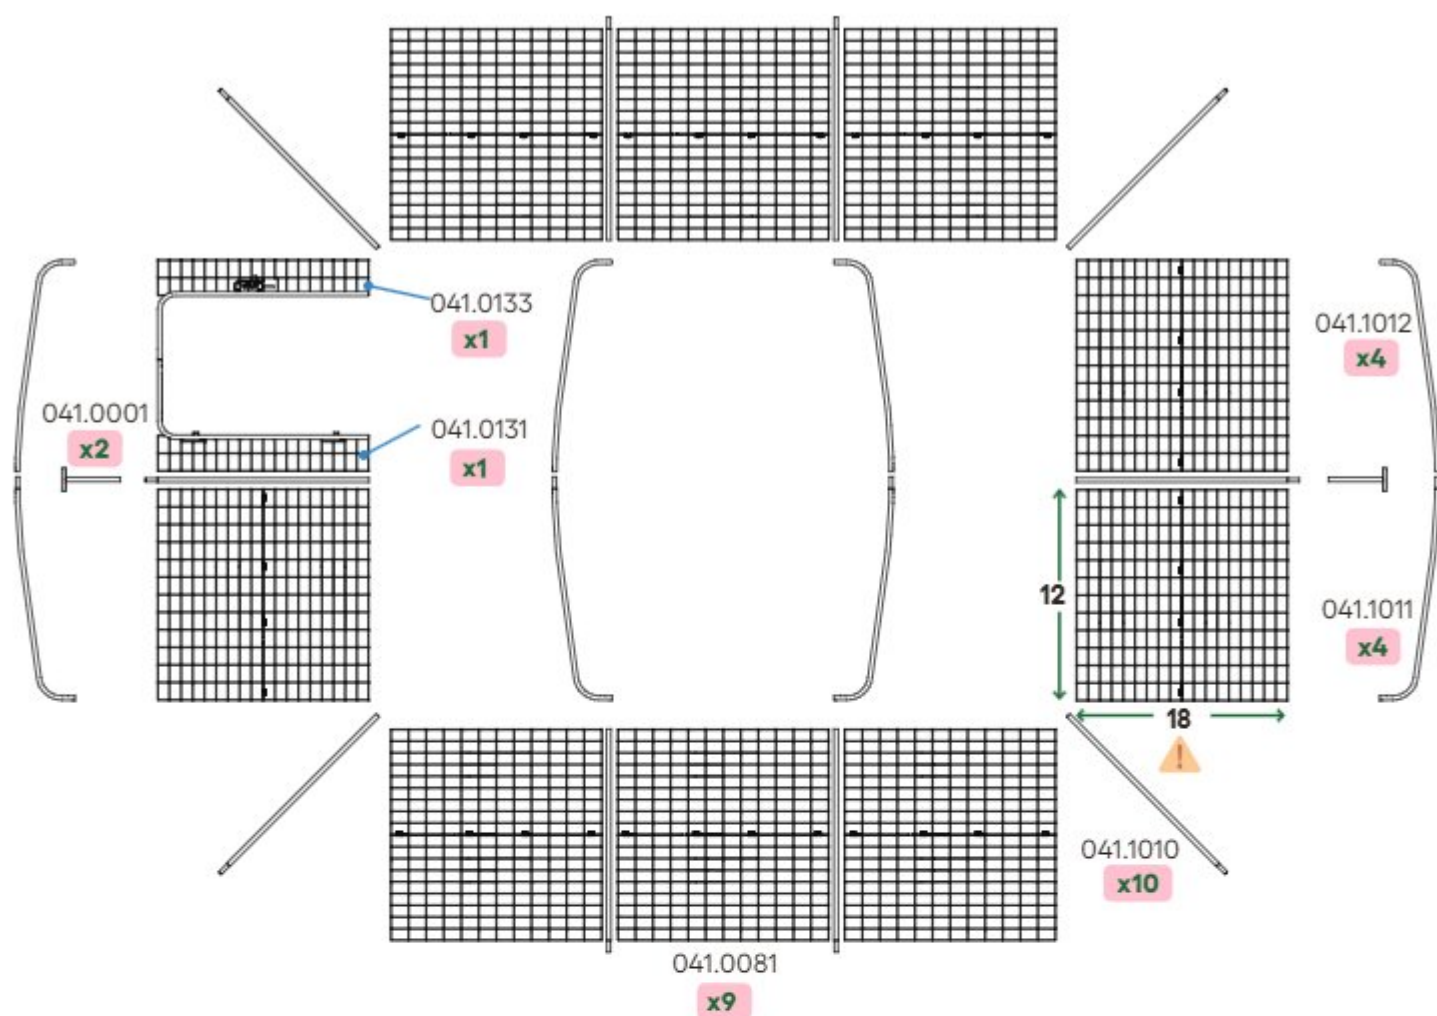


- 1 **EN** Assemble the **Roof Poles (041.1011 + 041.1012)**. They simply slide together.
- 2 **EN** Slide the arches you have just assembled, the door frame and all upright poles onto the ground level of your Outdoor Pet Run.
- 3 **EN** Slide the **Pole Supports (041.0001)** onto the **Pole Straight (041.1010)** at both ends of the run.
- 4 **EN** Complete the Mid level referring to the diagram on page 28 for clip types and positions.

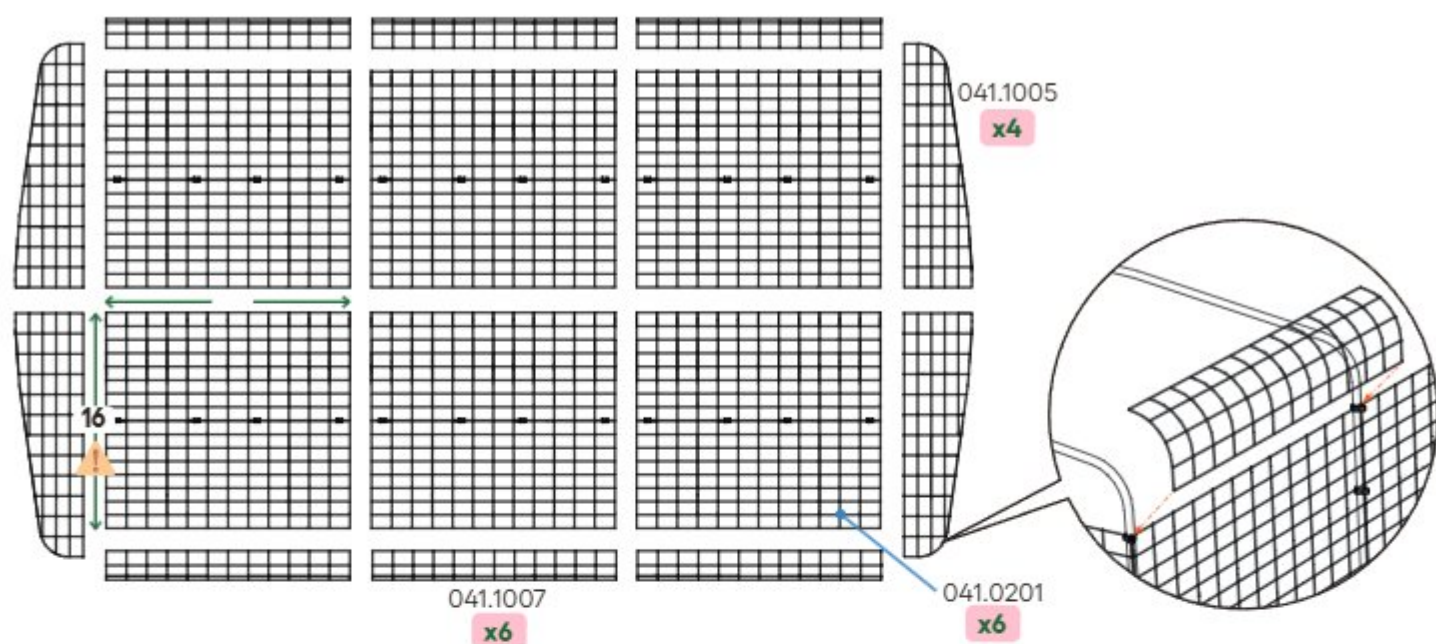 

1 EN Clip Infill Panels (041.1007) and Gable Side Panels (041.1005) to level below.

 2 EN Clip Roof Panels (041.0201).

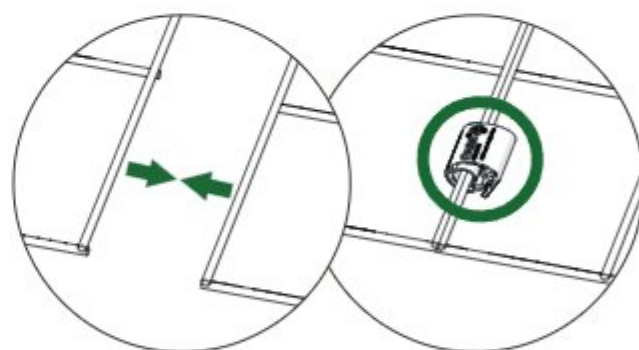


3 EN Cable tie the top of each Pole Support (041.0001) to the pole and panels above it.

Assemble doors.




EN Diagram showing all **Mighty Clip** (810.0135, 810.0134, 810.0185) positions

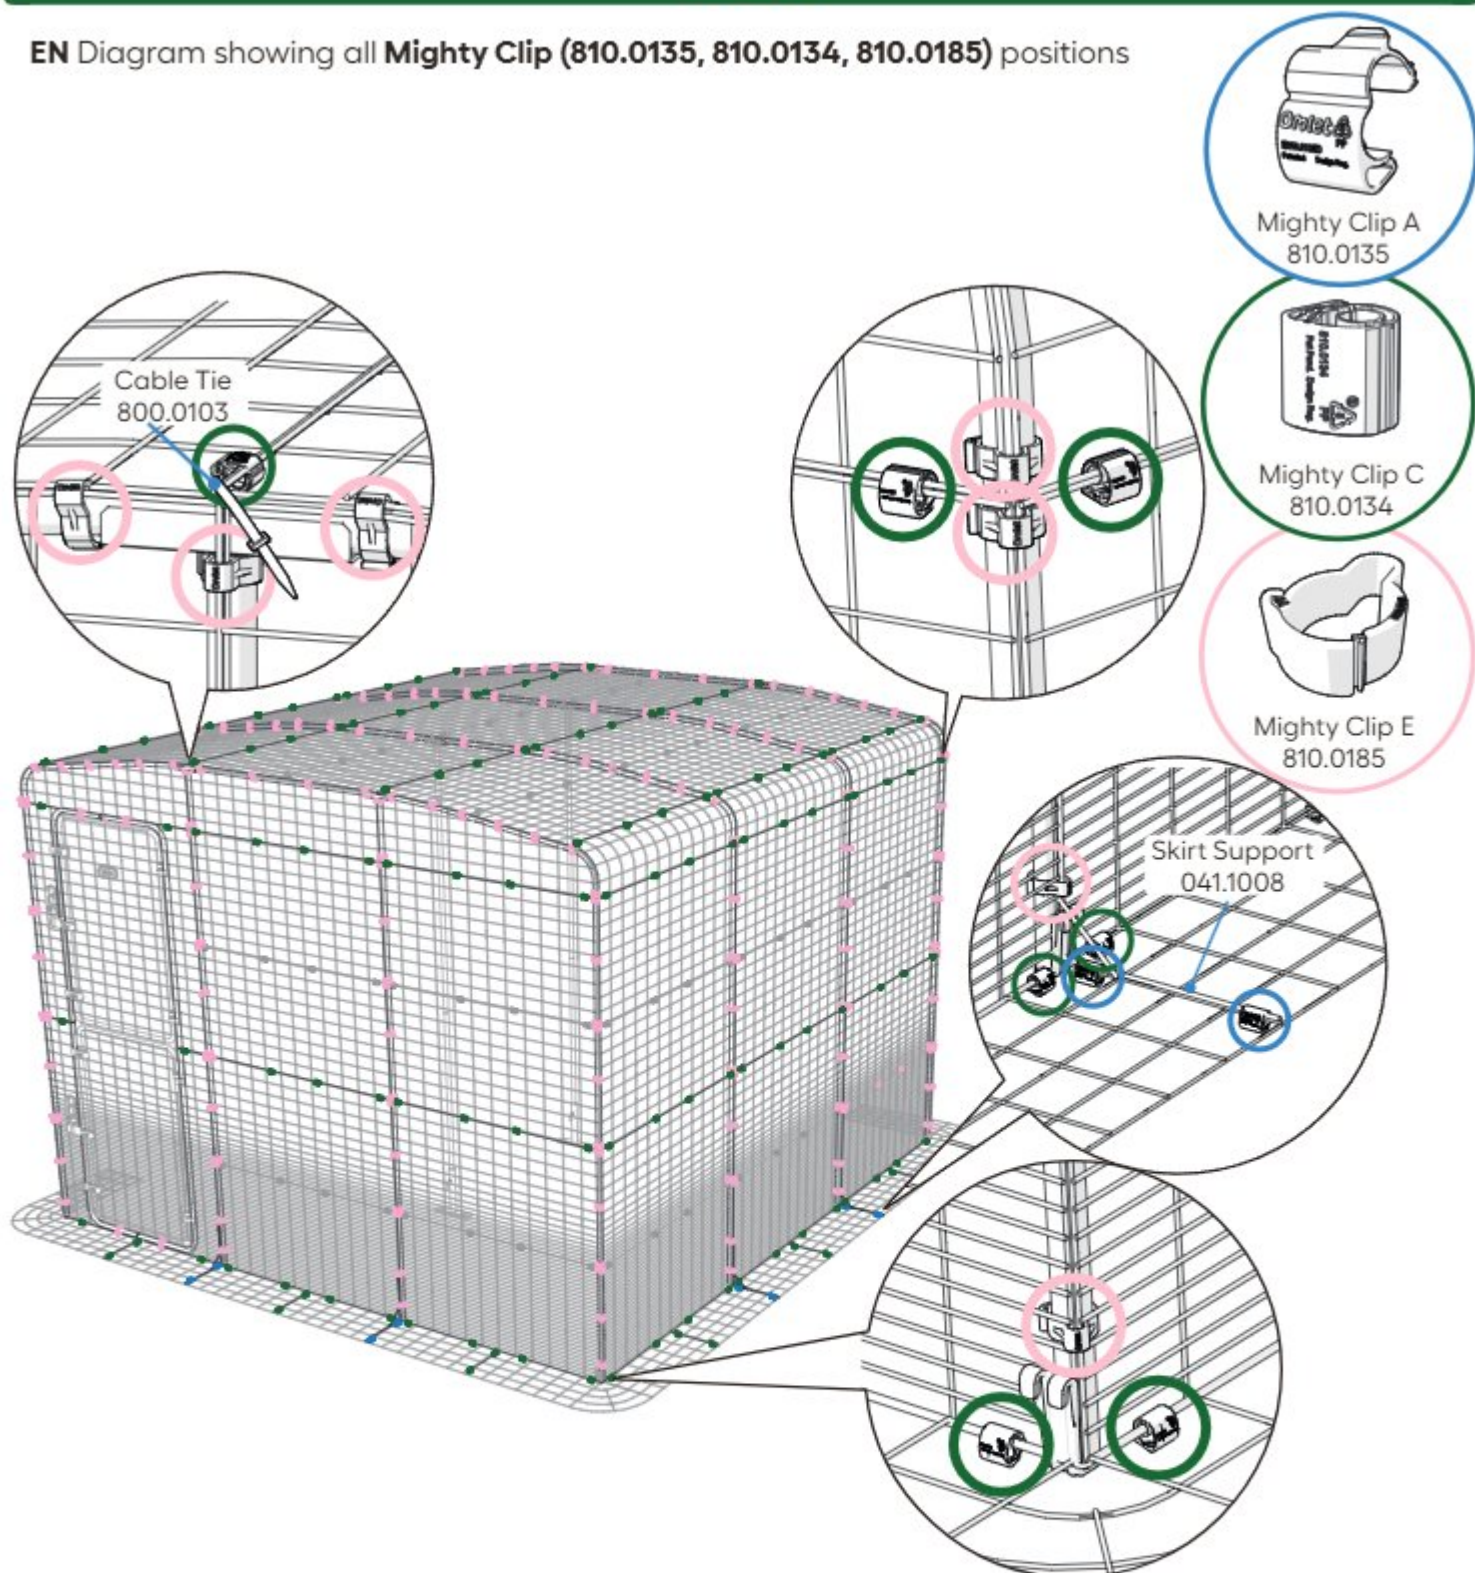 


See page 09 for how to use clips and page 84 for how to assemble door. (Attach doors once run is complete.)

 041.0310 A Mesh

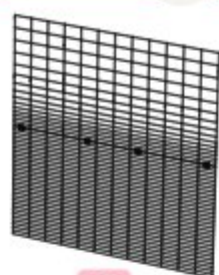

x7

 Run Panel Lower
Assembly
041.0280

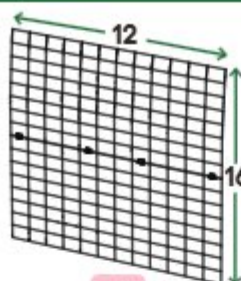

x4

Run Panel Roof
Assembly
041.0201



x4

Run Panel Skirt
Corner
041.1003

041.0301 A Pole



 
x2

Pole Support
041.0001




x4

Run Panel Skirt
041.1002

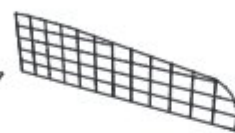

x4

 Run Panel Gable
Side
041.1005

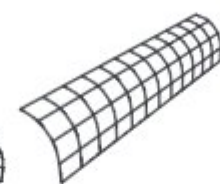

x4

Run Panel Infill
041.1007



x4

Skirt Support
041.1008



x8

Pole Straight
041.1010



x3

Pole Corner Left
041.1011



x3

Pole Corner Right
041.1012



x2

Cable Tie
800.0103



x8

Mighty Clip A
810.0135



x105

Mighty Clip C
810.0134



x103

Mighty Clip E
810.0185



x8

Hook On Bung
810.1067

041.0326 B Door



x1

Door Frame
Bottom Hinge
MK3
041.0330



x1

Door Frame
Bottom Bolt With
Button Clip MK3



x1

Door Bottom
MK3
041.0397

041.0230: Door Fixings Pack



x1

Door Catch
MK2 with sleeve
041.0096



x2

Door Stop
MK3
041.1244



x3

Door Catch Cap
MK2
041.1118



x12

Screw
3.5 x 12mm
800.0002

041.0026: Tube Connection Fixings Pack



x2

Tube Connection Pin
041.1043

041.0025: Bolt Assembly Fixings Pack



x1

Bolt Assembly
041.0024



x5

Screw
3.5 x 12mm
800.0002

041.0246: Hinge Fixings Pack



x4

Hinge Cap
041.1045



x2

Hinge Pin
041.1046

 
810.0138: Bagged Omlet Badge



x2

Omlet Badge
810.0137

041.0202 C Mesh

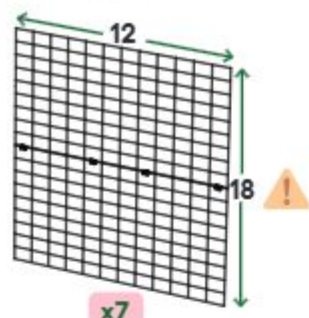

x7

Run Panel Upper Assembly
041.0081

041.0103 C Poles



x8

Pole Straight
041.1010



x32

Mighty Clip C
810.0134



x51

Mighty Clip E
810.0185

041.0228 D Door



 
x1

Door Frame
Top Hinge
MK3
041.0131



x1


Door Frame
Top Bolt With
Button Clip MK3
041.0133

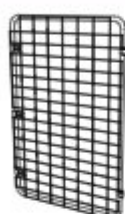

x1

Door Top
MK3
041.0298

 041.0230: Door Fixings Pack



x1

Door Catch
MK2 with sleeve
041.0096



x2

Door Stop
MK3
041.1244



x3

Door Catch Cap
MK2
041.1118



x12

Screw
3.5 x 12mm
800.0002

041.0025: Bolt Assembly Fixings Pack



x1

Bolt Assembly
041.0024



x5

Screw
3.5 x 12mm
800.0002

041.0246: Hinge Fixings Pack



x4

Hinge Cap
041.1045



x2

Hinge Pin
041.1046

 
810.0138: Bagged Omlet Badge



x2


Omlet Badge
810.0137

041.0304 E Mesh

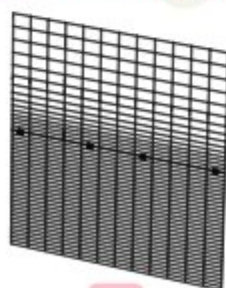


x2

 Run Panel Lower
Assembly
041.0280

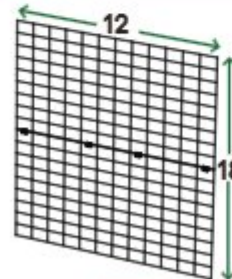

x2

 Run Panel Upper
Assembly
041.0081

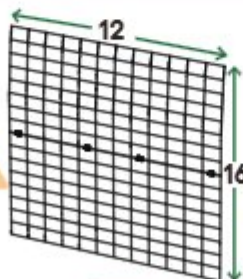

x2

Run Panel Roof
Assembly
041.0201



x2

 
Run Panel Skirt
041.1002



x2

Skirt Support
041.1008

041.0105 E Poles

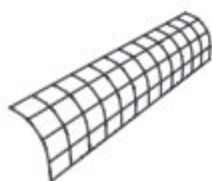

x2

Run Panel Infill
041.1007



x4

Pole Straight
041.1010



x1

Pole Corner Left



x1

Pole Corner Right
041.1012



x4

Mighty Clip A
810.0135



x42

Mighty Clip C
810.0134



x40

 
Mighty Clip E
810.0185



x2


Hook On Bung
810.1067

041.0306 F Mesh

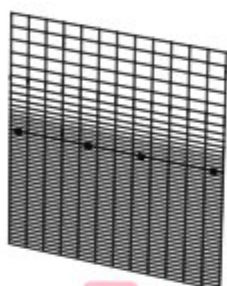

x2

 Run Panel Lower
Assembly
041.0280

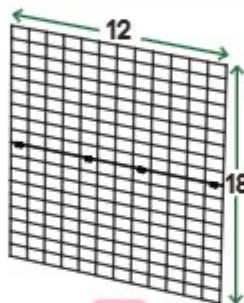

x5

Run Panel Upper
Assembly
041.0081



x2

Run Panel Skirt
041.1002



x2

Run Panel Gable
Centre
041.1004



x2

Skirt Support
041.1008

041.0107 F Poles



x4

Pole Support
041.0001



x2

Pole Stand
041.0112



x12

Pole Straight
041.1010



x7

Cable Tie
800.0103



x4

Mighty Clip A
810.0135



x42

Mighty Clip C
810.0134



 
x47

Mighty Clip E
810.0185



x4

Hook On Bung
810.1067

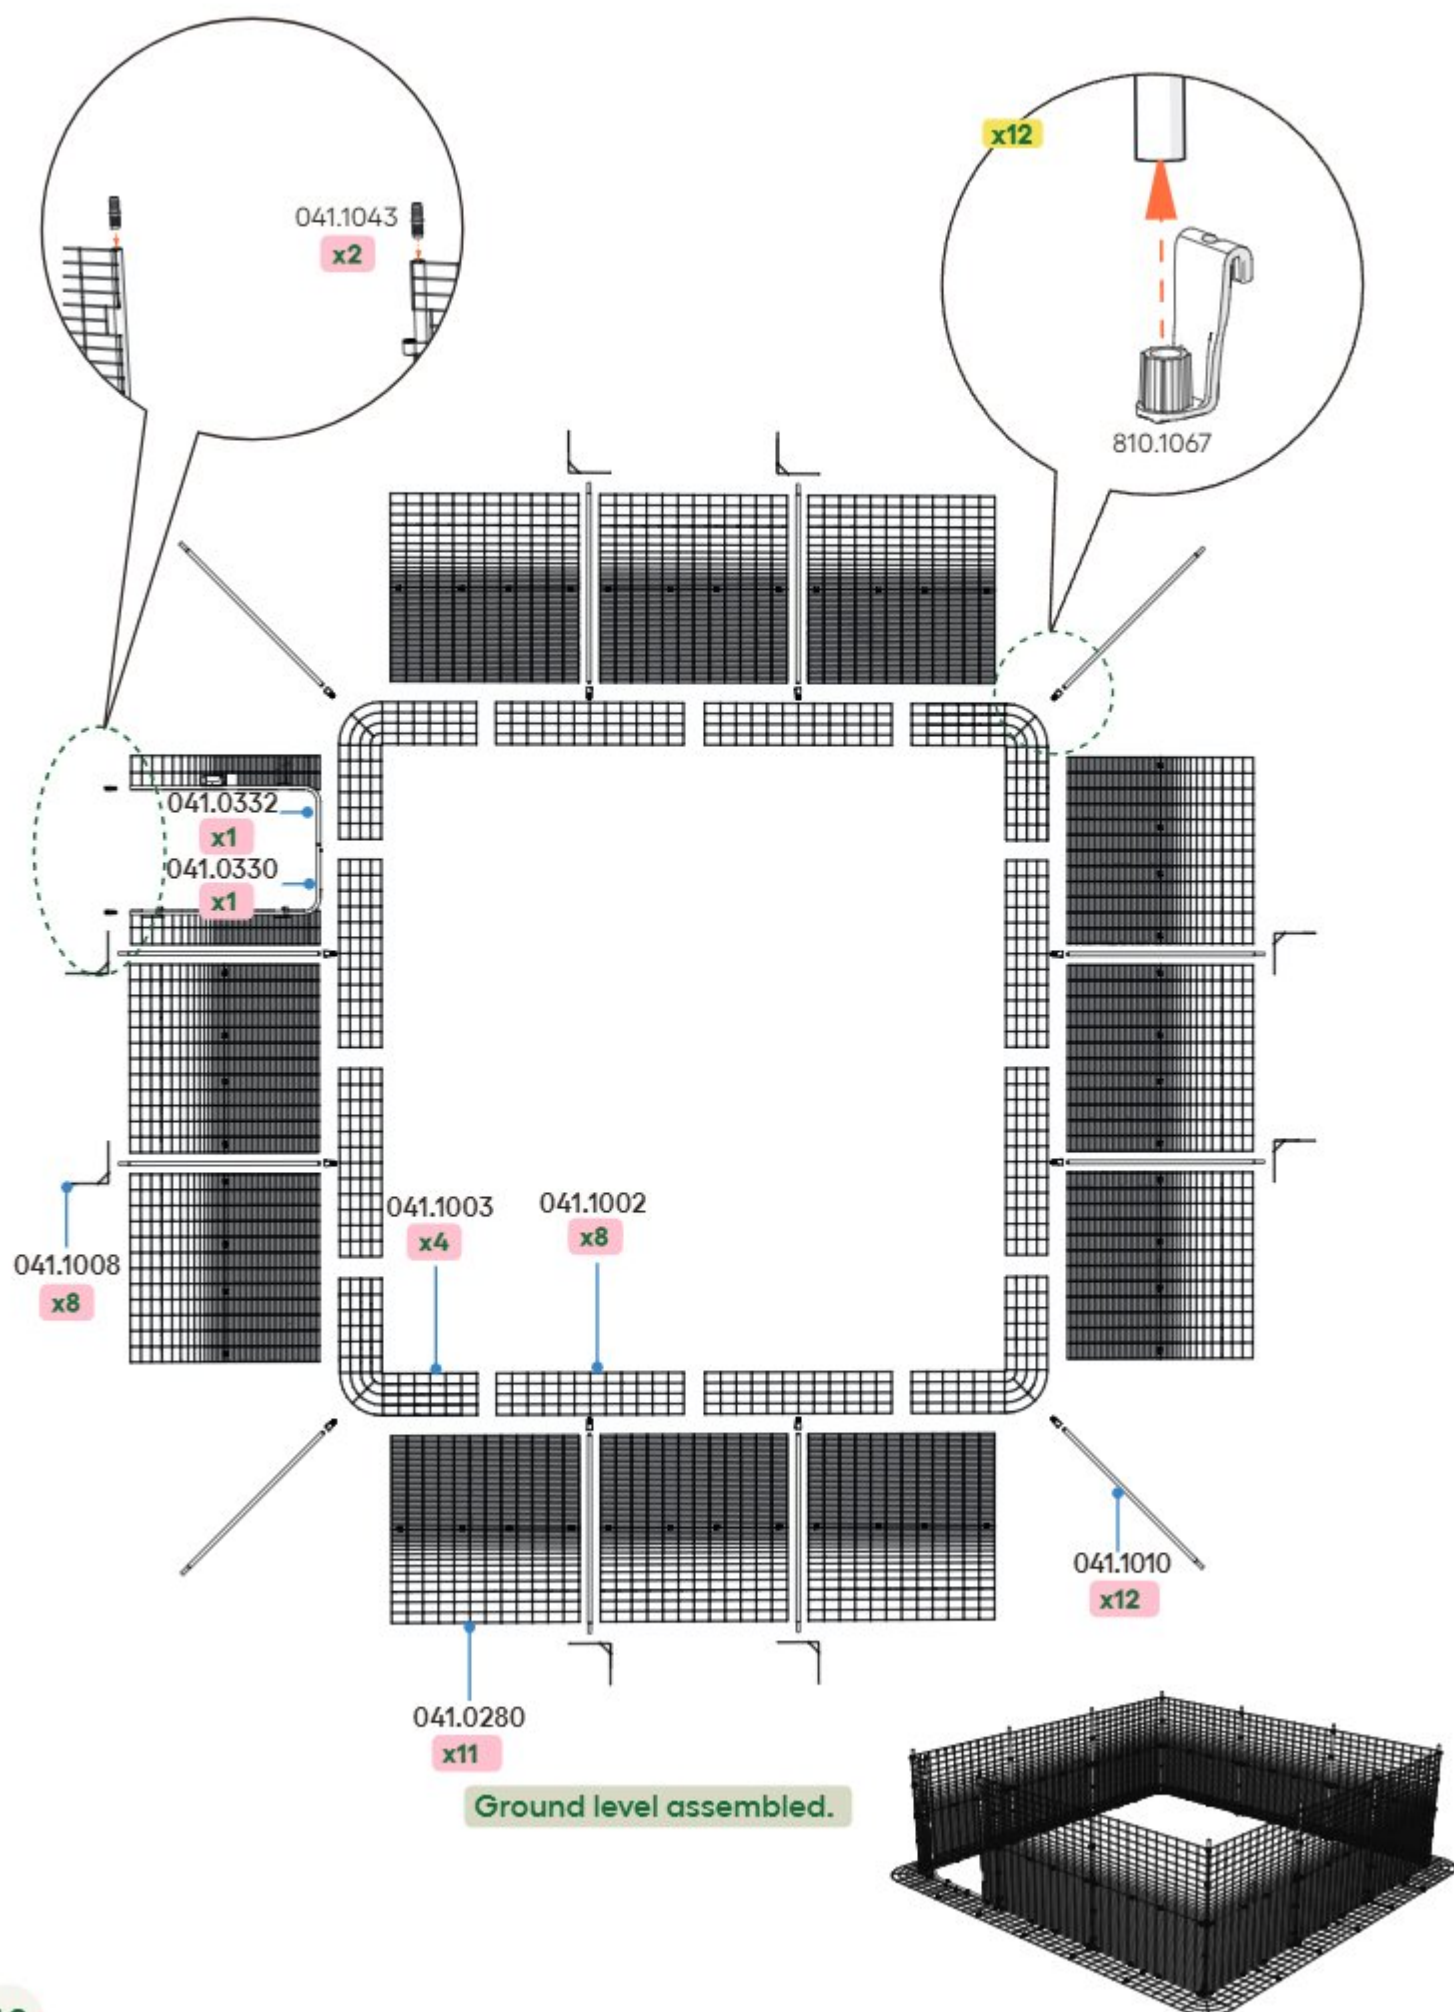


1 **EN** Lay the parts for the ground level on the floor. Clip the **skirt panels 041.1002** and **041.1003** together. See page 36 for clip types and positions.

2 **EN** Choose where you want to put the door frame. It can go in any position. Doors open outwards with lock on the left. (Attach doors once run is complete.)

3 **EN** Start at a corner and clip **Pole Straight (041.1010)** to 2 **Run Panel Lowers (041.0280)** using 6 **Mighty Clips E (810.0185)**. See page 09 for how to use clips.

4 **EN** Complete the ground level referring to the diagram on page 36 for clip types and positions.

 5 **EN** Attach 2 **Tube Connection Pins (041.1043)**.

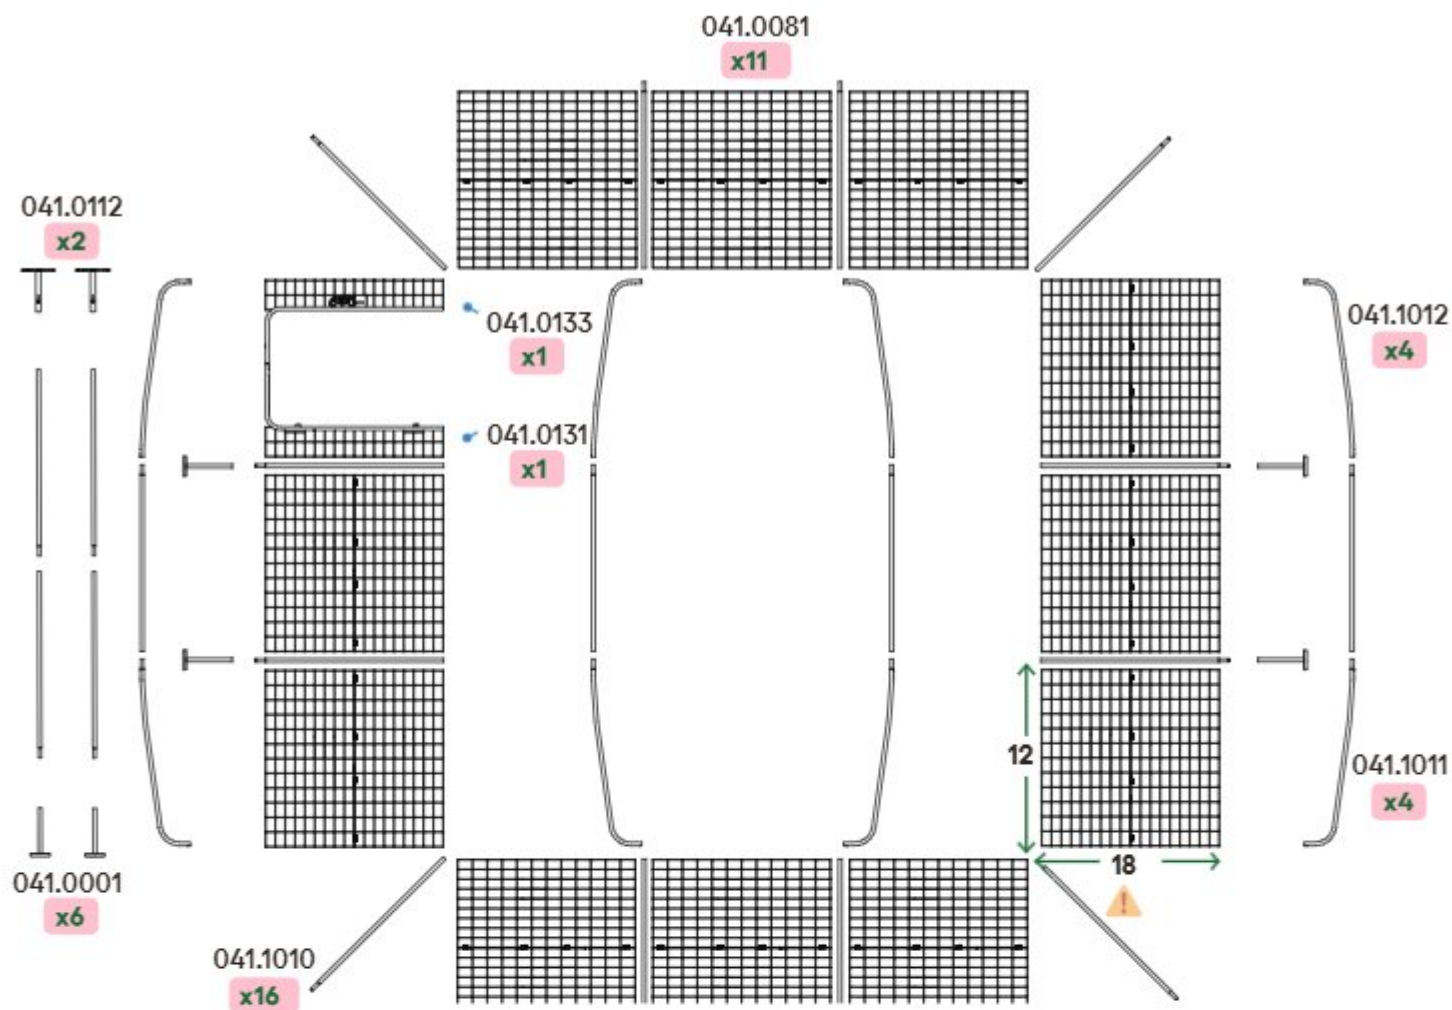


1 EN Assemble the **Roof Poles (041.1011 + 041.1012)**. They simply slide together.

2 EN Slide the arches you have just assembled, the door frame and all upright poles onto the ground level of your Outdoor Pet Run.


3 EN Slide the **Pole Supports (041.0001)** onto the **Pole Straight (041.1010)** at both ends of the run.

 4 EN Assemble the **roof supports (041.0112, 041.1010 and 041.0001)**. Put them in place under the central roof tubes. Complete the Mid level referring to the diagram on page 36 for clip types and positions.

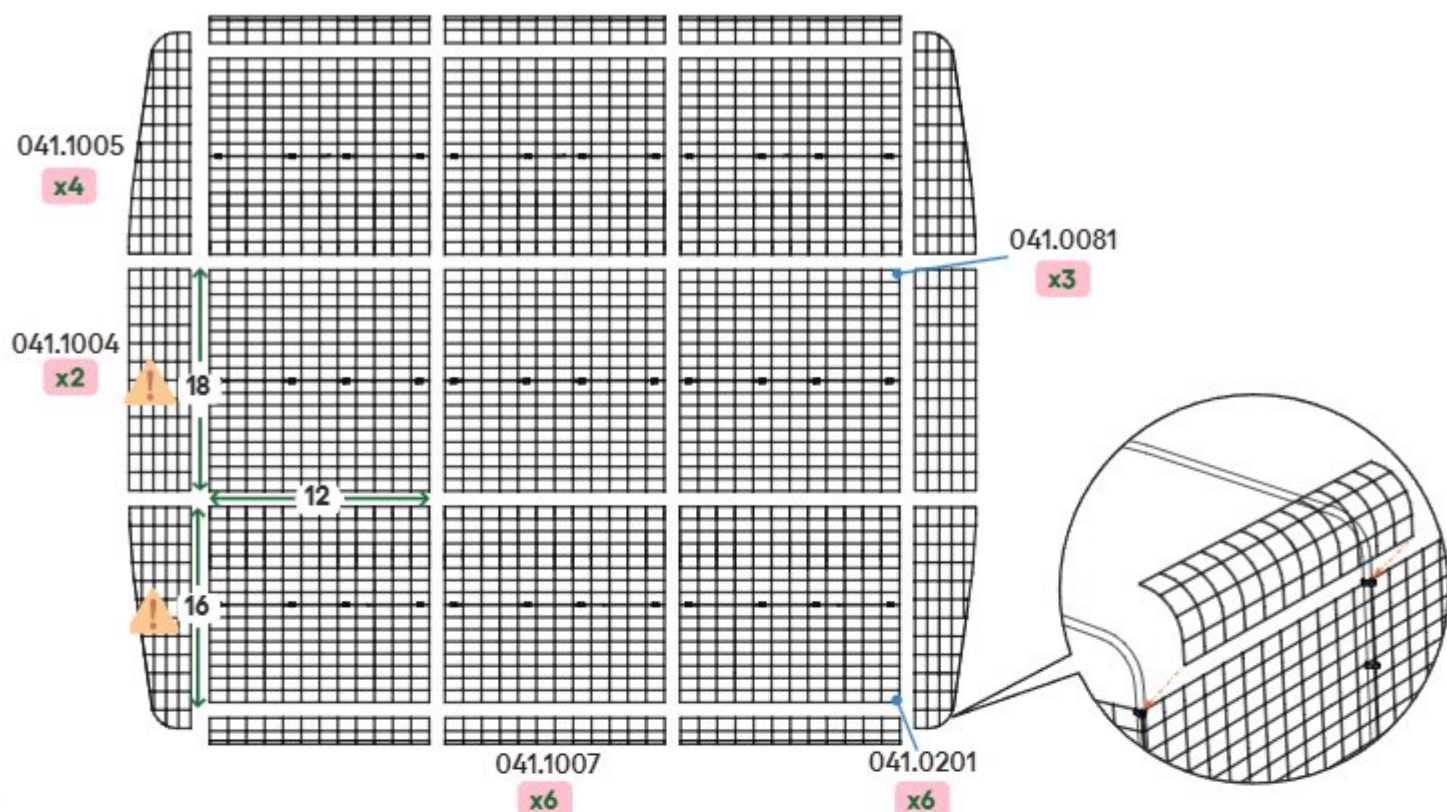

1 EN Clip Infill Panels (041.1007) and Gable Side Panels (041.1005) to level below.

 2 EN Clip Roof Panels (041.0201).

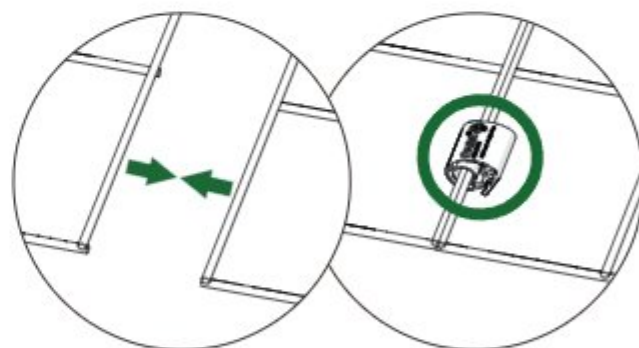


3 EN Cable tie the top of each Pole Support (041.0001) to the pole and panels above it.

Assemble doors.




EN Diagram showing all **Mighty Clip** (810.0135, 810.0134, 810.0185) positions

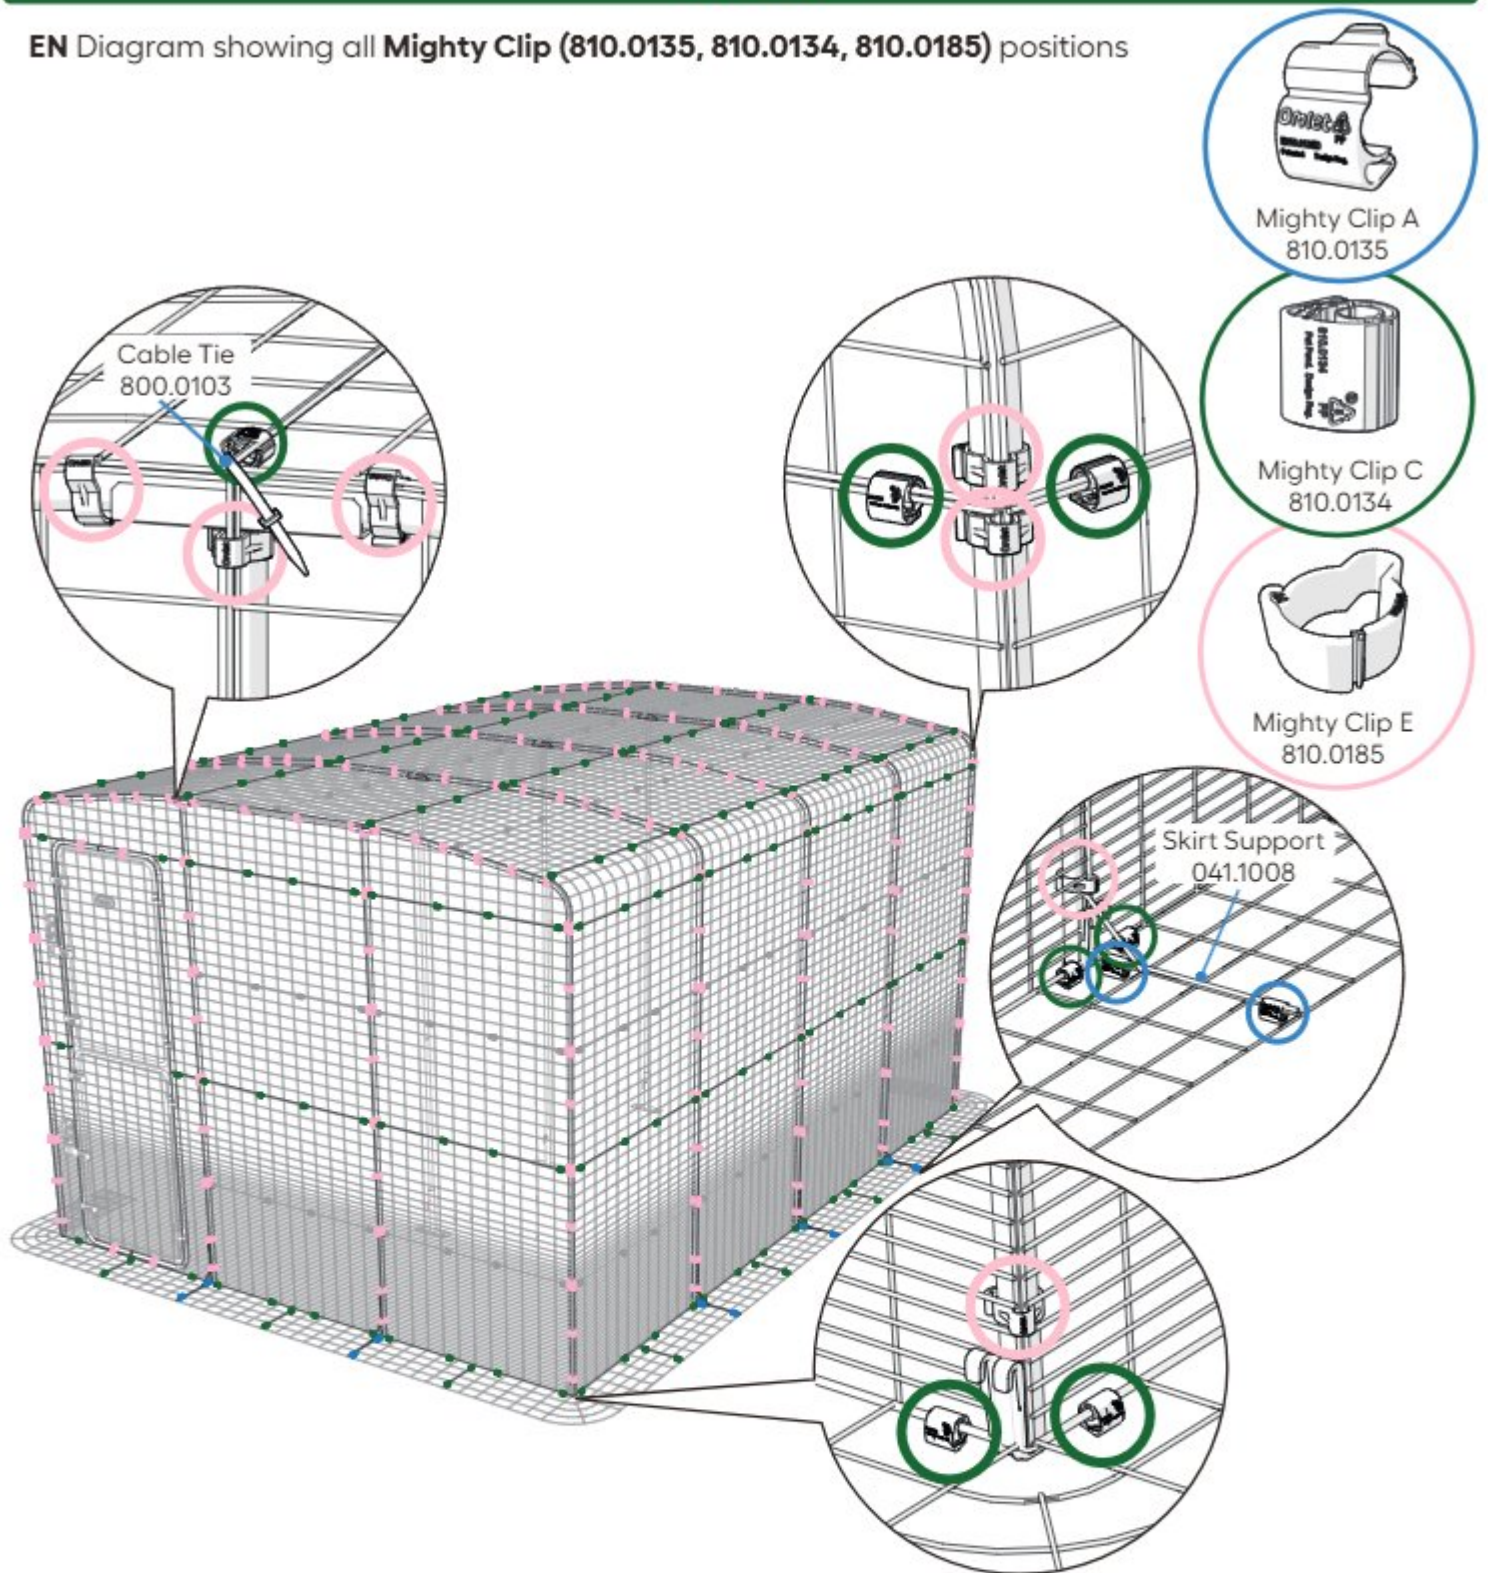 


See page 09 for how to use clips and page 84 for how to assemble door. (Attach doors once run is complete.)

 041.0310 A Mesh

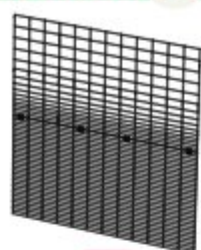

x7

 Run Panel Lower
Assembly
041.0280

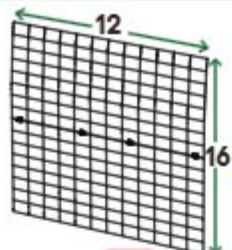

x4

Run Panel Roof
Assembly
041.0201



x4

Run Panel Skirt
Corner
041.1003

041.0301 A Pole



 
x2

Pole Support
041.0001




x4

Run Panel Skirt
041.1002

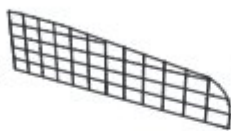

x4

 Run Panel Gable
Side
041.1005

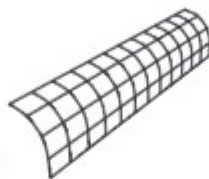

x4

Run Panel Infill
041.1007



x4

Skirt Support
041.1008



x8

Pole Straight
041.1010



x3

Pole Corner Left
041.1011



x3

Pole Corner Right
041.1012



x2

Cable Tie
800.0103



x8

Mighty Clip A
810.0135



x105

Mighty Clip C
810.0134



x103

Mighty Clip E
810.0185



x8

Hook On Bung
810.1067

041.0326 B Door



x1

Door Frame
Bottom Hinge
MK3
041.0330



x1

Door Frame
Bottom Bolt With
Button Clip MK3
041.0332



x1

 
Door Bottom
MK3
041.0397

041.0230: Door Fixings Pack



x1

Door Catch
MK2 with sleeve
041.0096



x2

Door Stop
MK3
041.1244



x3

Door Catch Cap
MK2
041.1118



x12

Screw
3.5 x 12mm
800.0002

041.0026: Tube Connection Fixings Pack



x2

Tube Connection Pin
041.1043

041.0025: Bolt Assembly Fixings Pack



x1

Bolt Assembly
041.0024



x5

Screw
3.5 x 12mm
800.0002

041.0246: Hinge Fixings Pack



x4

Hinge Cap
041.1045



x2

Hinge Pin
041.1046

810.0138: Bagged Omlet Badge



x2

Omlet Badge
810.0137

041.0202 C Mesh



x7

Run Panel Upper Assembly
041.0081

041.0103 C Poles



x8

Pole Straight
041.1010



x32

Mighty Clip C
810.0134



x51

Mighty Clip E
810.0185

041.0228 D Door



x1

Door Frame Top
Hinge MK3
041.0131



x1

 
Door Frame Top Bolt
With Button Clip MK3
041.0133



x1


Door Top
MK3
041.0298

041.0230: Door Fixings Pack



x1

 Door Catch
MK2 with sleeve
041.0096



x2

Door Stop
MK3
041.1244



x3

Door Catch Cap
MK2
041.1118



x12

Screw
3.5 x 12mm
800.0002

041.0025: Bolt Assembly Fixings Pack



x1

Bolt Assembly
041.0024



x5

Screw
3.5 x 12mm
800.0002

041.0246: Hinge Fixings Pack



x4

Hinge Cap
041.1045



x2

Hinge Pin
041.1046

 
810.0138: Bagged Omlet Badge



x2


Omlet Badge
810.0137

041.0304 E Mesh

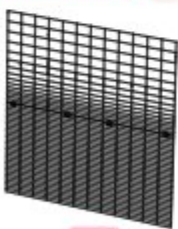


x2

 Run Panel Lower
Assembly
041.0280

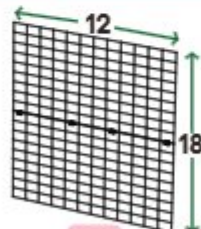

x2

 Run Panel Upper
Assembly
041.0081

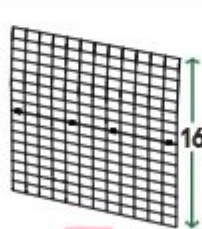

x2

Run Panel Roof
Assembly
041.0201



x2

 
Run Panel Skirt
041.1002



x2

Skirt Support
041.1008

041.0105 E Poles

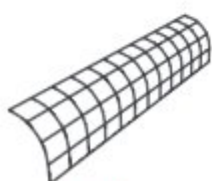

x2

Run Panel Infill
041.1007



x4

Pole Straight
041.1010



x1

Pole Corner
Left
041.1011

x1

Pole Corner
Right
041.1012



x4

Mighty Clip
A
810.0135



x42

Mighty Clip
C
810.0134



x40

 
Mighty Clip
E
810.0185



x4


Hook On Bung
810.1067

041.0306 F Mesh

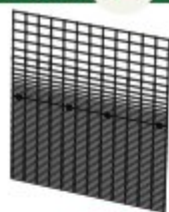

x2

 Run Panel Lower Assembly
041.0280

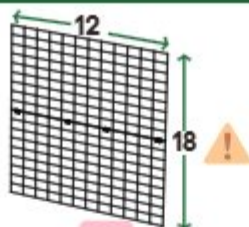


x5

Run Panel Upper Assembly
041.0081



x2

 Run Panel Skirt
041.1002



x2

Run Panel Gable Centre
041.1004



x2

Skirt Support
041.1008

041.0107 F Poles



x4

Pole Support
041.0001



x2

Pole Stand
041.0112



x12

Pole Straight
041.1010



x7

Cable Tie
800.0103



x4

Mighty Clip A
810.0135



x42

Mighty Clip C
810.0134



x47

 
Mighty Clip E
810.0185



x2


Hook On Bung
810.1067

041.0308 G Mesh

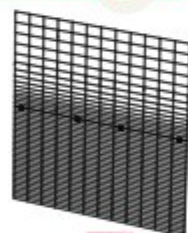


x2

 Run Panel Lower Assembly
041.0280

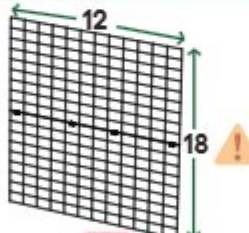

x3

 Run Panel Upper Assembly
041.0081

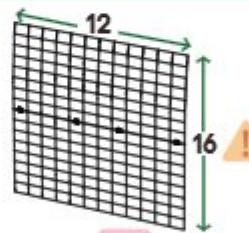

x2

Run Panel Roof Assembly
041.0201



x2

Run Panel Skirt
041.1002



x2

Skirt Support
041.1008

041.0109 G Poles



 
x1

Pole Support
041.0001



x1

Pole Stand
041.0112

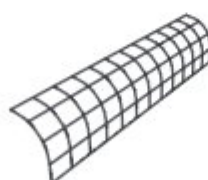

x2

Run Panel Infill
041.1007



x7

Pole Straight
041.1010



x1

Pole Corner Left
041.1011

x1

Pole Corner Right
041.1012



x2

Cable Tie
800.0103



x4

Mighty Clip A
810.0135



x47

Mighty Clip C
810.0134



 
x45

Mighty Clip E
810.0185




x2

Hook On Bung
810.1067

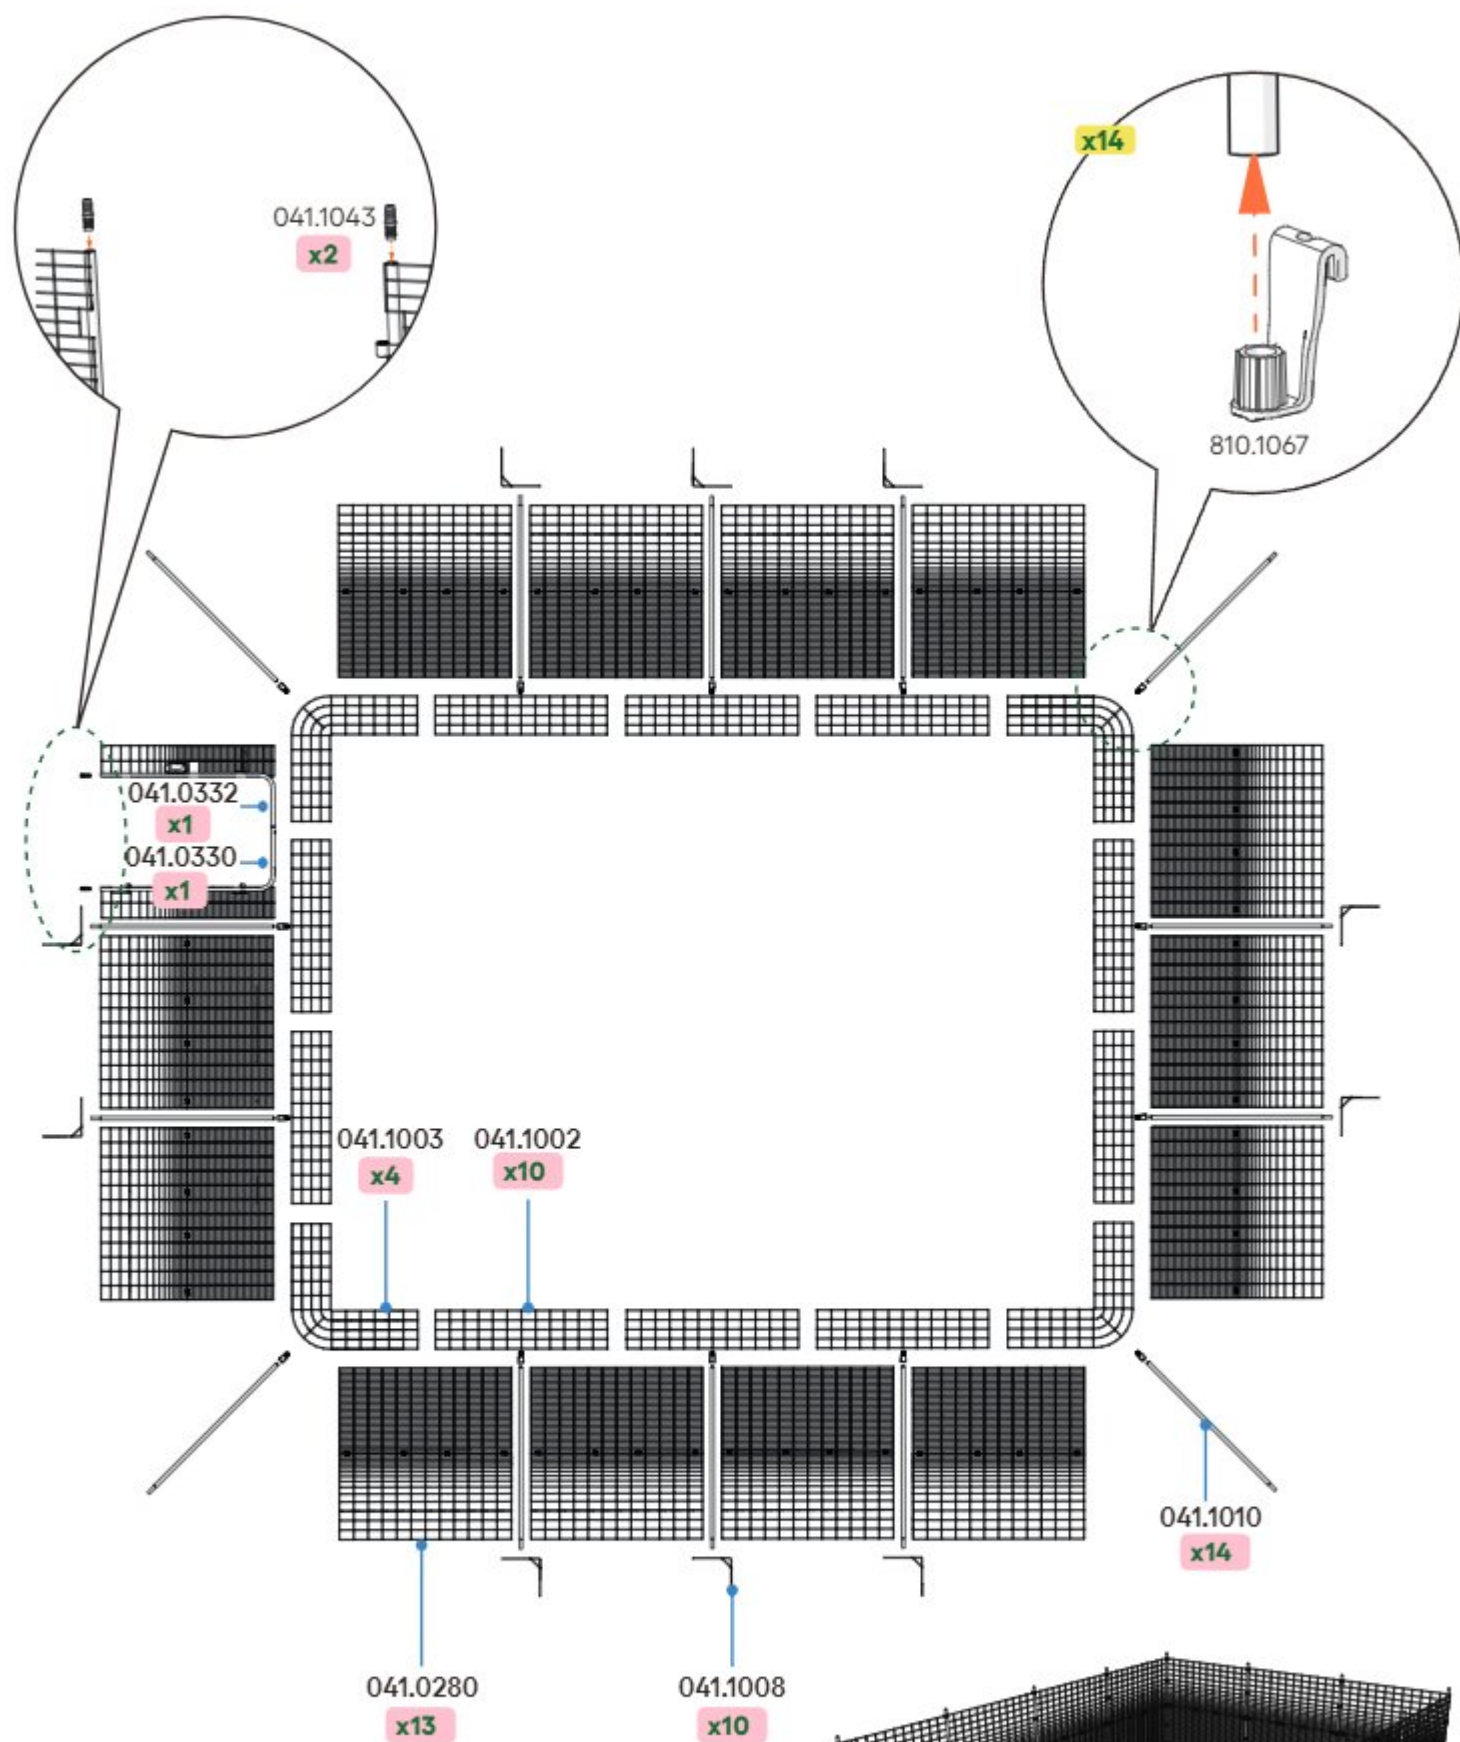

Ground level assembled.

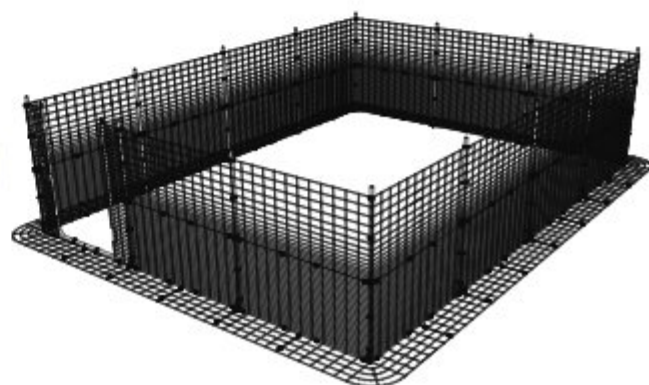 


1 **EN** Lay the parts for the ground level on the floor. Clip the **skirt panels 041.1002** and **041.1003** together. See page 44 for clip types and positions.

2 **EN** Choose where you want to put the door frame. It can go in any position. Doors open outwards with lock on the left. (Attach doors once run is complete.)

3 **EN** Start at a corner and clip **Pole Straight (041.1010)** to 2 **Run Panel Lowers (041.0280)** using 6 **Mighty Clips E (810.0185)**. See page 09 for how to use clips.

4 **EN** Complete the ground level referring to the diagram on page 44 for clip types and positions.

 5 **EN** Attach 2 **Tube Connection Pins (041.1043)**.

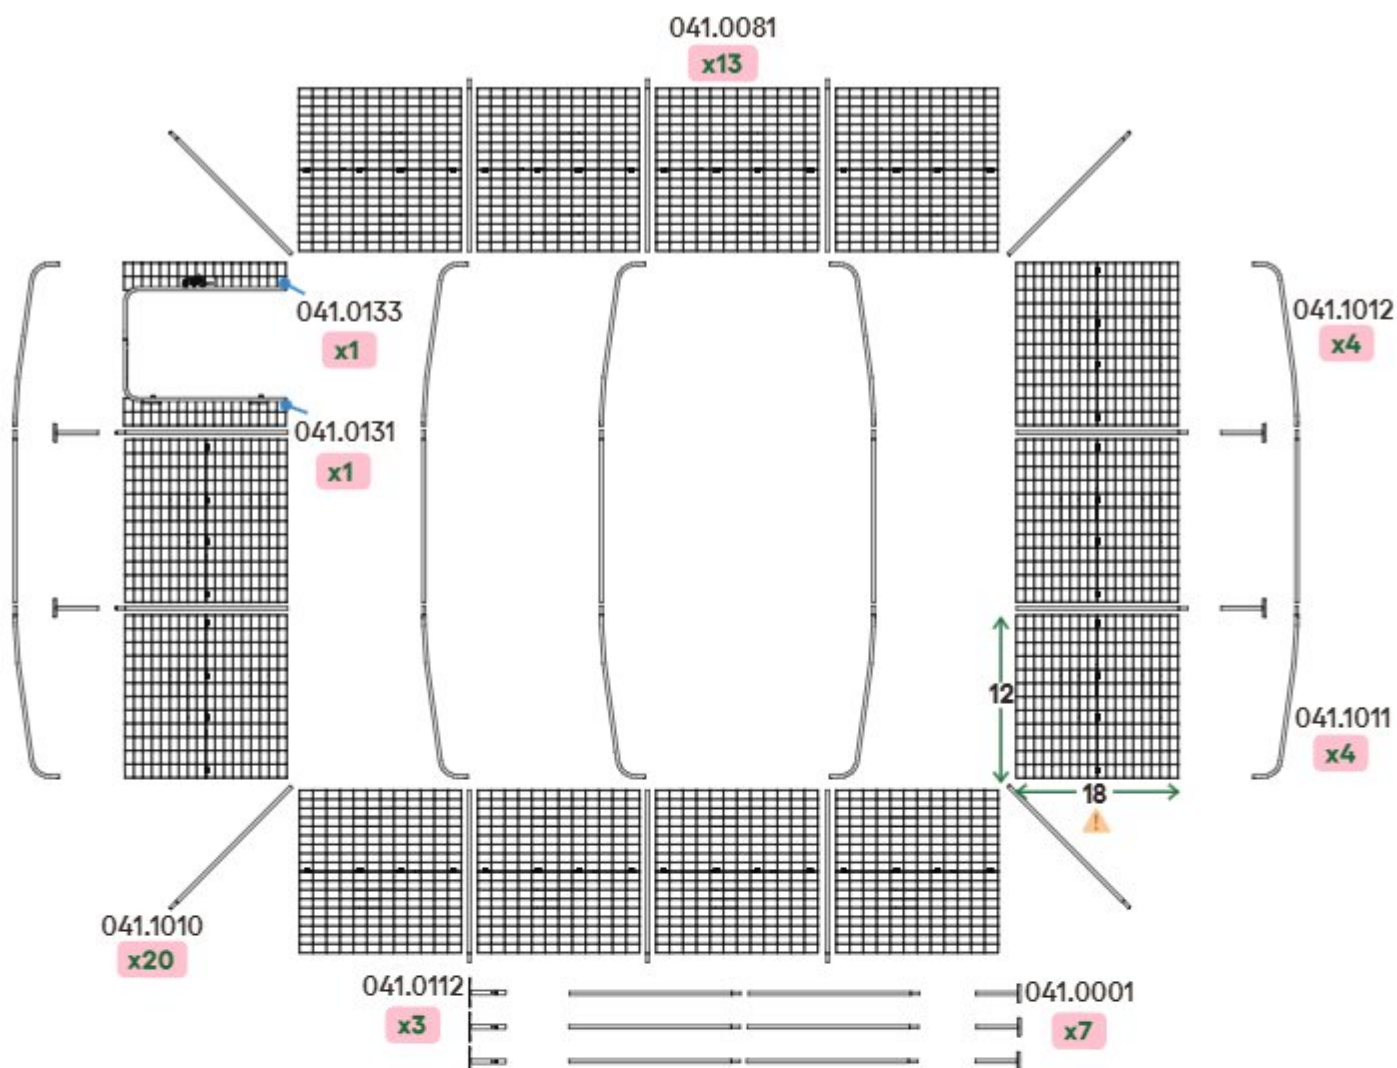


1 EN Assemble the **Roof Poles (041.1011 + 041.1012)**. They simply slide together.

2 EN Slide the arches you have just assembled, the door frame and all upright poles onto the ground level of your Outdoor Pet Run.


3 EN Slide the **Pole Supports (041.0001)** onto the **Pole Straight (041.1010)** at both ends of the run.

 4 EN Assemble the **roof supports (041.0112, 041.1010 and 041.0001)**. Put them in place under the central roof tubes. Complete the Mid level referring to the diagram on page 44 for clip types and positions.

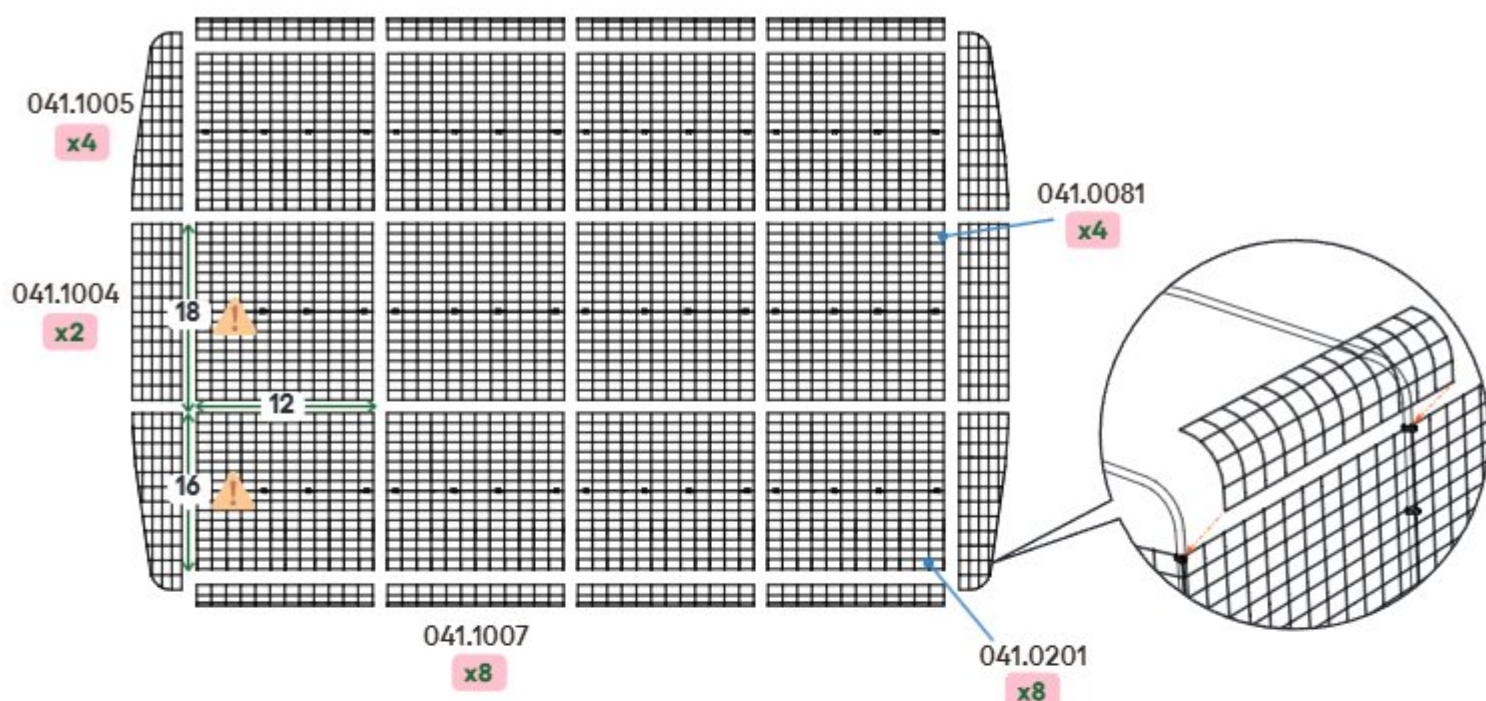


1 EN Clip Infill Panels (041.1007) and Gable Side Panels (041.1005) to level below.

 2 EN Clip Roof Panels (041.0201).

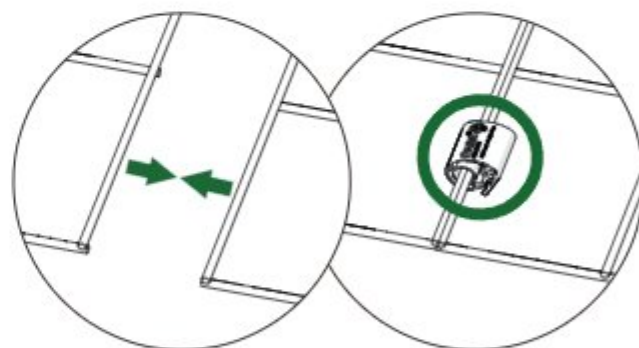


3 EN Cable tie the top of each Pole Support (041.0001) to the pole and panels above it.

 Assemble doors.

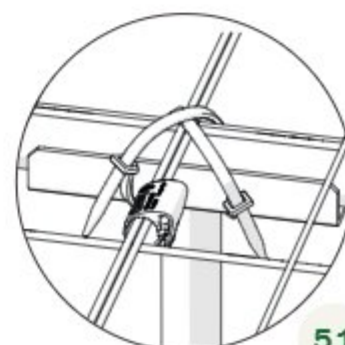


EN Diagram showing all **Mighty Clip** (810.0135, 810.0134, 810.0185) positions

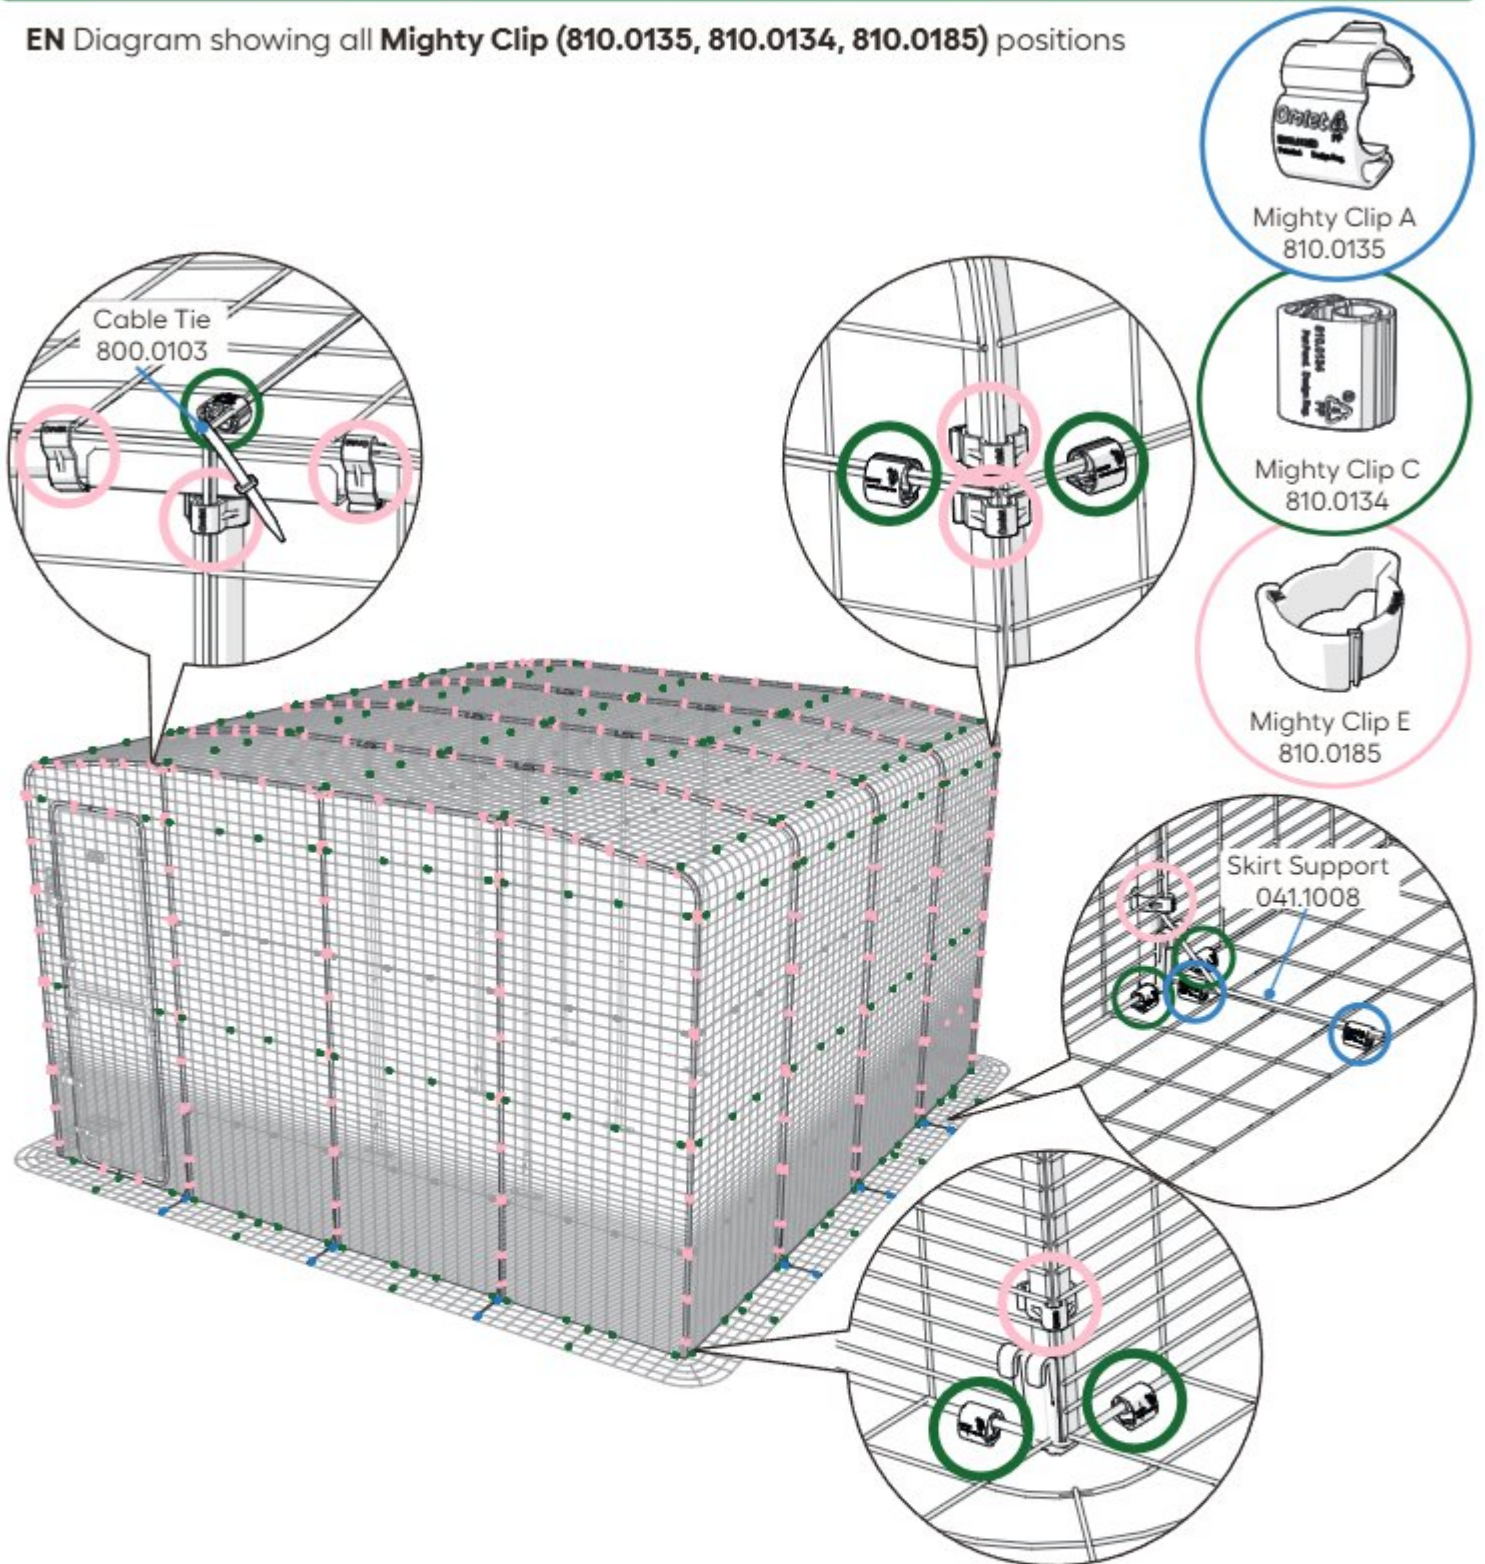 


See page 09 for how to use clips and page 84 for how to assemble door. (Attach doors once run is complete.)

 041.0310 A Mesh

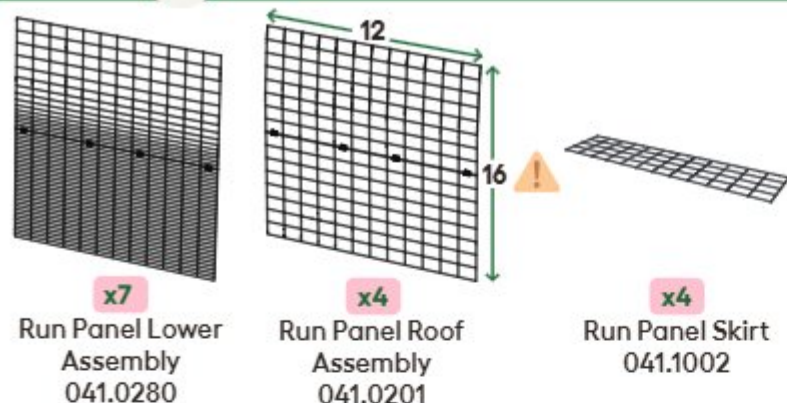

 041.0301 A Pole

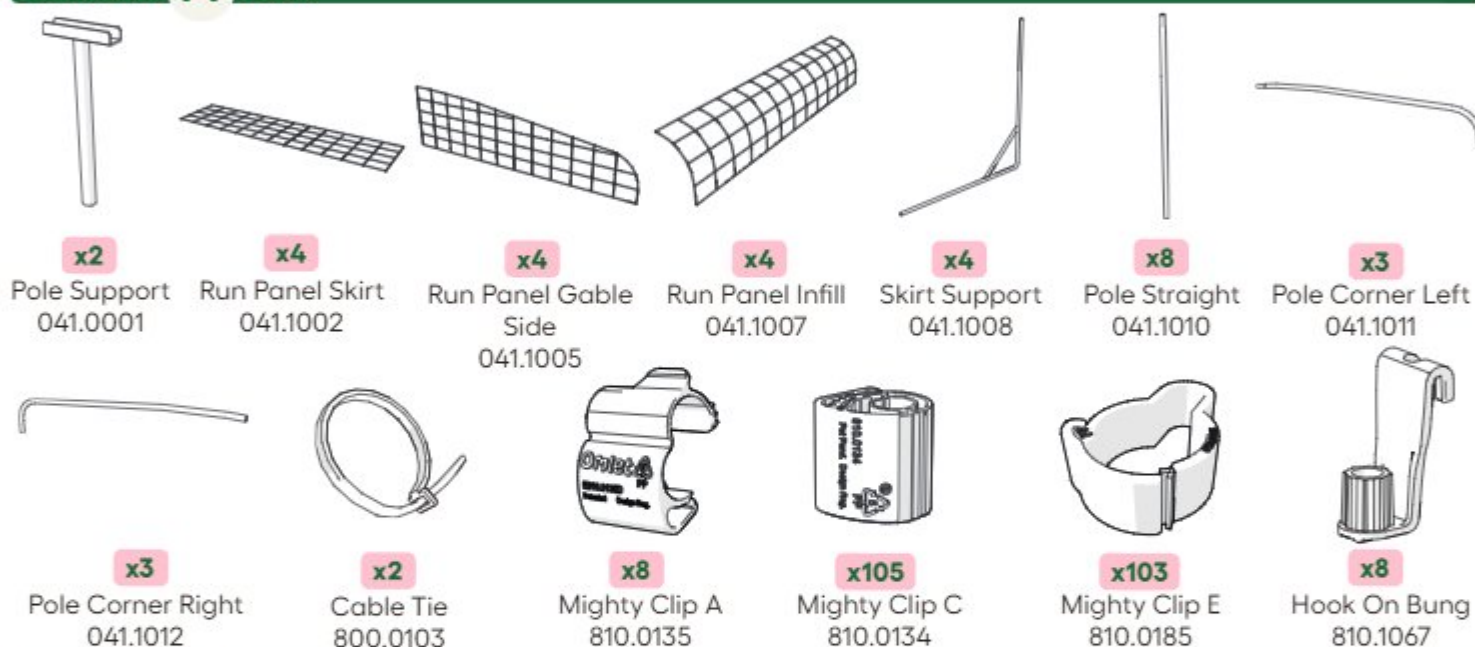


041.0326 B Door



041.0230: Door Fixings Pack



 041.0026: Tube Connection Fixings Pack

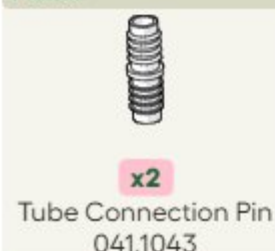


041.0025: Bolt Assembly Fixings Pack




041.0246: Hinge Fixings Pack



 810.0138: Bagged Omlet Badge

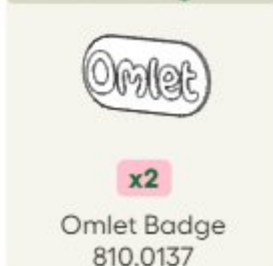

 041.0202 C Mesh

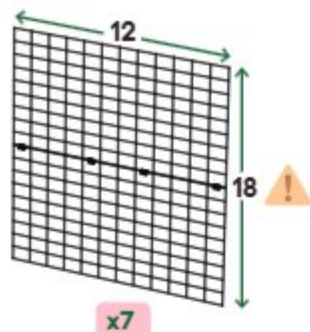

x7
Run Panel Upper Assembly
041.0081



x8
Pole Straight
041.1010



x32
Mighty Clip C
810.0134



x51
Mighty Clip E
810.0185

041.0228 D Door



x1
Door Frame
Top Hinge
MK3
041.0131

 


x1
Door Frame
Top Bolt With
Button Clip Mk3
041.0133



x1
Door Top
MK3
041.0298

041.0230: Door Fixings Pack



x1
Door Catch
MK2 with sleeve
041.0096



x2
Door Stop
MK3
041.1244



x3
Door Catch Cap
MK2
041.1118



x12
Screw
3.5 x 12mm
800.0002

041.0025: Bolt Assembly Fixings Pack



x1
Bolt Assembly
041.0024



x5
Screw
3.5 x 12mm
800.0002

041.0246: Hinge Fixings Pack



x4
Hinge Cap
041.1045



 
x2
Hinge Pin
041.1046

810.0138: Bagged Omlet Badge




x2
Omlet Badge
810.0137


041.0304 E Mesh

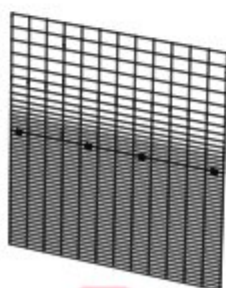

x2
Run Panel Lower
Assembly
041.0280

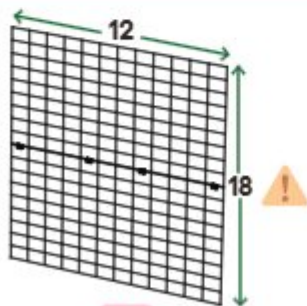 

x2
Run Panel Upper
Assembly
041.0081

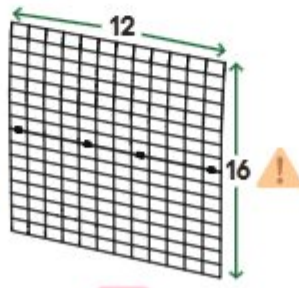 

x2
Run Panel Roof
Assembly
041.0201



x2
Run Panel Skirt
041.1002



 
x2
Skirt Support
041.1008

041.0105 E Poles



x4

Pole Straight
041.1010

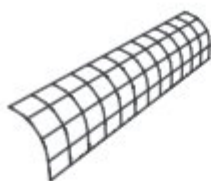

x2

Run Panel Infill
041.1007



x1

Pole Corner Left
041.1011



x1

Pole Corner Right
041.1012



x2

Hook On Bung
800.1067



x4

Mighty Clip A
810.0135



x42

 
Mighty Clip C
810.0134



x40


Mighty Clip E
810.0185

041.0306 F Mesh x2

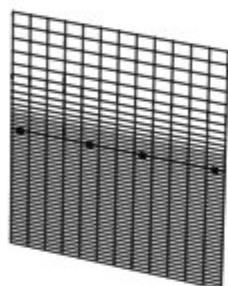

x2

 Run Panel Lower
Assembly
041.0280

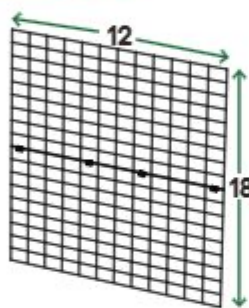


x4

Run Panel Upper
Assembly
041.0081



x2

 Run Panel Skirt
041.1002



x2

Run Panel Gable
Centre
041.1004



x2

Skirt Support
041.1008

041.0107 F Poles x2



x12

Pole Straight
041.1010



x4

Pole Support
041.0001



x2

Pole Stand
041.0112



x7

Cable Tie
800.0103



x4

Mighty Clip A
810.0135



x42

Mighty Clip C
810.0134



x47

 
Mighty Clip E
810.0185



x2


Hook On Bung
810.1067

041.0308 **G** Mesh

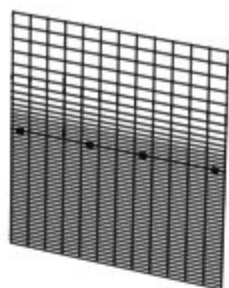


x2

 Run Panel Lower
Assembly
041.0280

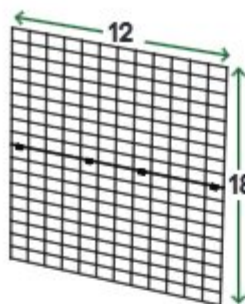


x3

 Run Panel Upper
Assembly
041.0081

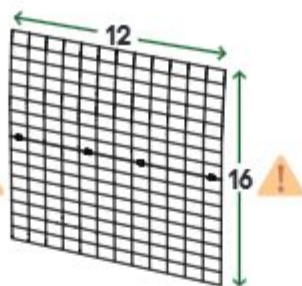

x2

 Run Panel Roof
Assembly
041.0201



x2

Run Panel Skirt
041.1002



x2

 
Skirt Support
041.1008

041.0109 **G** Poles



x7

Pole Straight
041.1010

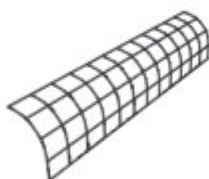

x2

Run Panel Infill
041.1007



x1

Pole Support
041.0001



x1

Pole Stand
041.0112



x1

Pole Corner Left
041.1011



x1

Pole Corner Right
041.1012



x2

Cable Tie
800.0103



x4

Mighty Clip A
810.0135



x47

Mighty Clip C
810.0134



x45

 
Mighty Clip E
810.0185



x2

Hook On Bung
810.1067

041.0260 **N** Pack

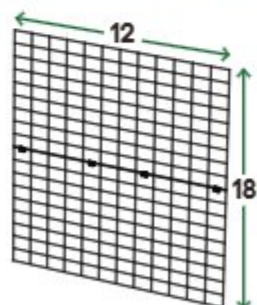

x1

Run Panel Upper
Assembly
041.0081



x3

Pole Straight
041.1010



x2

Cable Tie
800.0103



x1

Pole Support
041.0001



x1

Pole Stand
041.0112



 
x4

Mighty Clip C
810.0134



x4

Mighty Clip E
810.0185

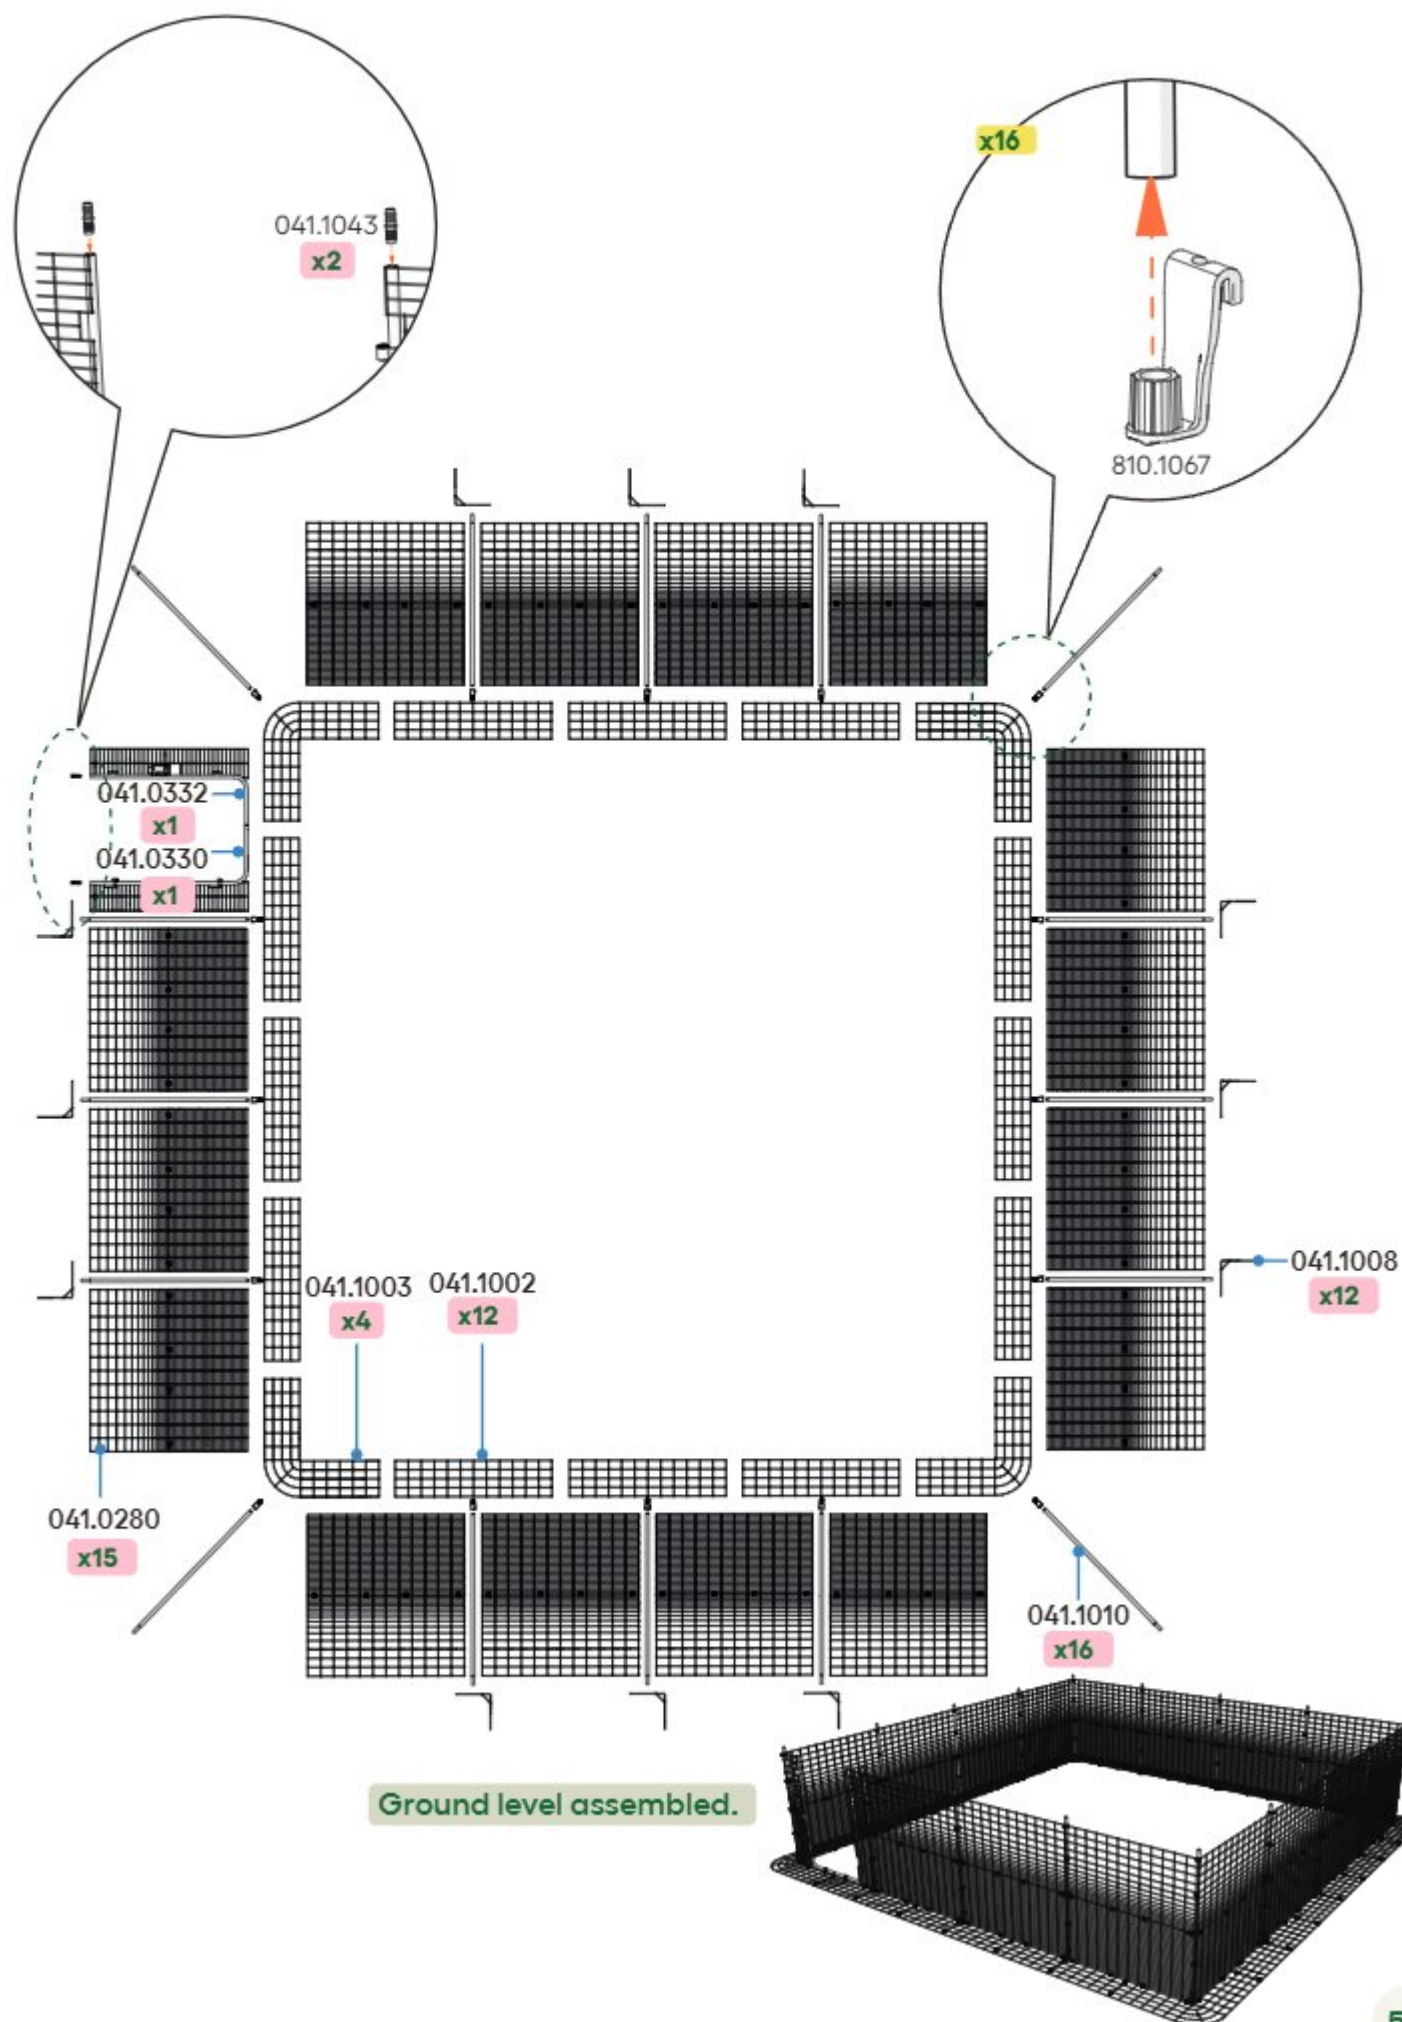


1 **EN** Lay the parts for the ground level on the floor. Clip the **skirt panels 041.1002** and **041.1003** together. See page 52 for clip types and positions.

2 **EN** Choose where you want to put the door frame. It can go in any position. Doors open outwards with lock on the left. (Attach doors once run is complete.)


3 **EN** Start at a corner and clip **Pole Straight (041.1010)** to 2 **Run Panel Lowers (041.0280)** using 6 **Mighty Clips E (810.0185)**. See page 09 for how to use clips.

4 **EN** Complete the ground level referring to the diagram on page 52 for clip types and positions.

 5 **EN** Attach 2 **Tube Connection Pins (041.1043)**.

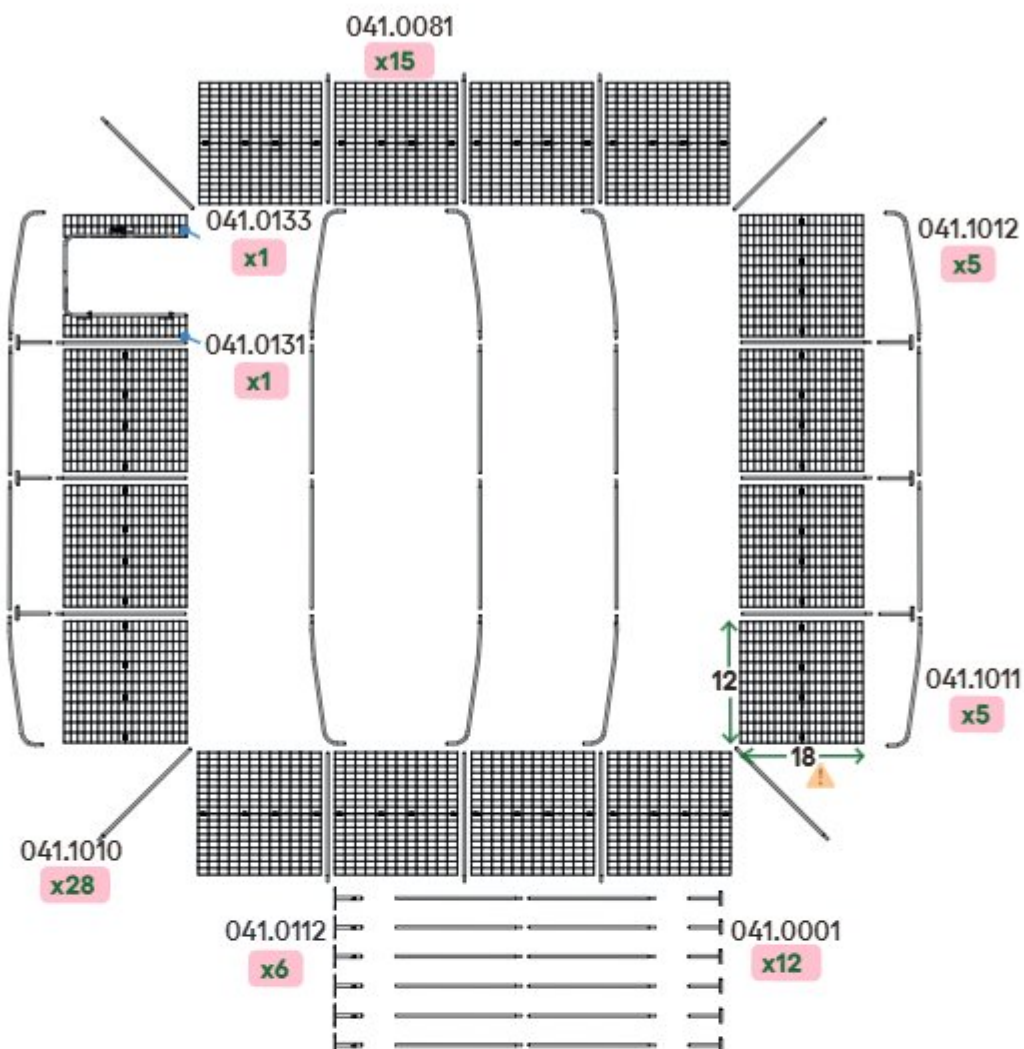


- 1 **EN** Assemble the **Roof Poles (041.1011 + 041.1012)**. They simply slide together.
- 2 **EN** Slide the arches you have just assembled, the door frame and all upright poles onto the ground level of your Outdoor Pet Run.
- 3 **EN** Slide the **Pole Supports (041.0001)** onto the **Pole Straight (041.1010)** at both ends of the run.
- 4 **EN** Assemble the **roof supports (041.0112, 041.1010 and 041.0001)**. Put them in place under the central roof tubes. Complete the Mid level referring to the diagram on page 52 for clip types and positions.

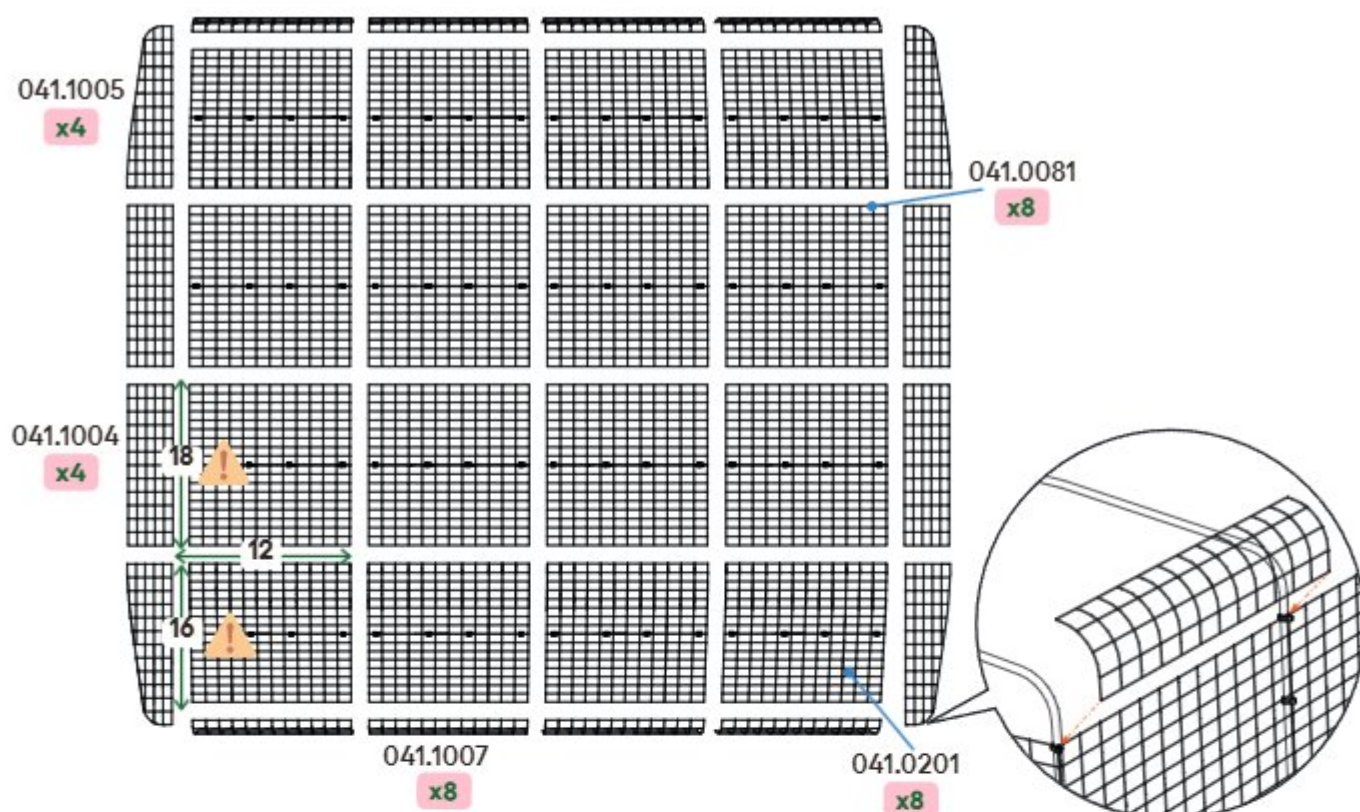 


1 EN Clip Infill Panels (041.1007) and Gable Side Panels (041.1005) to level below.

 2 EN Clip Roof Panels (041.0201).

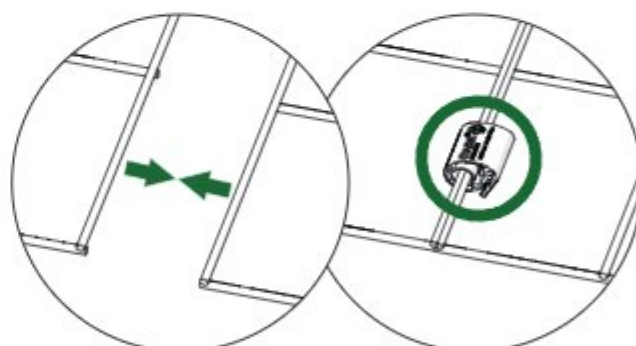


3 EN Cable tie the top of each Pole Support (041.0001) to the pole and panels above it.

 Assemble doors.

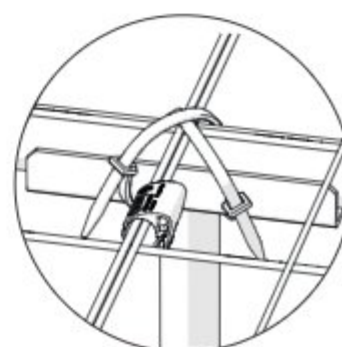


EN Diagram showing all **Mighty Clip** (810.0135, 810.0134, 810.0185) positions

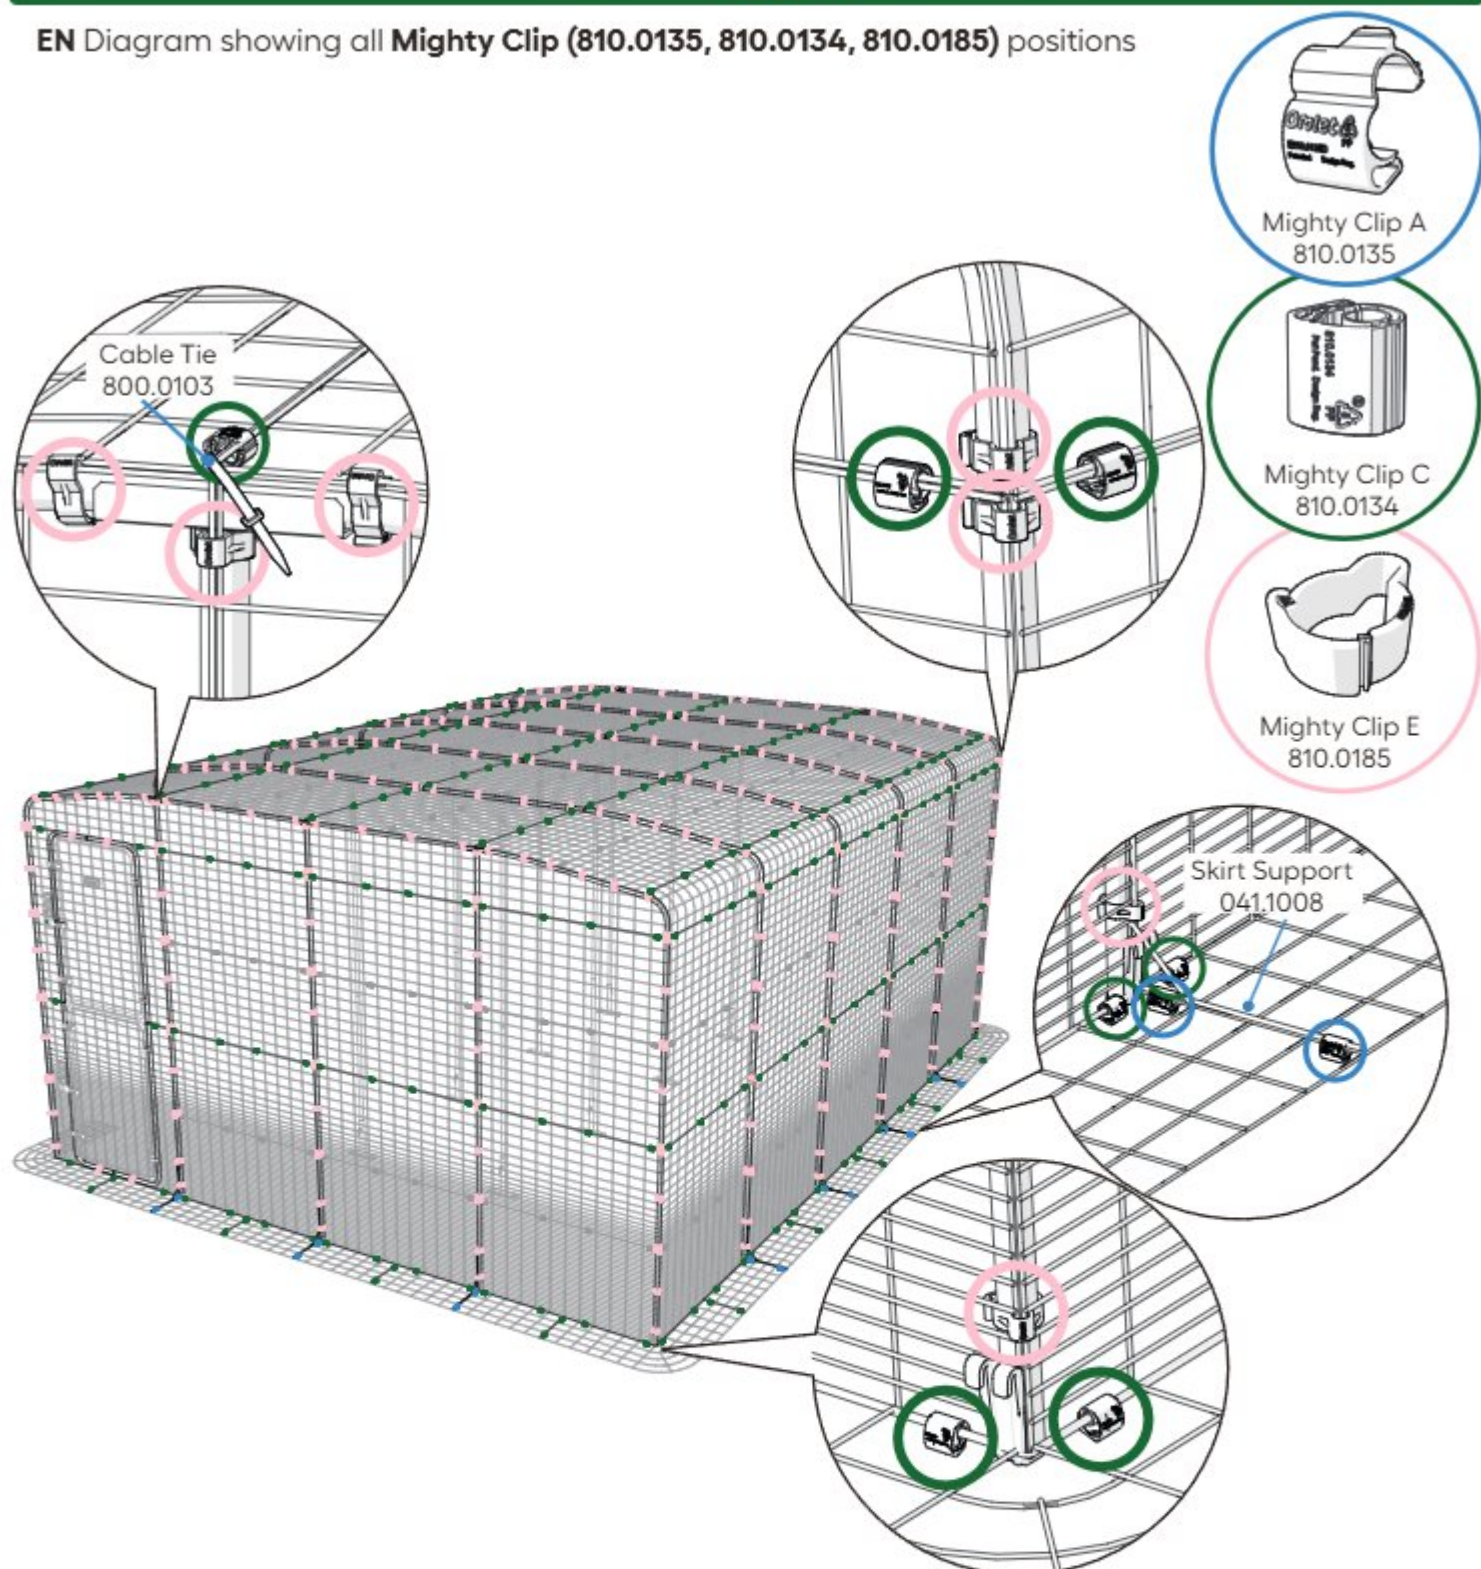 


See page 09 for how to use clips and page 84 for how to assemble door. (Attach doors once run is complete.)

 041.0310 A Mesh

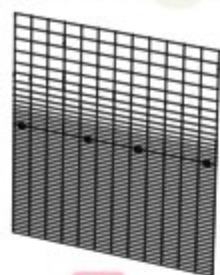

x7

 Run Panel Lower Assembly
041.0280

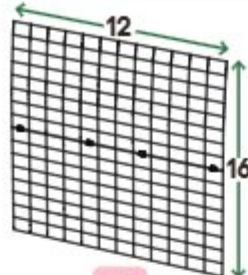

x4

Run Panel Roof Assembly
041.0201



x4

Run Panel Skirt Corner
041.1003

041.0301 A Pole



 
x2

Pole Support
041.0001




x4

Run Panel Skirt
041.1002

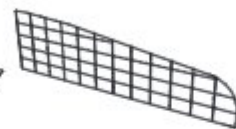

x4

 Run Panel Gable Side
041.1005

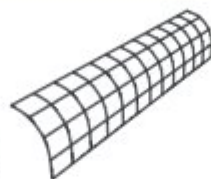

x4

Run Panel Infill
041.1007



x4

Skirt Support
041.1008



x8

Pole Straight
041.1010



x3

Pole Corner Left
041.1011



x3

Pole Corner Right
041.1012



x2

Cable Tie
800.0103



x8

Mighty Clip A
810.0135



x105

Mighty Clip C
810.0134



x103

Mighty Clip E
810.0185



x8

Hook On Bung
810.1067

041.0326 B Door



x1

Door Frame Bottom Hinge MK3
041.0330



x1

 
Door Frame Bottom Bolt With Button Clip MK3
041.0332



x1


Door Bottom MK3
041.0397

041.0230: Door Fixings Pack



x1

 Door Catch MK2 with sleeve
041.0096



x2

Door Stop MK3
041.1244



x3

Door Catch Cap MK2
041.1118



x12

Screw 3.5 x 12mm
800.0002

041.0026: Tube Connection Fixings Pack



x2

Tube Connection Pin
041.1043

041.0025: Bolt Assembly Fixings Pack



x1

Bolt Assembly
041.0024



x5

Screw 3.5 x 12mm
800.0002

041.0246: Hinge Fixings Pack



x4

Hinge Cap
041.1045



x2

Hinge Pin
041.1046

 
810.0138: Bagged Omlet Badge



x2

Omlet Badge
810.0137

041.0202 C Mesh

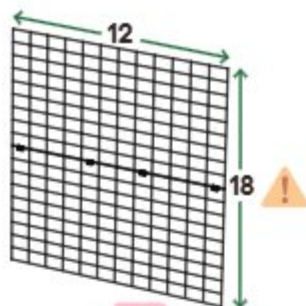

x7
Run Panel Upper Assembly
041.0081

041.0103 C Poles



x8
Pole Straight
041.1010



x32
Mighty Clip C
810.0134



x51
Mighty Clip E
810.0185

041.0228 D Door



x1
Door Frame
Top Hinge
MK3
041.0131

 


x1
Door Frame
Top Bolt With
Button Clip Mk3
041.0133




x1
Door Top
MK3
041.0298

041.0230: Door Fixings Pack



x1
Door Catch
MK2 with sleeve
041.0096

 

x2
Door Stop
MK3
041.1244



x3
Door Catch Cap
MK2
041.1118



x12
Screw
3.5 x 12mm
800.0002

041.0025: Bolt Assembly Fixings Pack



x1
Bolt Assembly
041.0024



x5
Screw
3.5 x 12mm
800.0002

041.0246: Hinge Fixings Pack



x4
Hinge Cap
041.1045



 
x2
Hinge Pin
041.1046

810.0138: Bagged Omlet Badge




x2
Omlet Badge
810.0137


041.0304 E Mesh

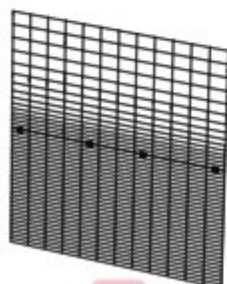

x2
Run Panel Lower
Assembly
041.0280

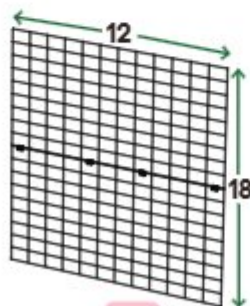 

x2
Run Panel Upper
Assembly
041.0081

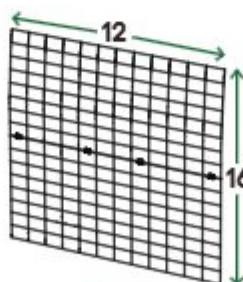 

x2
Run Panel Roof
Assembly
041.0201



x2
Run Panel Skirt
041.1002



 
x2
Skirt Support
041.1008

041.0105 E Poles



x4

Pole Straight
041.1010

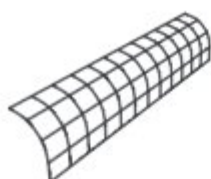

x2

Run Panel Infill
041.1007



x1

Pole Corner Left
041.1011



x1

Pole Corner Right
041.1012



x4

Mighty Clip A
810.0135



x42

Mighty Clip C
810.0134



x40

 
Mighty Clip E
810.0185



x2


Hook On Bung
800.1067

041.0306 F Mesh x2

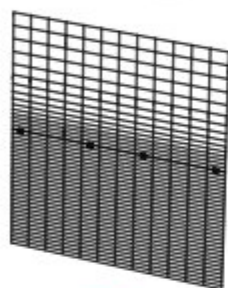

x2

 Run Panel Lower
Assembly
041.0280

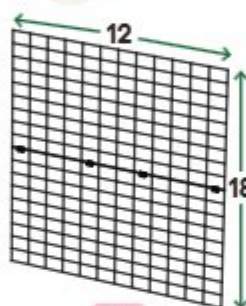


x5

Run Panel Upper
Assembly
041.0081



x2

 Run Panel Skirt
041.1002



x2

Run Panel Gable
Centre
041.1004



x2

Skirt Support
041.1008

041.0107 F Poles x2



x12

Pole Straight
041.1010



x4

Pole Support
041.0001



x2

Pole Stand
041.0112



x7

Cable Tie
800.0103



x4

Mighty Clip A
810.0135



x42

Mighty Clip C
810.0134



x47

 
Mighty Clip E
810.0185



x2


Hook On Bung
810.1067

041.0308 G Mesh x2

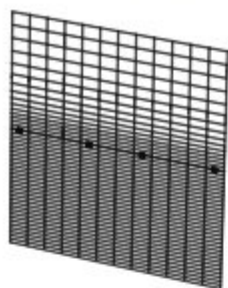


x2

 Run Panel Lower Assembly
041.0280

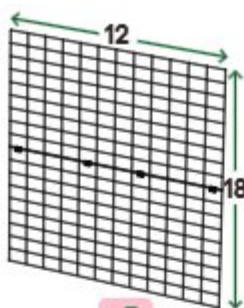


x3

 Run Panel Upper Assembly
041.0081

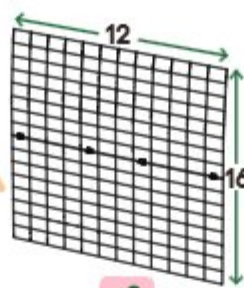

x2

 Run Panel Roof Assembly
041.0201



x2

Run Panel Skirt
041.1002



x2

 
Skirt Support
041.1008

041.0109 G Poles x2



x7

Pole Straight
041.1010

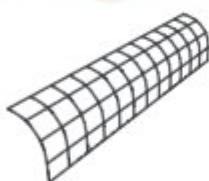

x2

Run Panel Infill
041.1007



x1

Pole Support
041.0001



x1

Pole Stand
041.0112



x1

Pole Corner Left
041.1011



x1

Pole Corner Right
041.1012



x2

Cable Tie
800.0103



x4

Mighty Clip A
810.0135



x47

Mighty Clip C
810.0134



x45

 
Mighty Clip E
810.0185



x2

Hook On Bung
810.1067

041.0260 N Pack x2

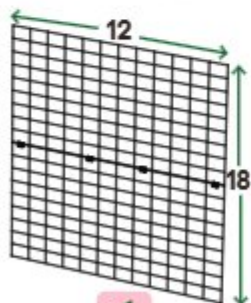

x1

Run Panel Upper Assembly
041.0081



x3

Pole Straight
041.1010



x2

Cable Tie
800.0103



x1

Pole Support
041.0001



x1

Pole Stand
041.0112



 
x4

Mighty Clip C
810.0134



x4

Mighty Clip E
810.0185

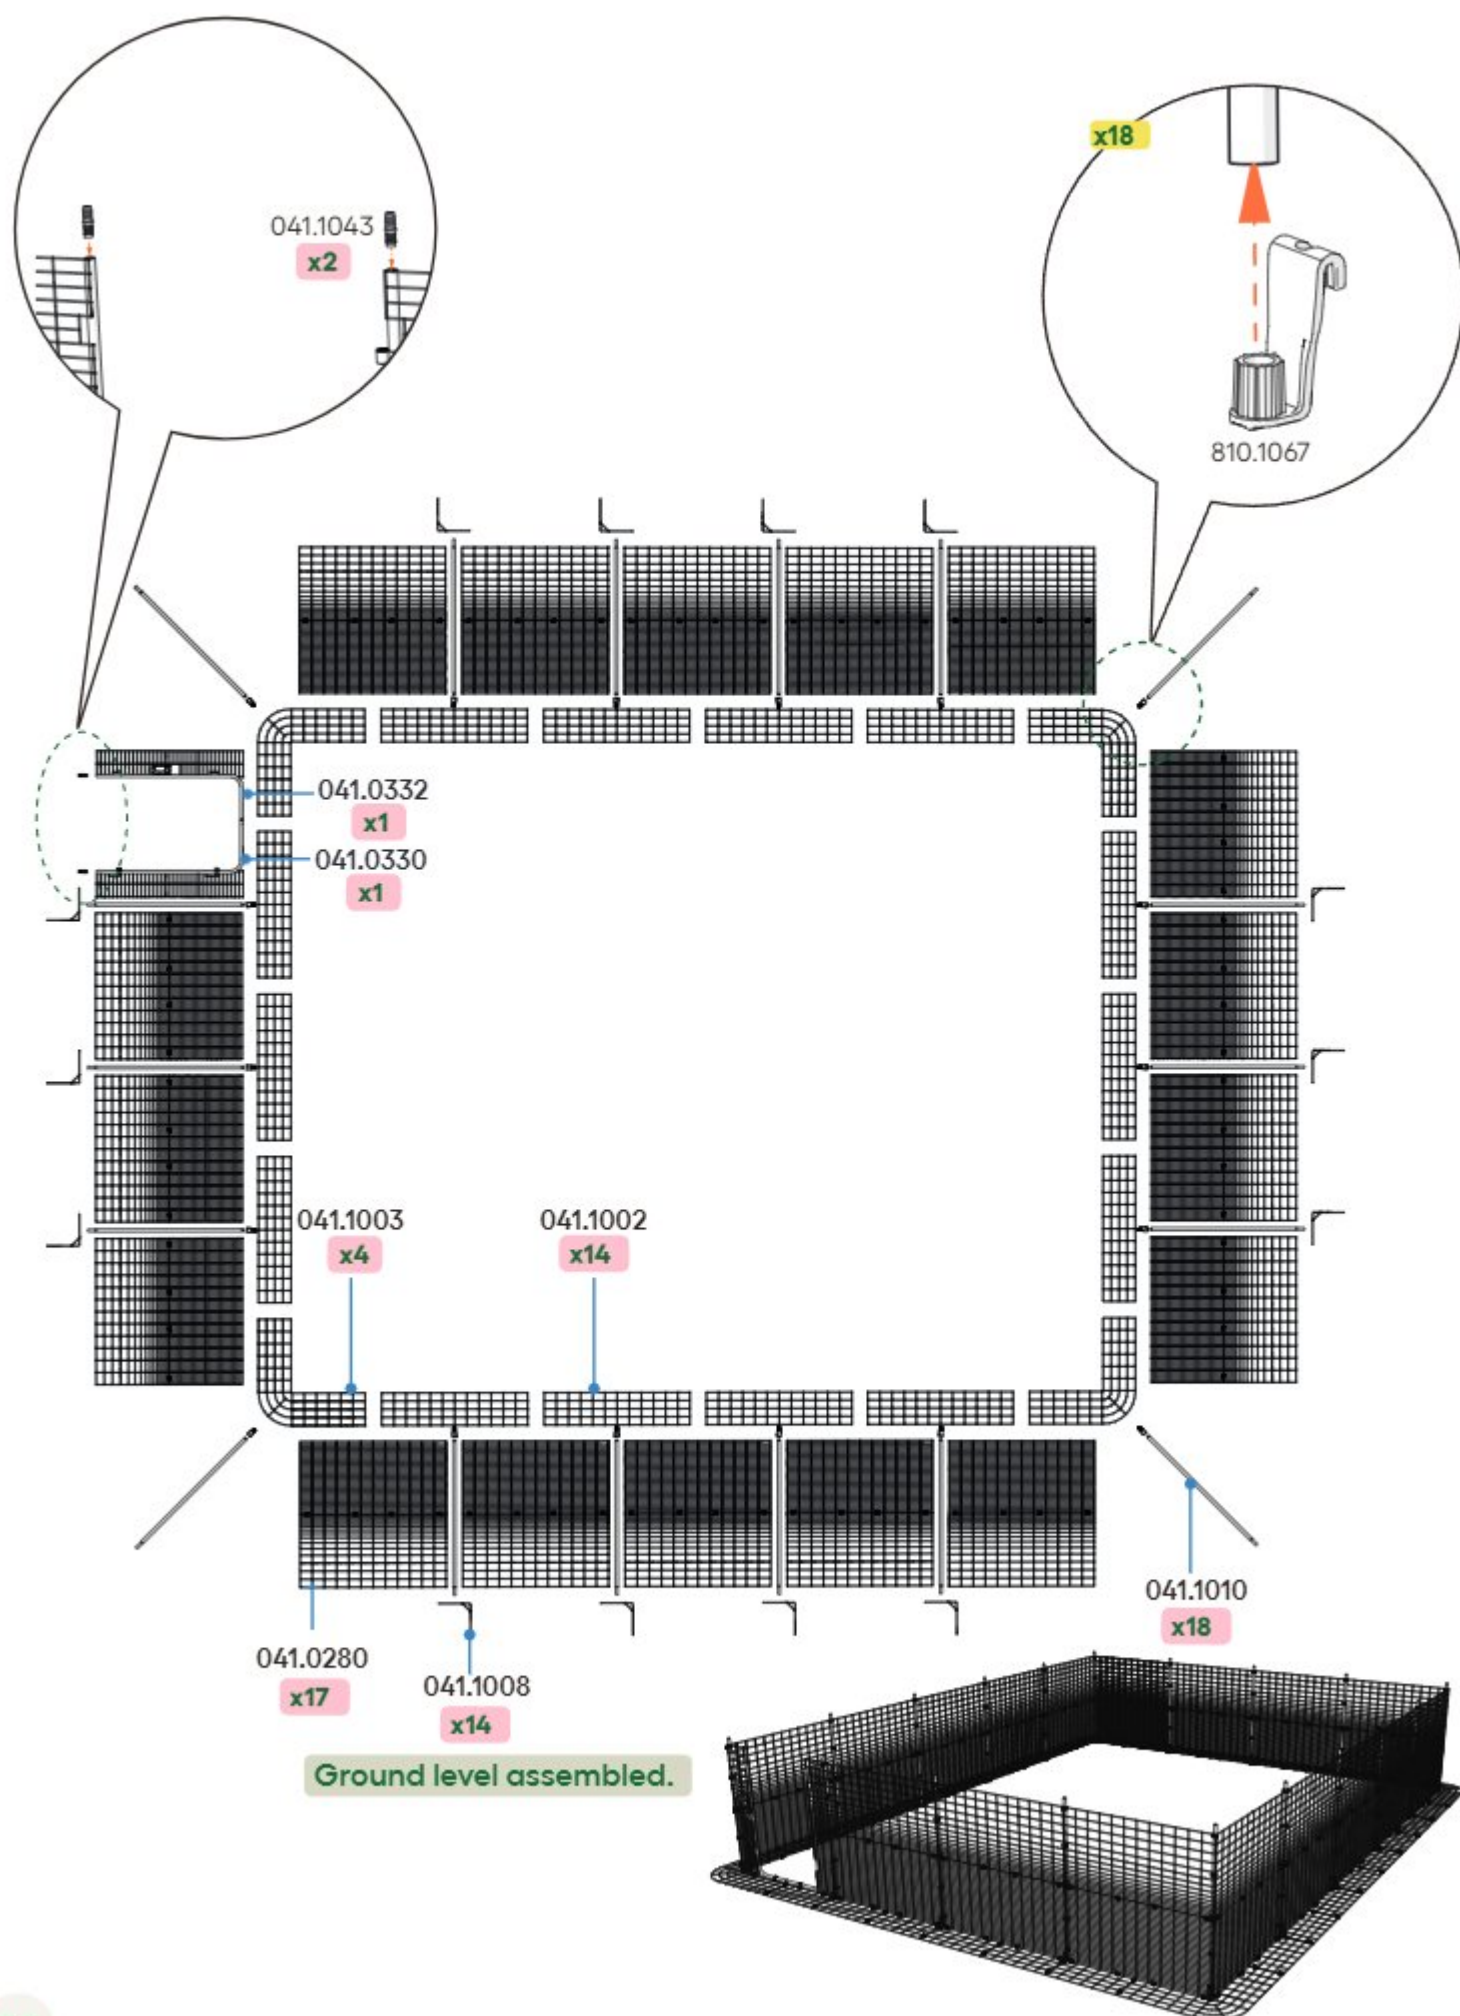


1 EN Lay the parts for the ground level on the floor. Clip the **skirt panels 041.1002** and **041.1003** together. See page 61 for clip types and positions.

2 EN Choose where you want to put the door frame. It can go in any position. Doors open outwards with lock on the left. (Attach doors once run is complete.)

3 EN Start at a corner and clip **Pole Straight (041.1010)** to **2 Run Panel Lowers (041.0280)** using **6 Mighty Clips E (810.0185)**. See page 09 for how to use clips.

4 EN Complete the ground level referring to the diagram on page 61 for clip types and positions.

 5 EN Attach 2 **Tube Connection Pins (041.1043)**.

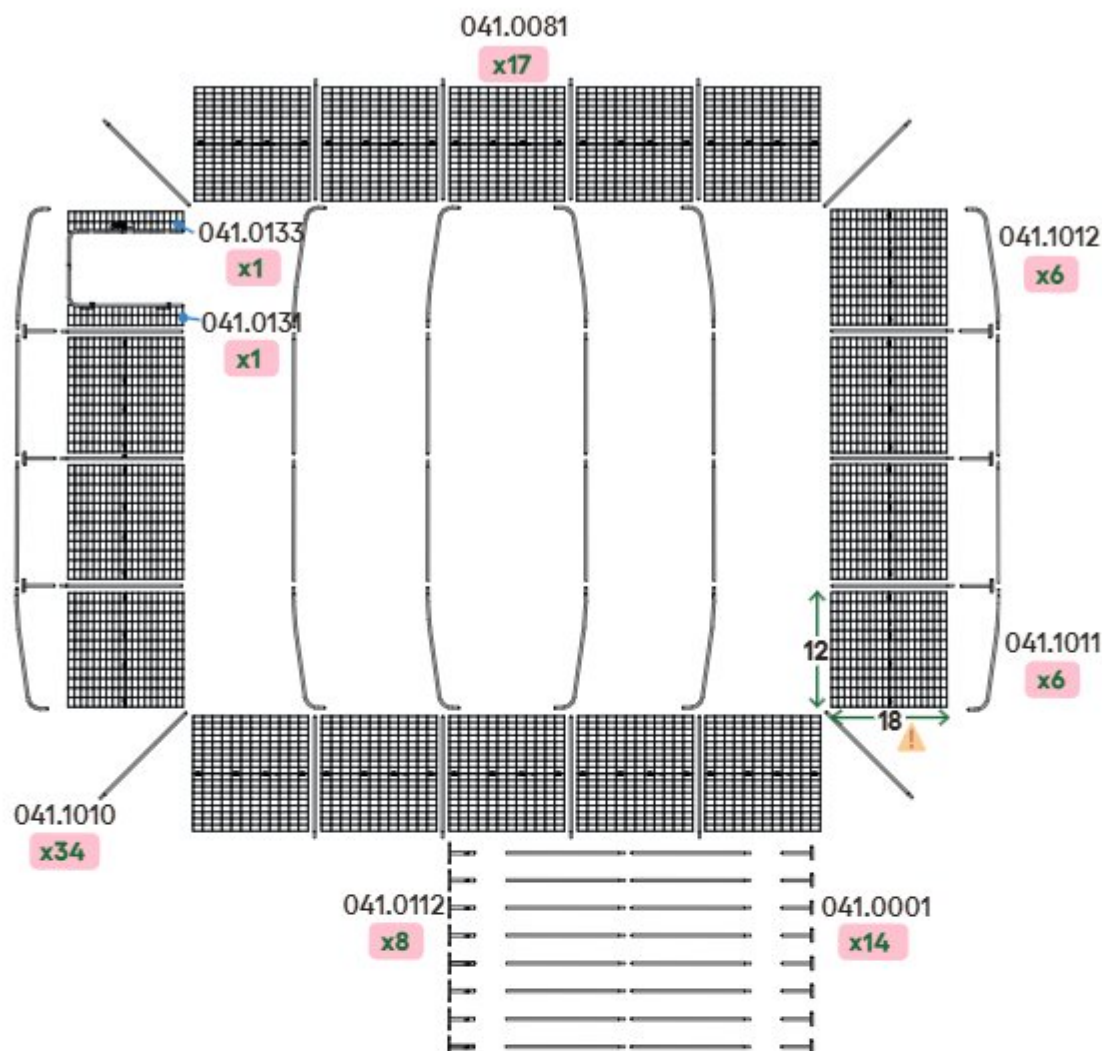


1 EN Assemble the **Roof Poles** (041.1011 + 041.1012). They simply slide together.

2 EN Slide the arches you have just assembled, the door frame and all upright poles onto the ground level of your Outdoor Pet Run.


3 EN Slide the **Pole Supports** (041.0001) onto the **Pole Straight** (041.1010) at both ends of the run.

 4 EN Assemble the **roof supports** (041.0112, 041.1010 and 041.0001). Put them in place under the central roof tubes. Complete the Mid level referring to the diagram on page 61 for clip types and positions.

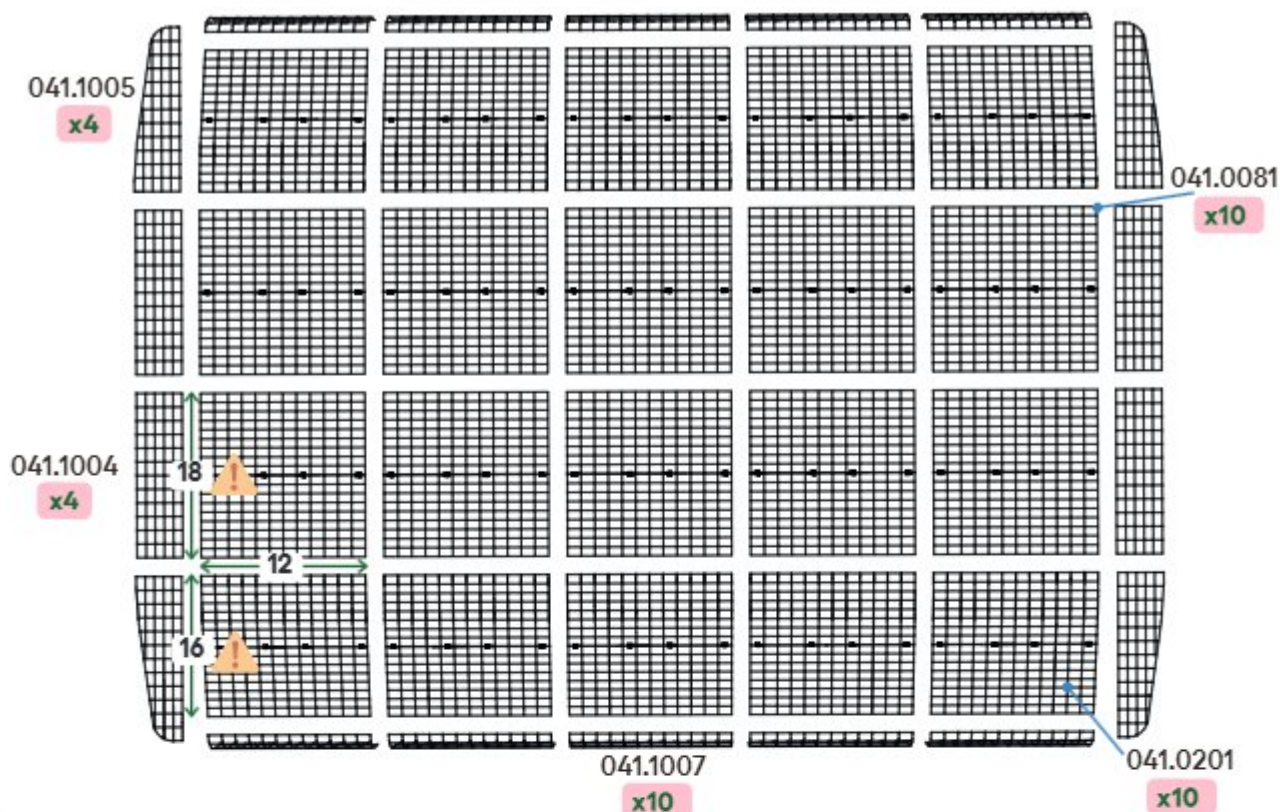


1 EN Clip Infill Panels (041.1007) and Gable Side Panels (041.1005) to level below.

 2 EN Clip Roof Panels (041.0201).

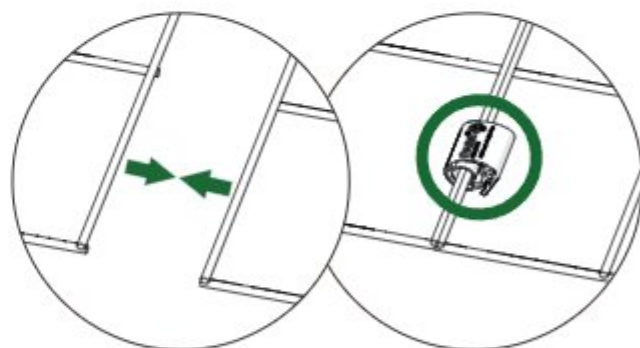


3 EN Cable tie the top of each Pole Support (041.0001) to the pole and panels above it.

 Assemble doors.

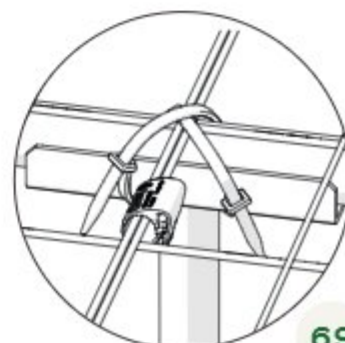


EN Diagram showing all **Mighty Clip** (810.0135, 810.0134, 810.0185) positions

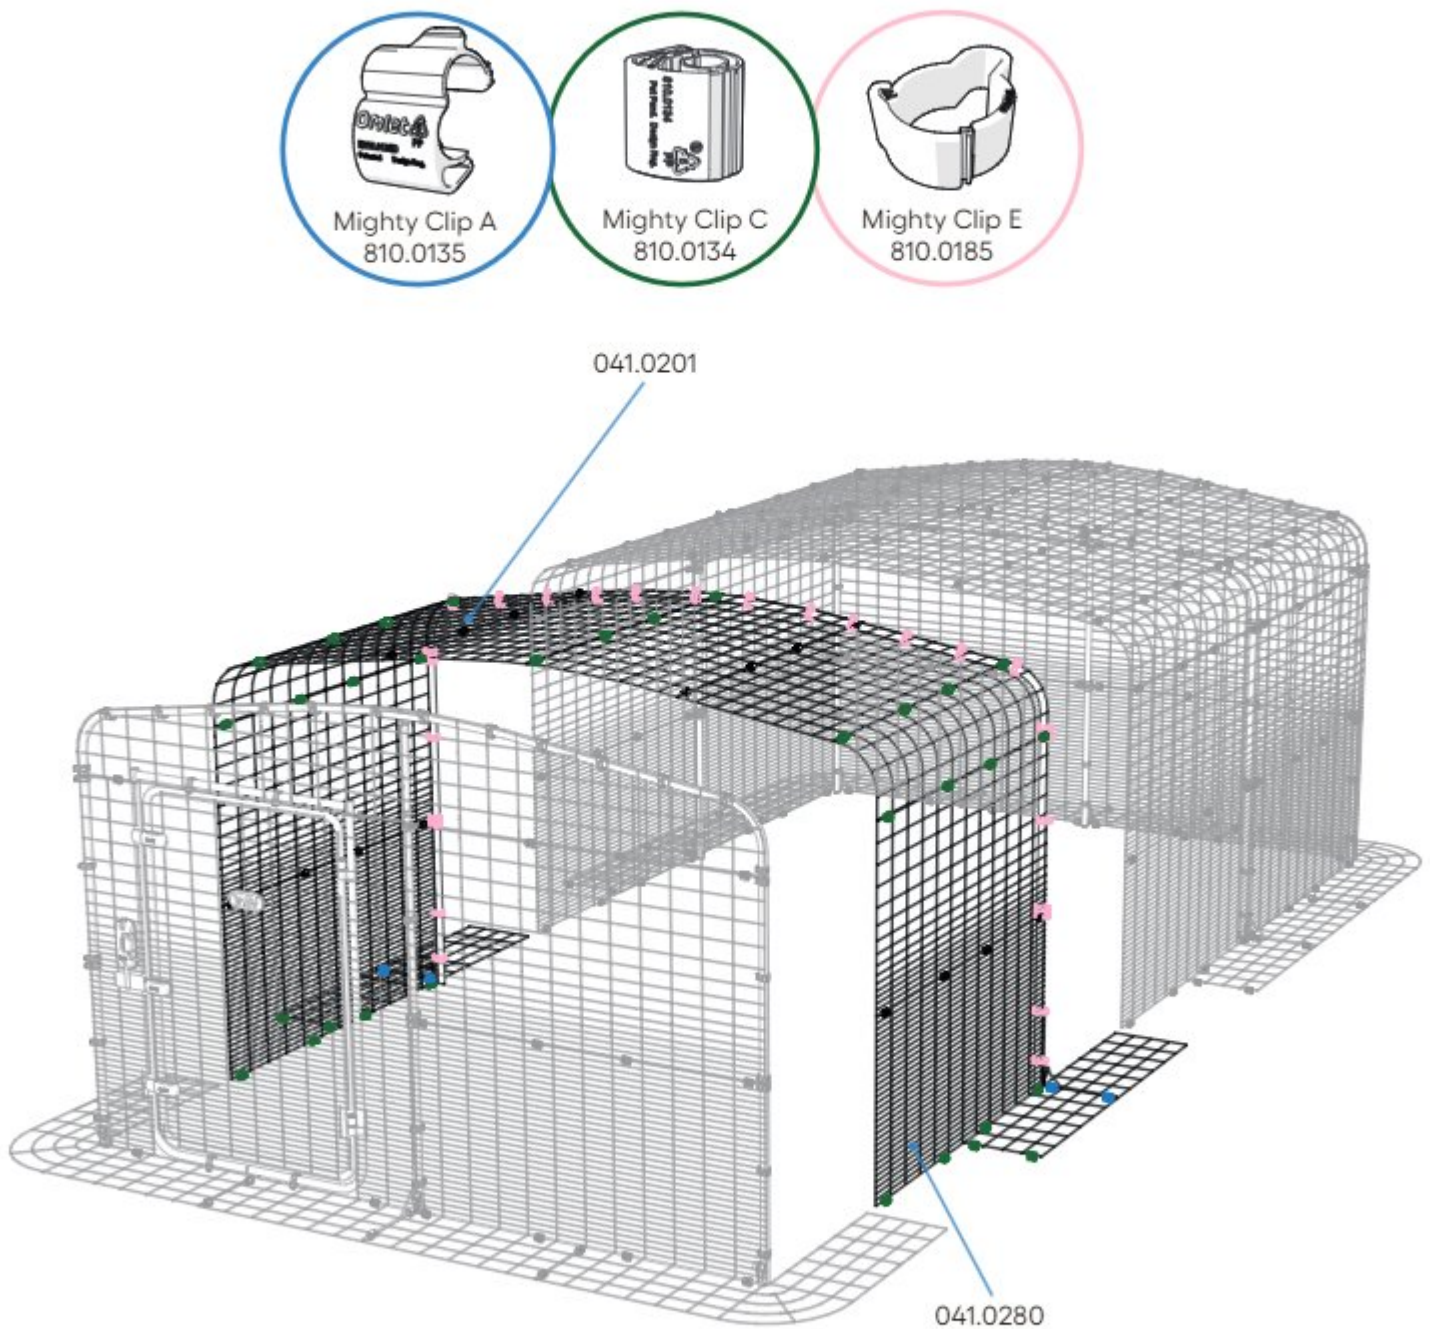 


See page 09 for how to use clips

 041.0315 **J** Mesh

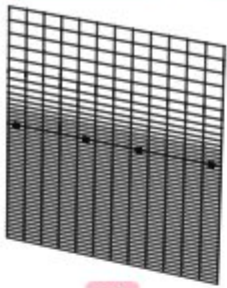

x2

 Run Panel Lower
Assembly
041.0280

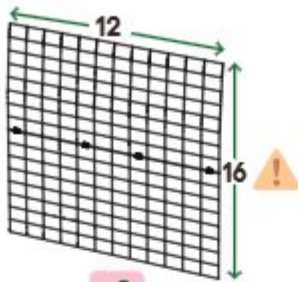

x2

Run Panel Roof
Assembly
041.0201



x2

 
Run Panel Skirt
041.1002



x2

Skirt Support
041.1008

041.0116 **J** Poles

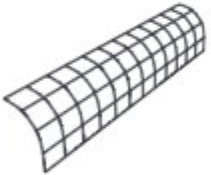

x2

Run Panel Infill
041.1007



x2

Pole Straight
041.1010



x1

Pole Corner Left
041.1011



x1

Pole Corner Right
041.1012



x4

Mighty Clip A
810.0135



x34

Mighty Clip C
810.0134



x28

Mighty Clip E
810.0185



x2

Hook On Bung
810.1067

2 x 2 x 1 Extension


EN Diagram showing all **Mighty Clip (810.0134, 810.0185)** positions




Mighty Clip C
810.0134



 Mighty Clip E
810.0185

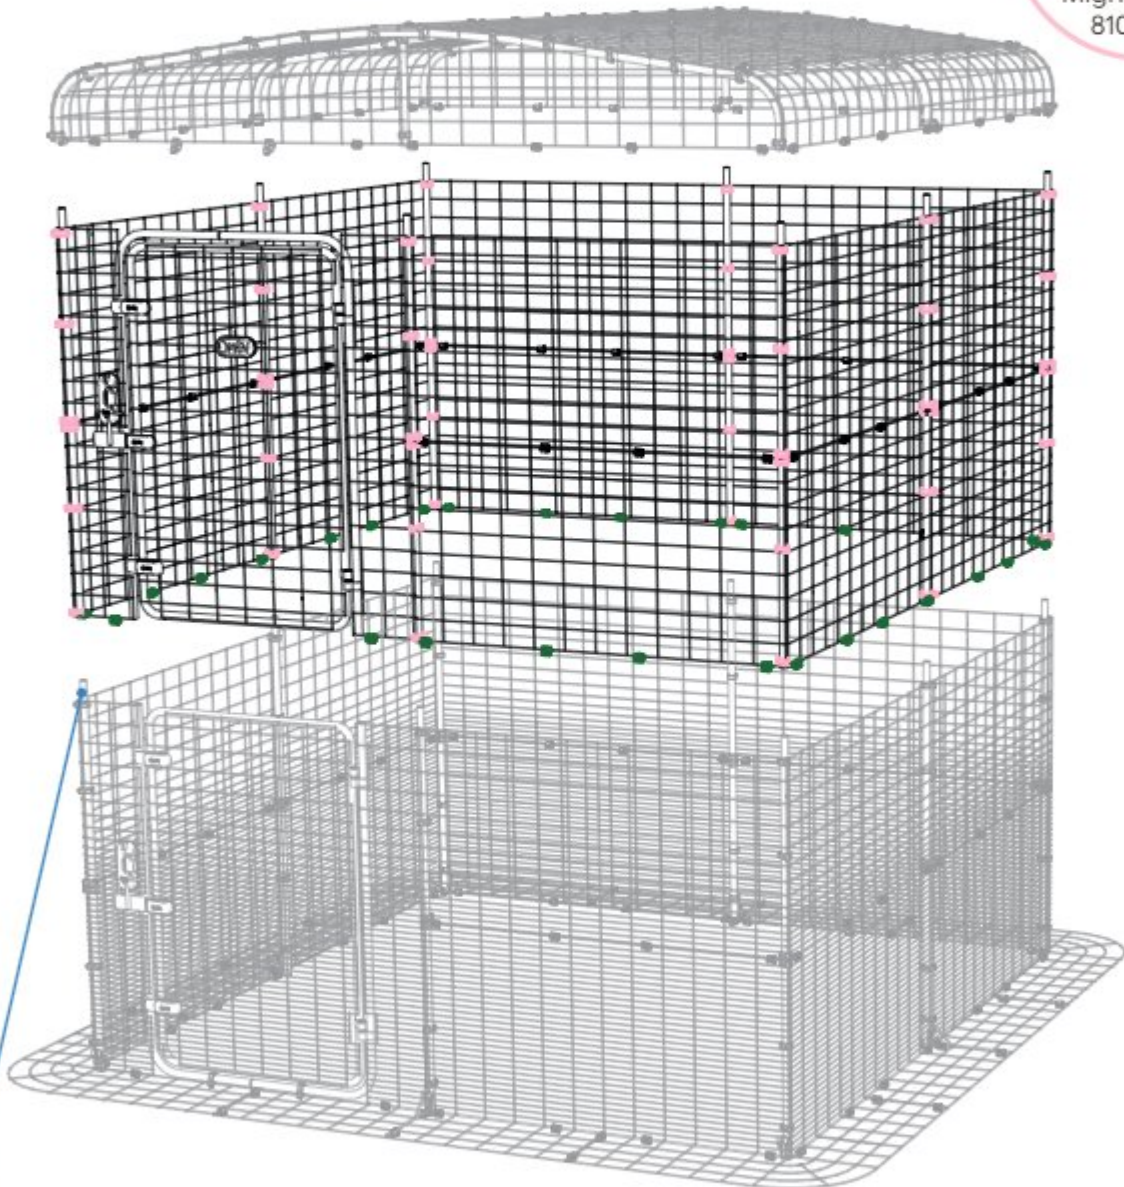

 Remove Brace leaving Tube Connection Pins in the top of the Lower Door Frame

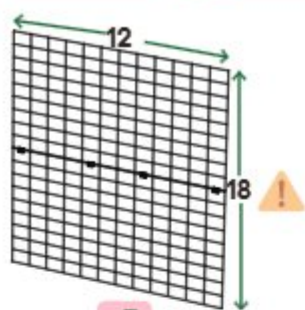041.0202 **C** Mesh

x7

Run Panel Upper
Assembly
041.0081

041.0103 **C** Poles

x8

Pole Straight
041.1010



x32

Mighty Clip C
810.0134



x51

Mighty Clip E
810.0185

041.0228 **D** Door

x1

Door Frame
Top Hinge
MK3
041.0131



x1

 
Door Frame
Top Bolt With
Button Clip MK3
041.0133



x1


Door Top
MK3
041.0298

041.0230: Door Fixings Pack



x1

 Door Catch
MK2 with sleeve
041.0096



x2

Door Stop
MK3
041.1244



x3

Door Catch Cap
MK2
041.1118



x12

Screw
3.5 x 12mm
800.0002

041.0025: Bolt
Assembly Fixings Pack

x1

Bolt Assembly
041.0024



x5

Screw
3.5 x 12mm
800.0002

041.0246: Hinge Fixings Pack



x4

Hinge Cap
041.1045



x2

Hinge Pin
041.1046

810.0138: Bagged
Omlet Badge

x2

Omlet Badge
810.0137


Assemble door.

See page 09 for how to use clips



84

EN Diagram showing all **Mighty Clip** (810.0135, 810.0134, 810.0185) positions

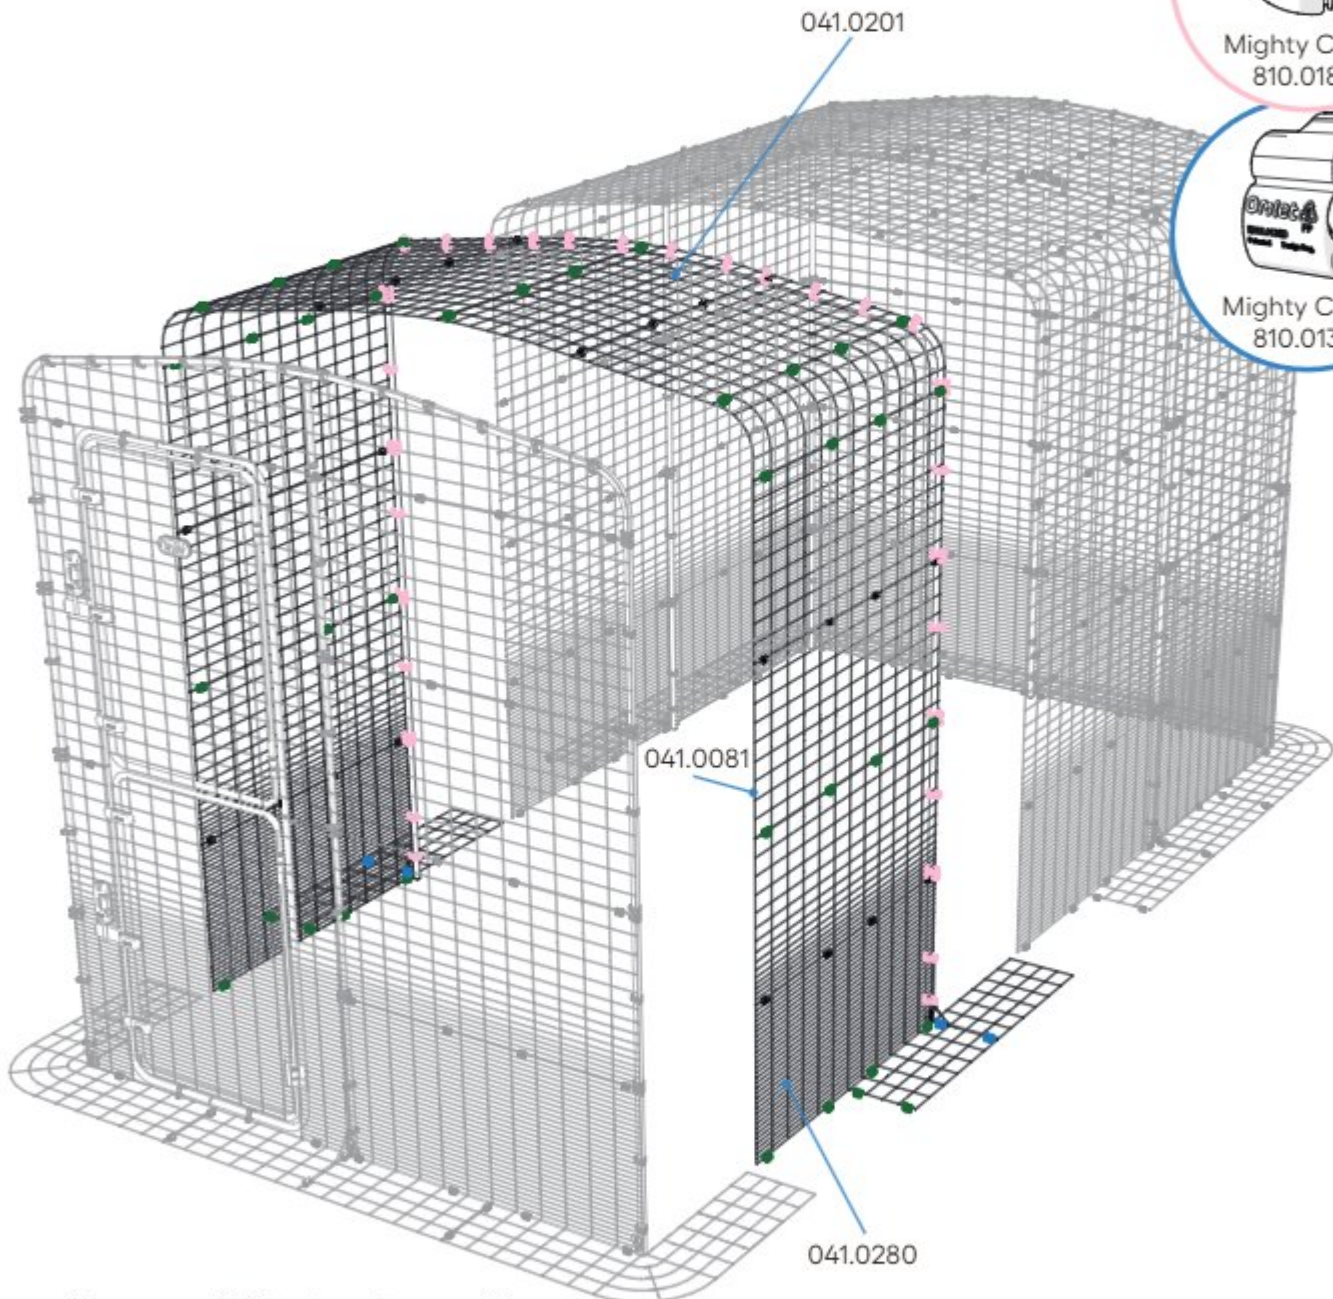 

Mighty Clip C
810.0134

 


Mighty Clip E
810.0185




Mighty Clip A
810.0135


See page 09 for how to use clips

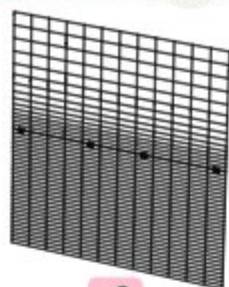041.0304 **E** Mesh

 
x2

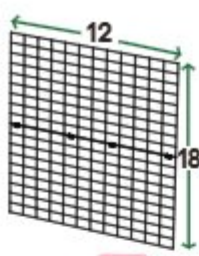Run Panel Lower
Assembly
041.0280

 x2

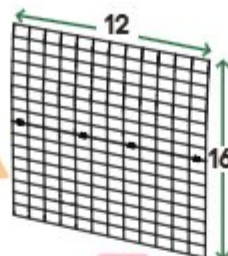Run Panel Upper
Assembly
041.0081

 
x2

Run Panel Roof
Assembly
041.0201

x2

Run Panel Skirt
041.1002

 x2

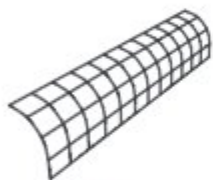Skirt Support
041.1008041.0105 **E** Poles

x2

Run Panel Infill
041.1007

x4

Pole Straight
041.1010

x1

Pole Corner Left
041.1011

x2

Pole Corner Right
041.1012

4

Mighty Clip A
810.0135

x42

Mighty Clip C
810.0134


x40

Mighty Clip E
810.0185


x2

Hook On Bung
810.1067


EN Diagram showing all **Mighty Clip** (810.0135, 810.0134, 810.0185) positions

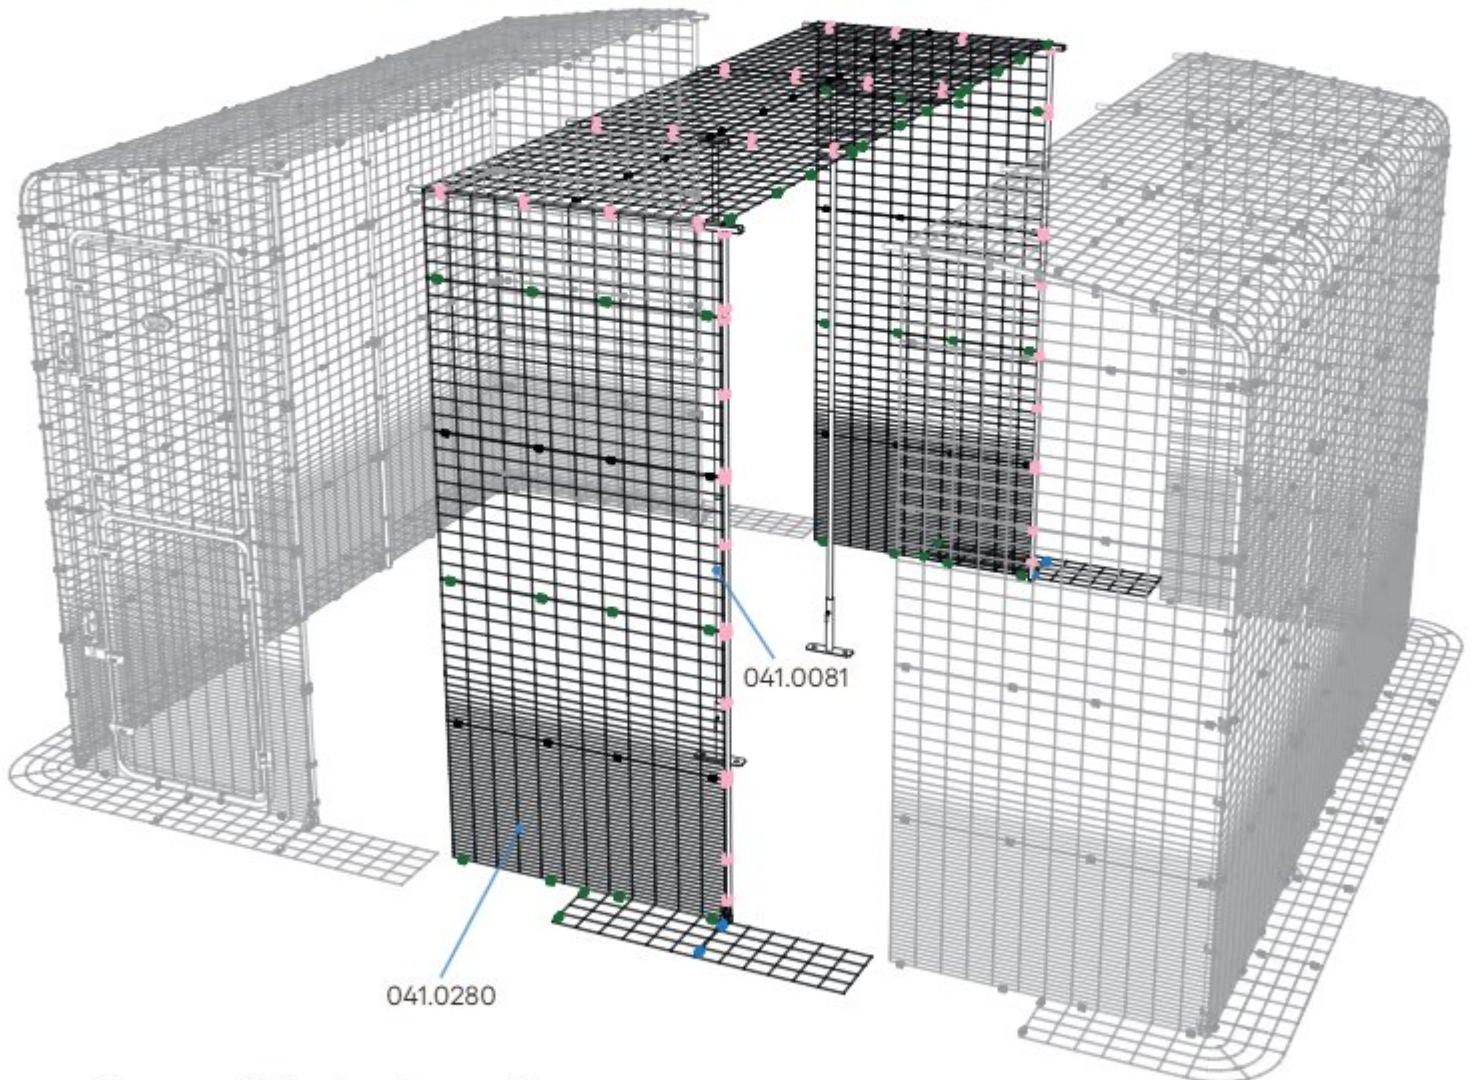 

See page 09 for how to use clips

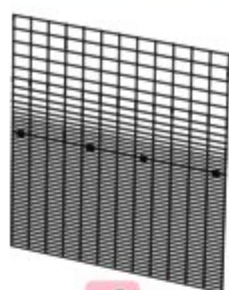 041.0306 **F** Mesh

 x2

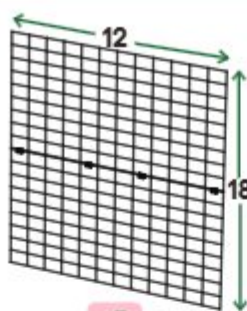Run Panel Lower
Assembly
041.0280

x5

Run Panel Upper
Assembly
041.0081

x2

Run Panel Skirt
041.1002

x2

Run Panel Gable
Centre
041.1004

x2

Skirt Support
041.1008041.0107 **F** Poles

x4

Pole Support
041.0001

x2

Pole Stand
041.0112

x12

Pole Straight
041.1010

x7

Cable Tie
800.0103

x4

Mighty Clip A
810.0135

x42

Mighty Clip C
810.0134

x47


Mighty Clip E
810.0185

x2


Hook On Bung
810.1067

3 x 1 x 2 Extension

EN Diagram showing all **Mighty Clip** (810.0135, 810.0134, 810.0185) positions

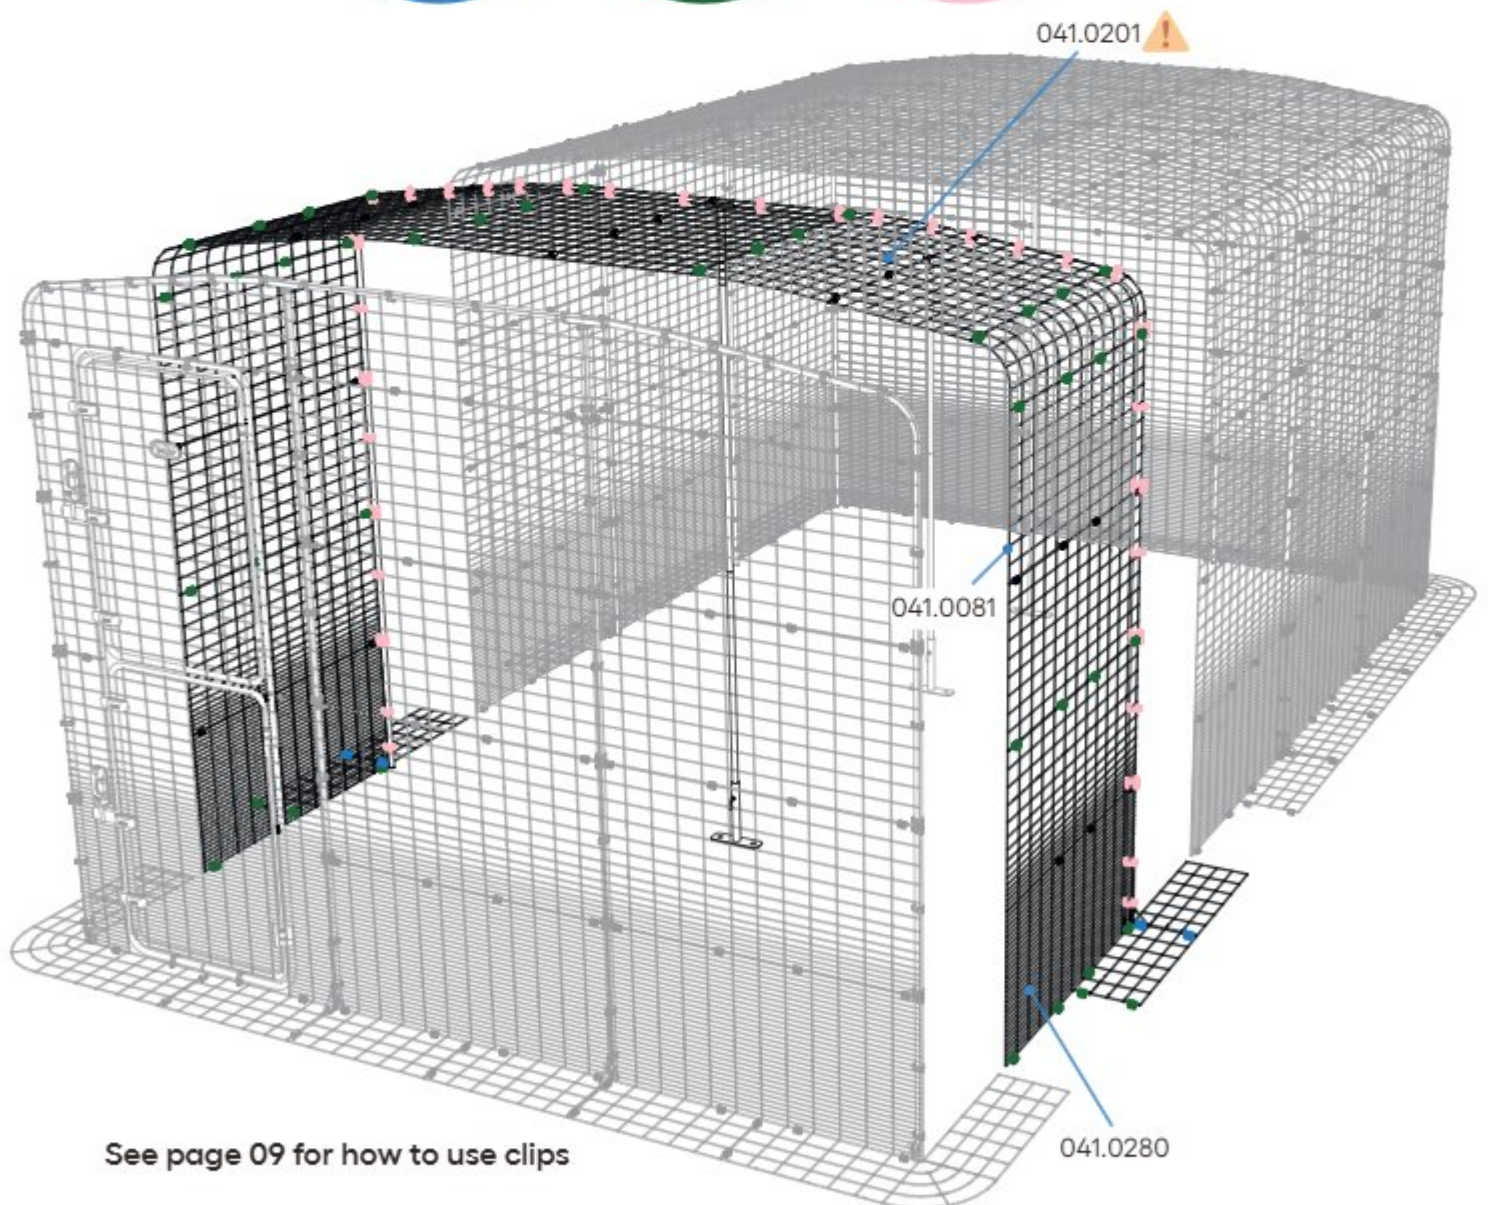 


 041.0308 Mesh

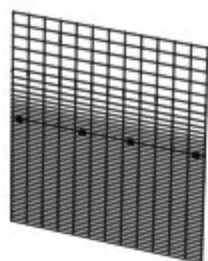


x2

 Run Panel Lower
Assembly
041.0280

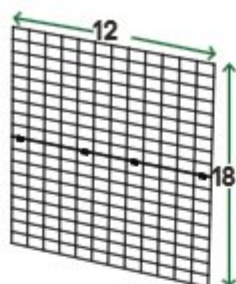

x3

 Run Panel Upper
Assembly
041.0081

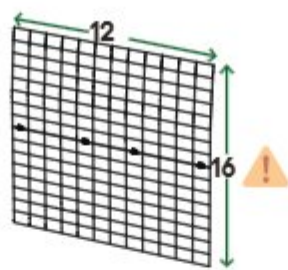

x2

Run Panel Roof
Assembly
041.0201



x2

Run Panel Skirt
041.1002



x2

Skirt Support
041.1008

041.0109 Poles



 
x1

Pole Support
041.0001



x1

Pole Stand
041.0112

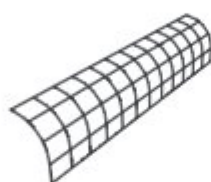

x2

Run Panel Infill
041.1007



x7

Pole Straight
041.1010



x1

Pole Corner Left
041.1011



x1

Pole Corner Right
041.1012



x2

Cable Tie
800.0103



x4

Mighty Clip A
810.0135



x45

Mighty Clip C
810.0134



x47


Mighty Clip E
810.0185




x2

Hook On Bung
810.1067


EN Diagram showing all **Mighty Clip** (810.0135, 810.0134, 810.0185) positions

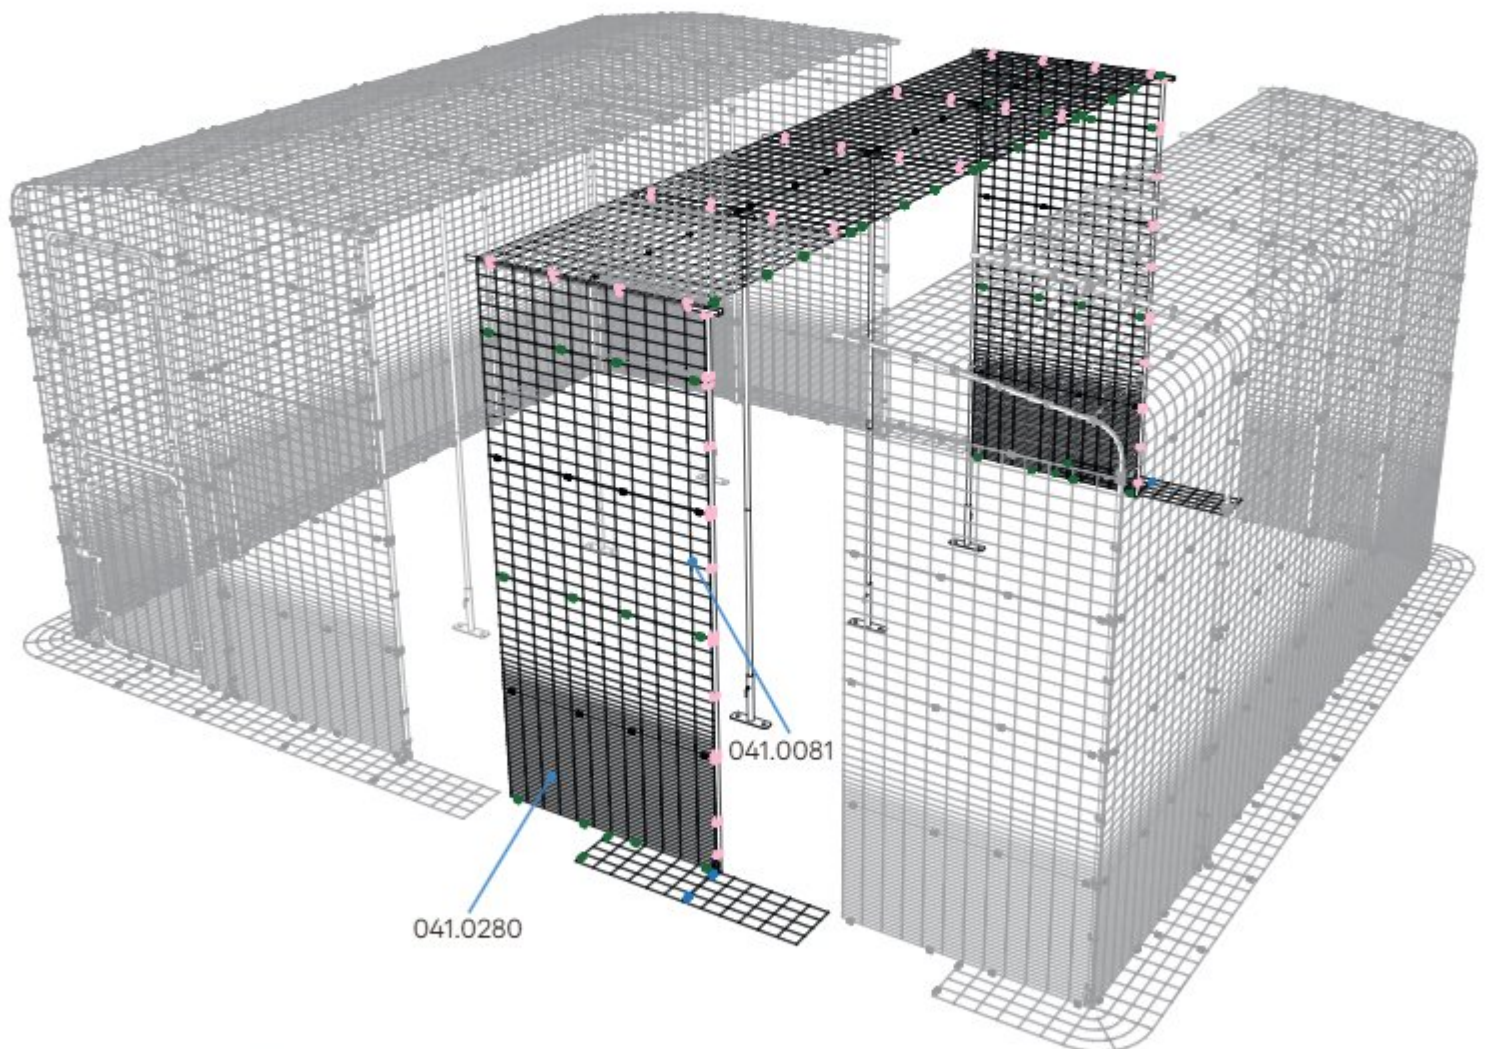 

See page 09 for how to use clips

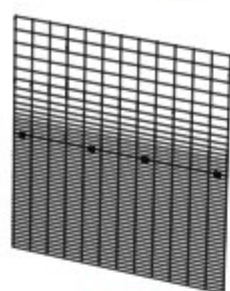 041.0306 **F** Mesh

 x2

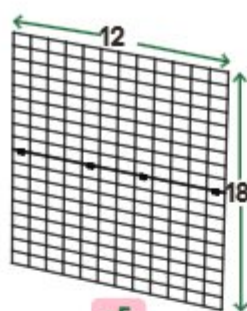Run Panel Lower
Assembly
041.0280

x5

Run Panel Upper
Assembly
041.0081

x2

Run Panel Skirt
041.1002

x2

Run Panel Gable
Centre
041.1004

x2

Skirt Support
041.1008041.0107 **F** Poles

x12

Pole Straight
041.1010

x4

Pole Support
041.0001

x2

Pole Stand
041.0112

x7

Cable Tie
800.0103

x4

Mighty Clip A
810.0135

 
x42

Mighty Clip C
810.0134

x47

Mighty Clip E
810.0185

x2

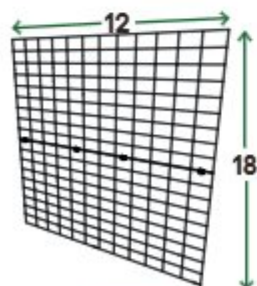Hook On Bung
810.1067041.0260 **N** Pack

x1

Run Panel Upper
Assembly
041.0081

x3

Pole Straight
041.1010

x2

Cable Tie
800.0103

x1

Pole Support
041.0001

x1

Pole Stand
041.0112


x4

Mighty Clip C
810.0134


x4

Mighty Clip E
810.0185


EN Diagram showing all **Mighty Clip (810.0135, 810.0134, 810.0185)** positions

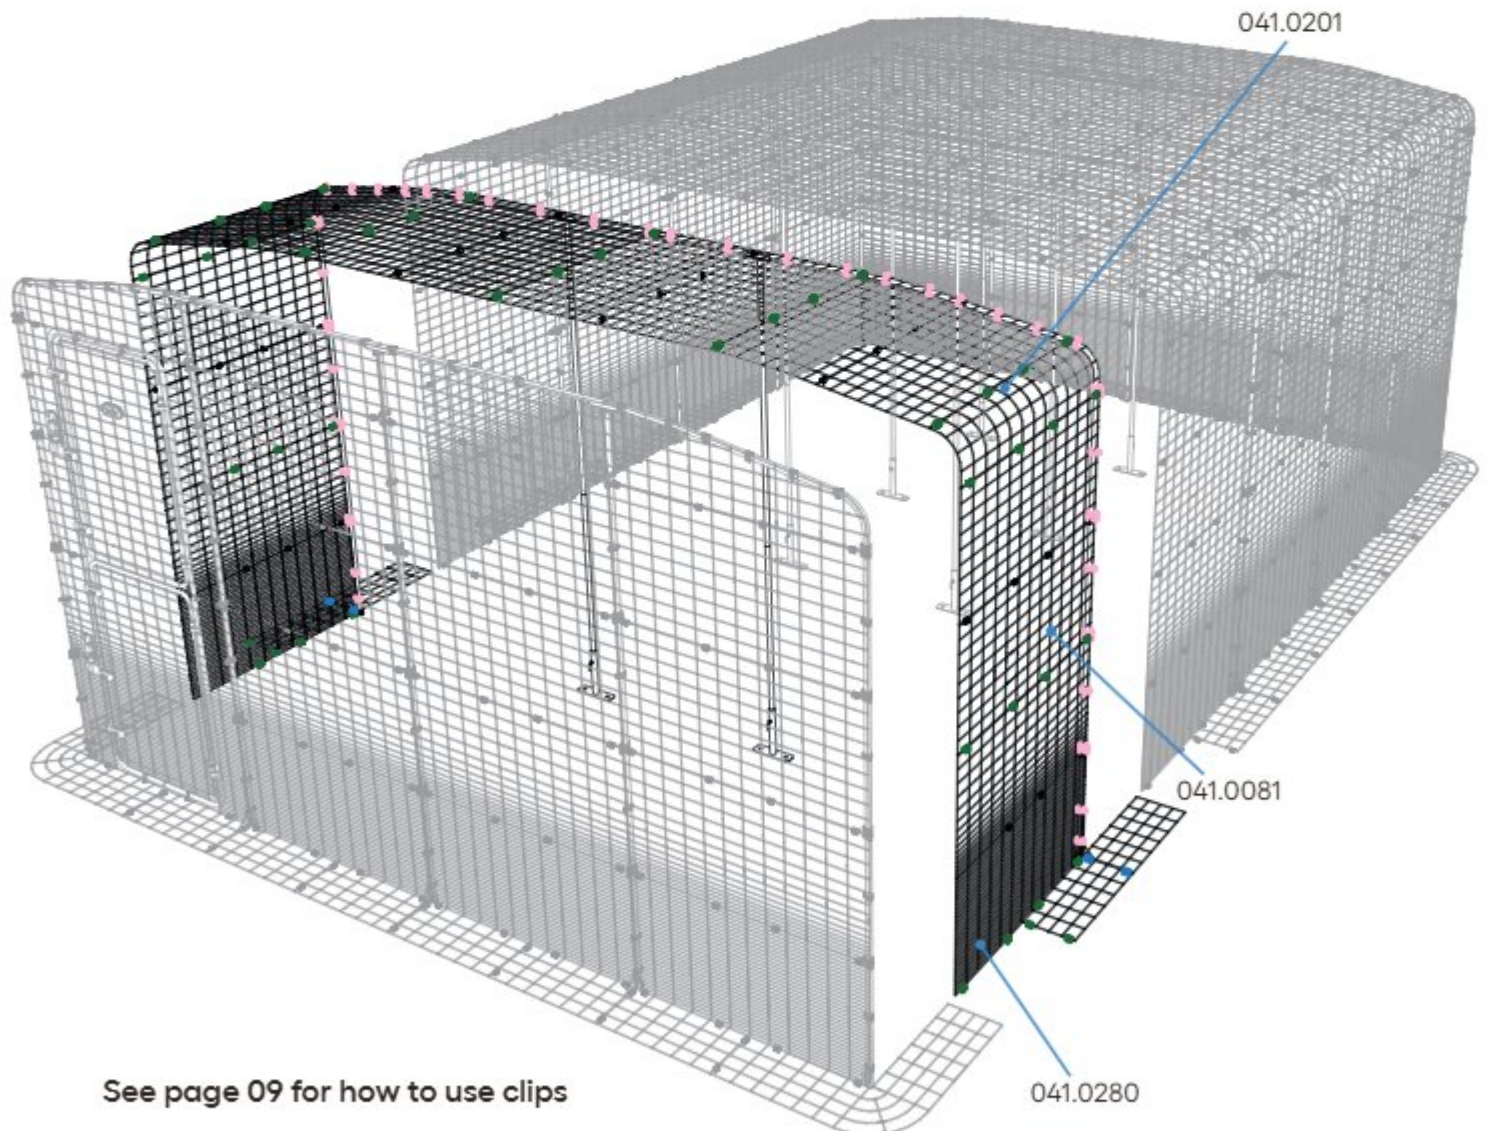 


See page 09 for how to use clips

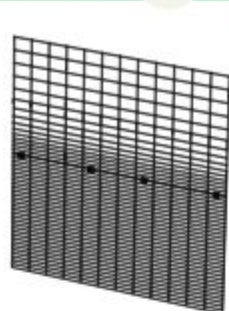 041.0308 **G** Mesh

 x2

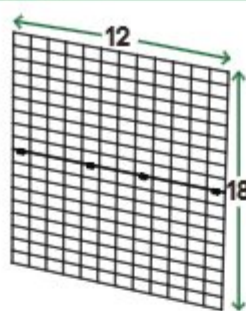Run Panel Lower
Assembly
041.0280

 x3

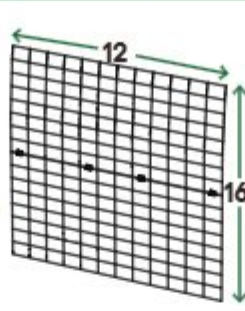Run Panel Upper
Assembly
041.0081

x2

Run Panel Roof
Assembly
041.0201

 
x2

Run Panel Skirt
041.1002

x2

Skirt Support
041.1008041.0109 **G** Poles

x7

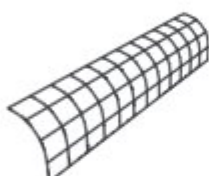Pole Straight
041.1010

x2

Run Panel Infill
041.1007

x1

Pole Support
041.0001

x1

Pole Stand
041.0112

x1

Pole Corner Left
041.1011

x1

Pole Corner Right
041.1012

x2

Cable Tie
800.0103

x4

Mighty Clip A
810.0135

 
x45

Mighty Clip C
810.0134

x47

Mighty Clip E
810.0185

x2

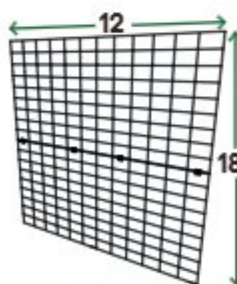Hook On Bung
810.1067041.0260 **N** Pack

x1

Run Panel Upper
Assembly
041.0081

x3

Pole Straight
041.1010

x2

Cable Tie
800.0103

x1

Pole Support
041.0001

x1

Pole Stand
041.0112

 
x4

Mighty Clip C
810.0134


x4

Mighty Clip E
810.0185




Attach Bolt (041.0024) to door frames


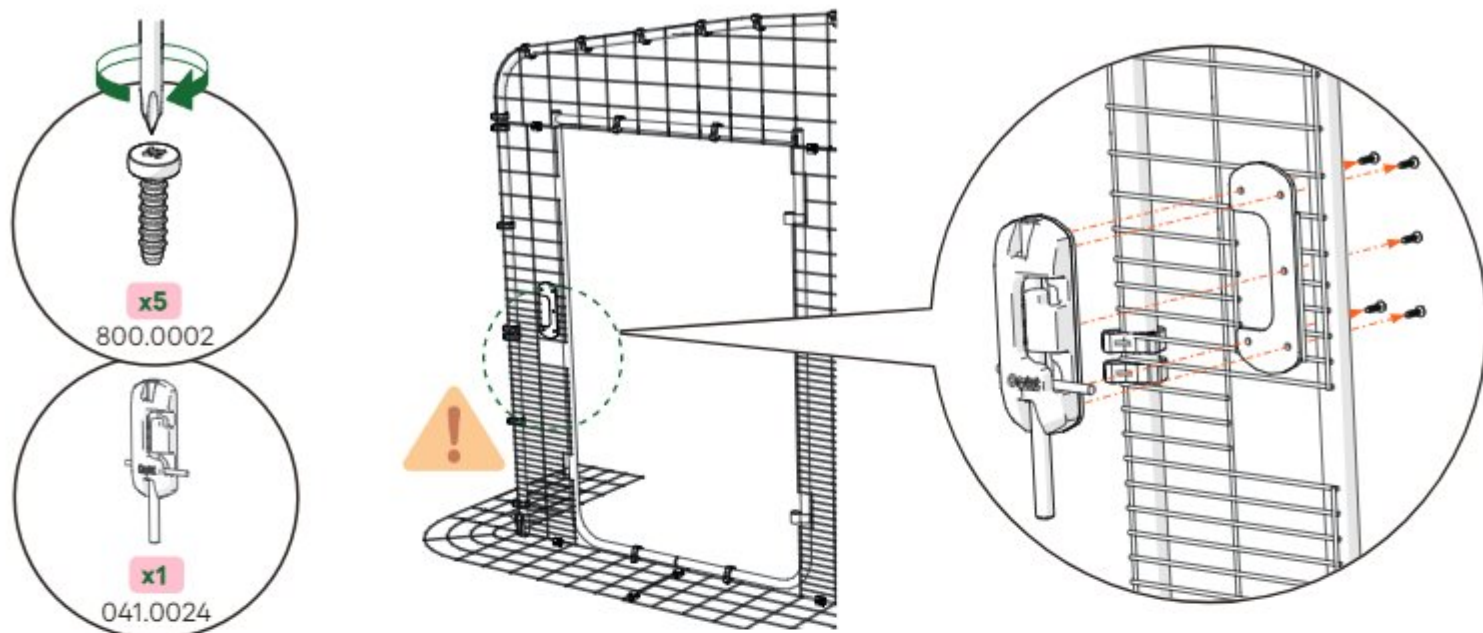


 Attach Door Catch (041.0096) and Door Stops (041.1244)

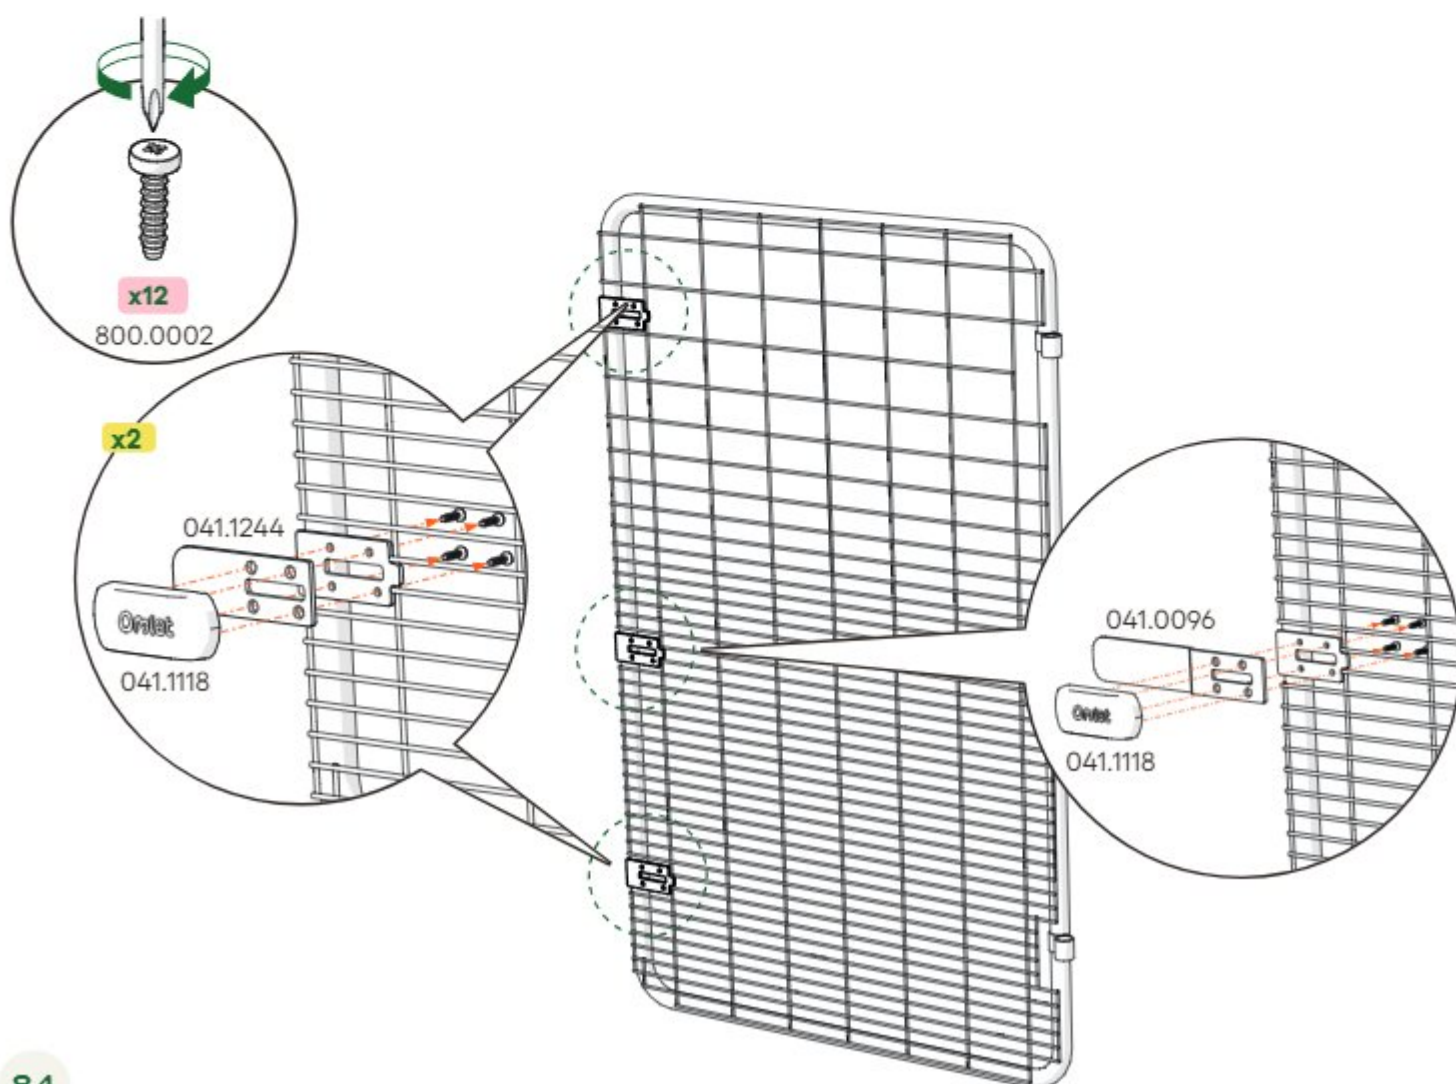

     Attach the door to the frame at the hinges.

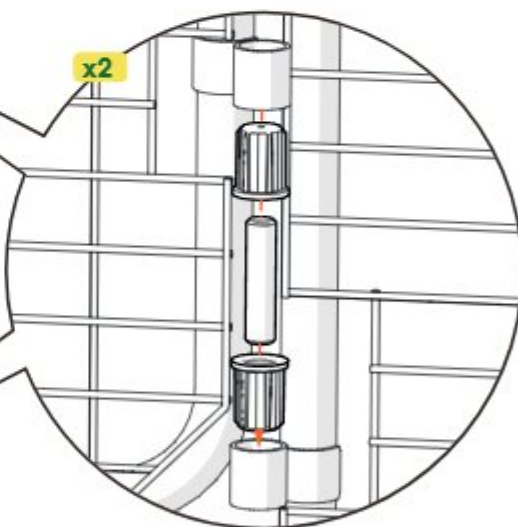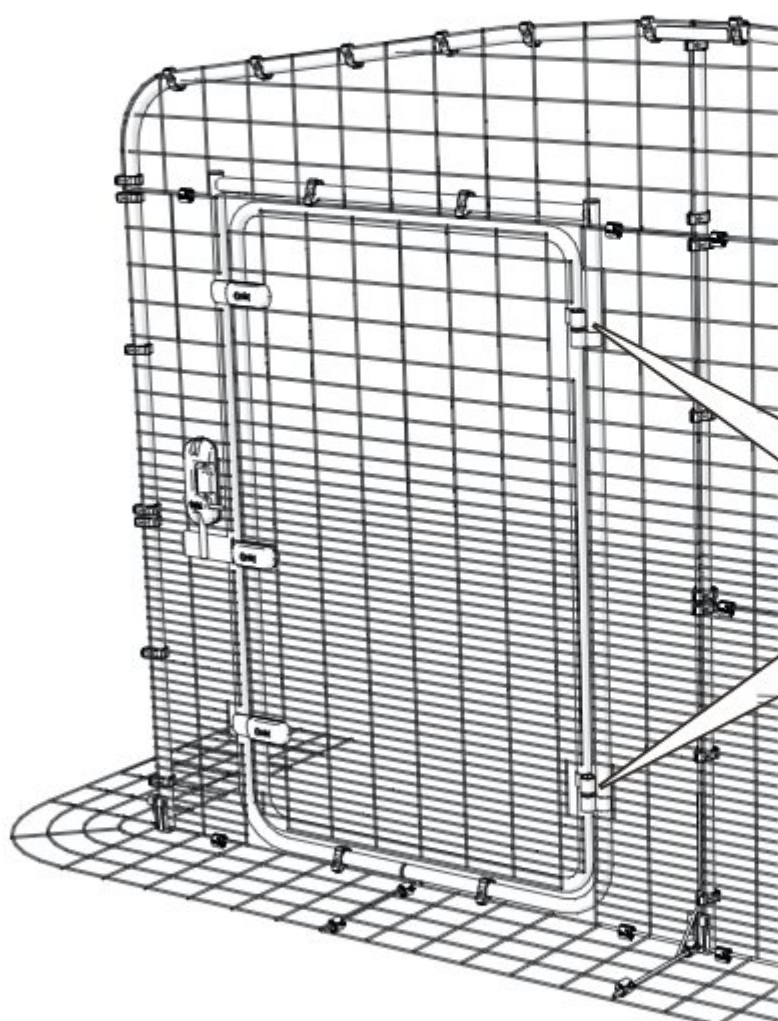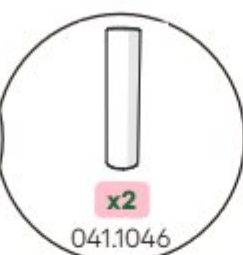

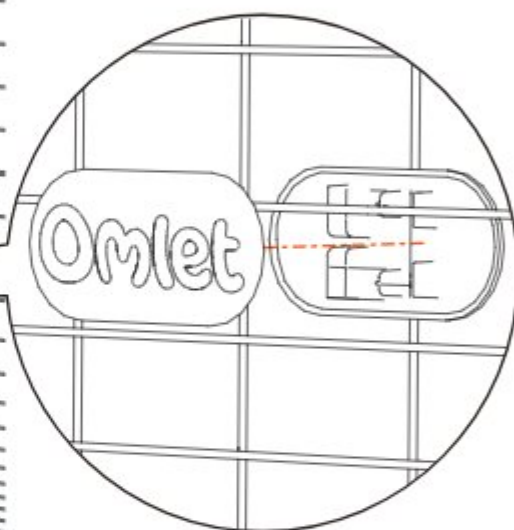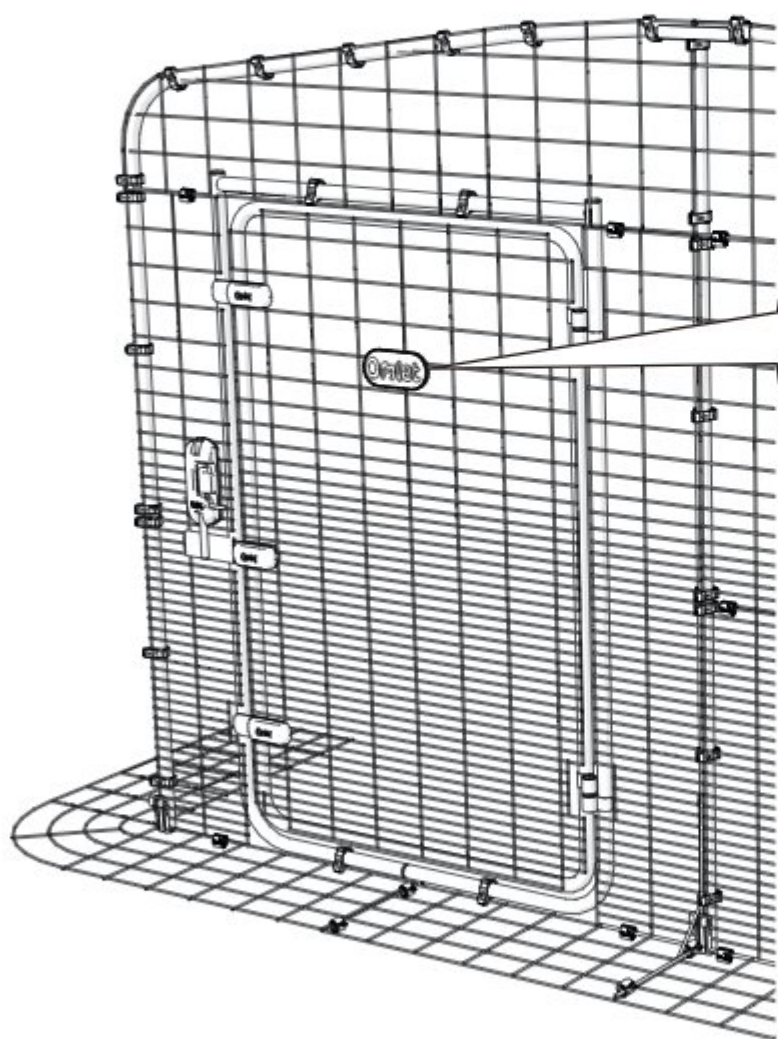




To attach an Omlet perch to the lower half of the run with the smaller mesh pitch, please see the information below.





You will need...





   Do not use

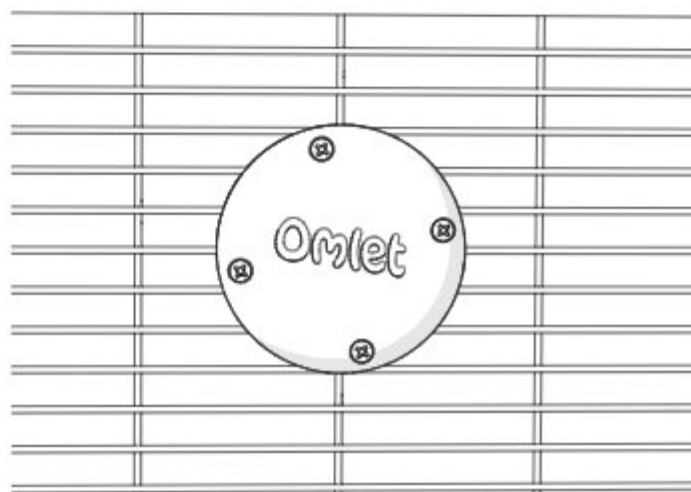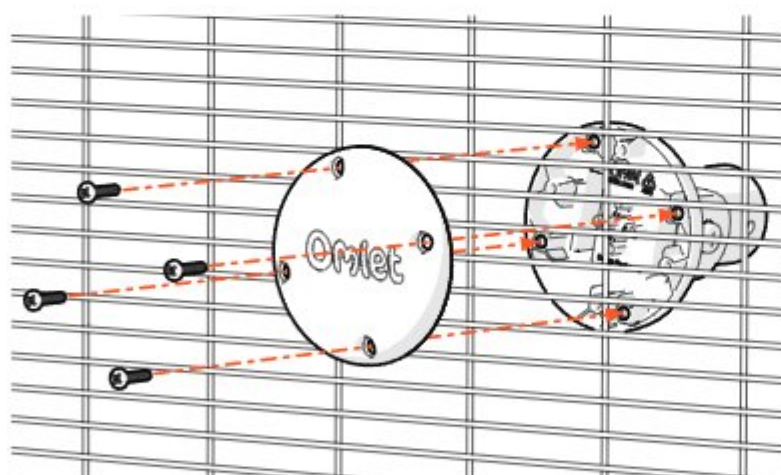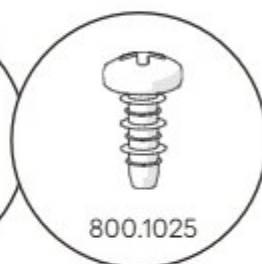


    To attach an Omlet Autodoor to the lower half of the run with the smaller mesh pitch, please see the information below. All other steps must be completed as explained in the Autodoor manual.

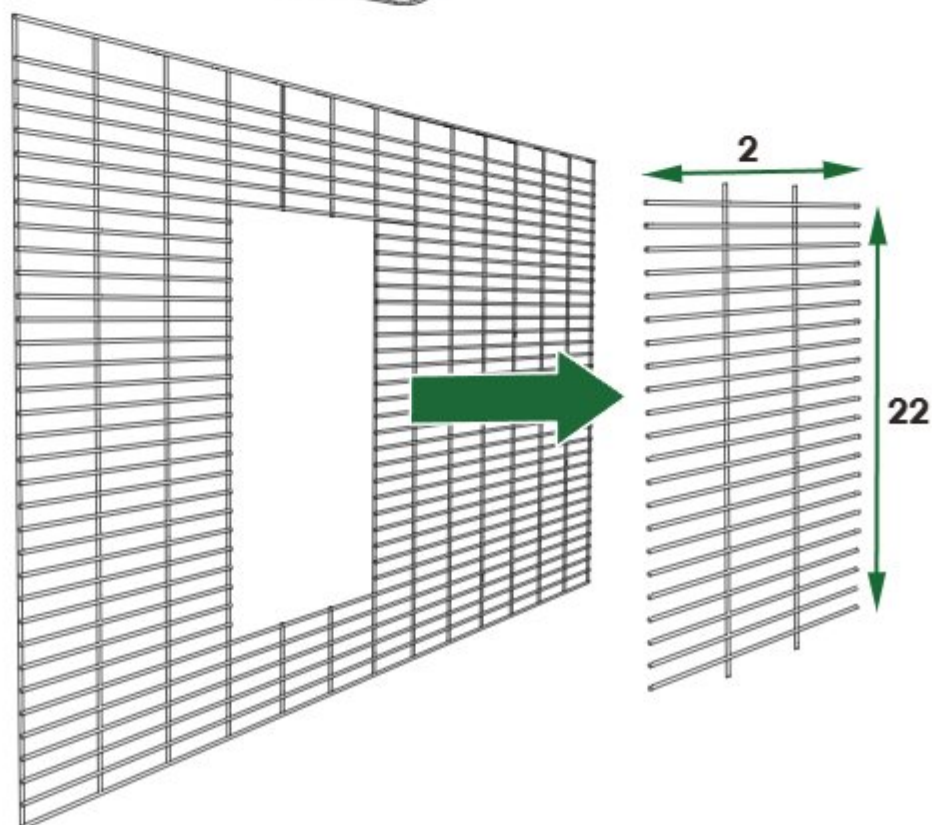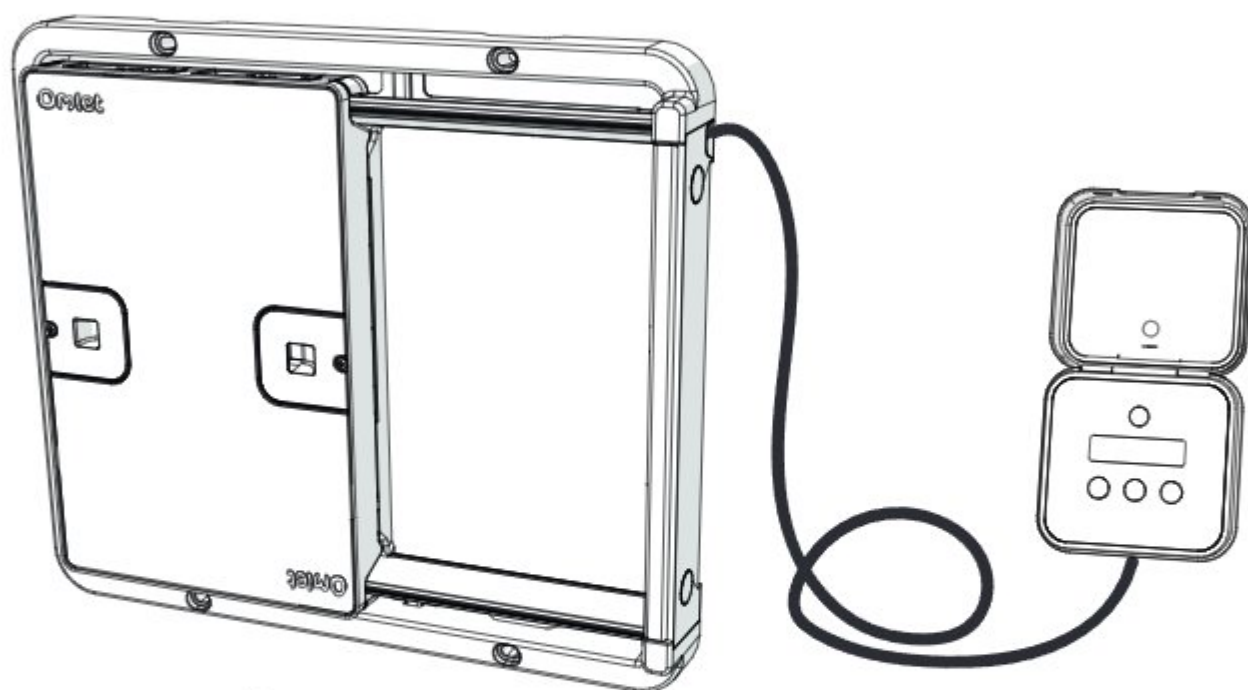

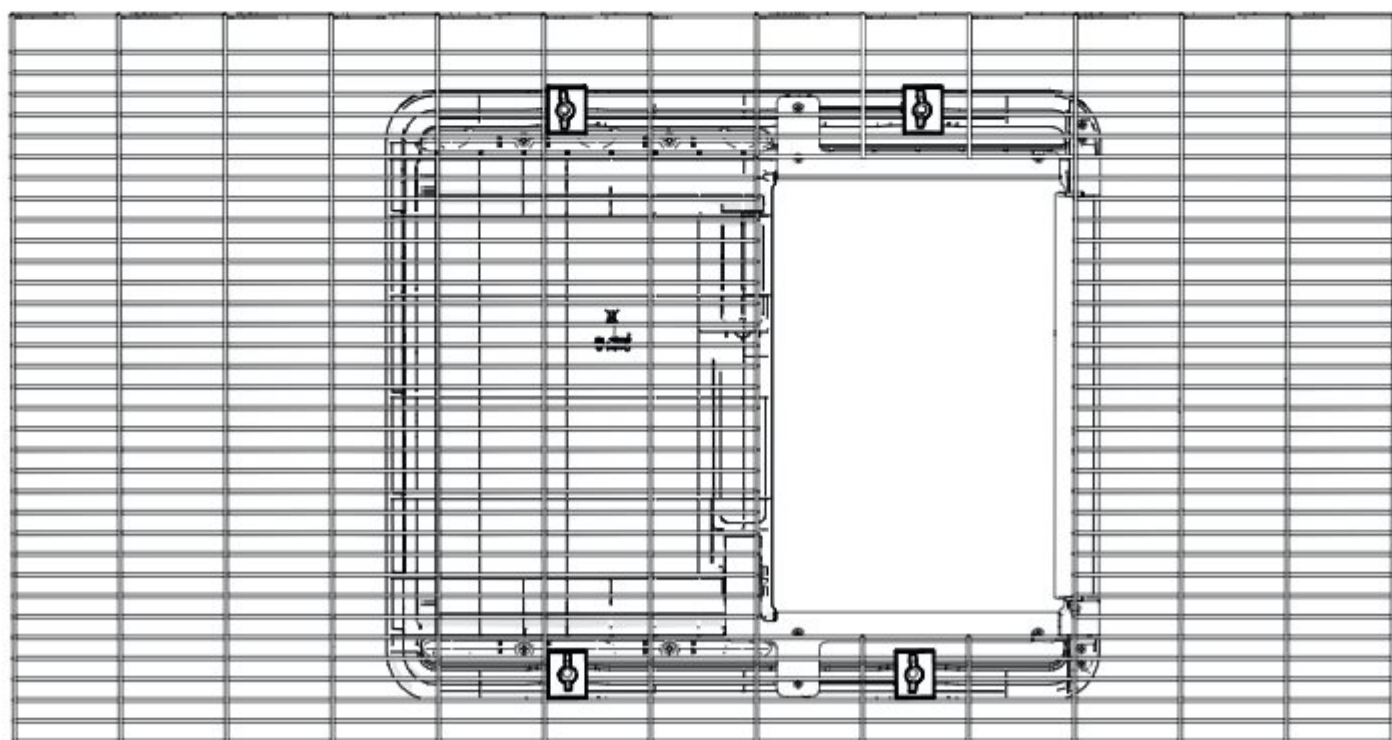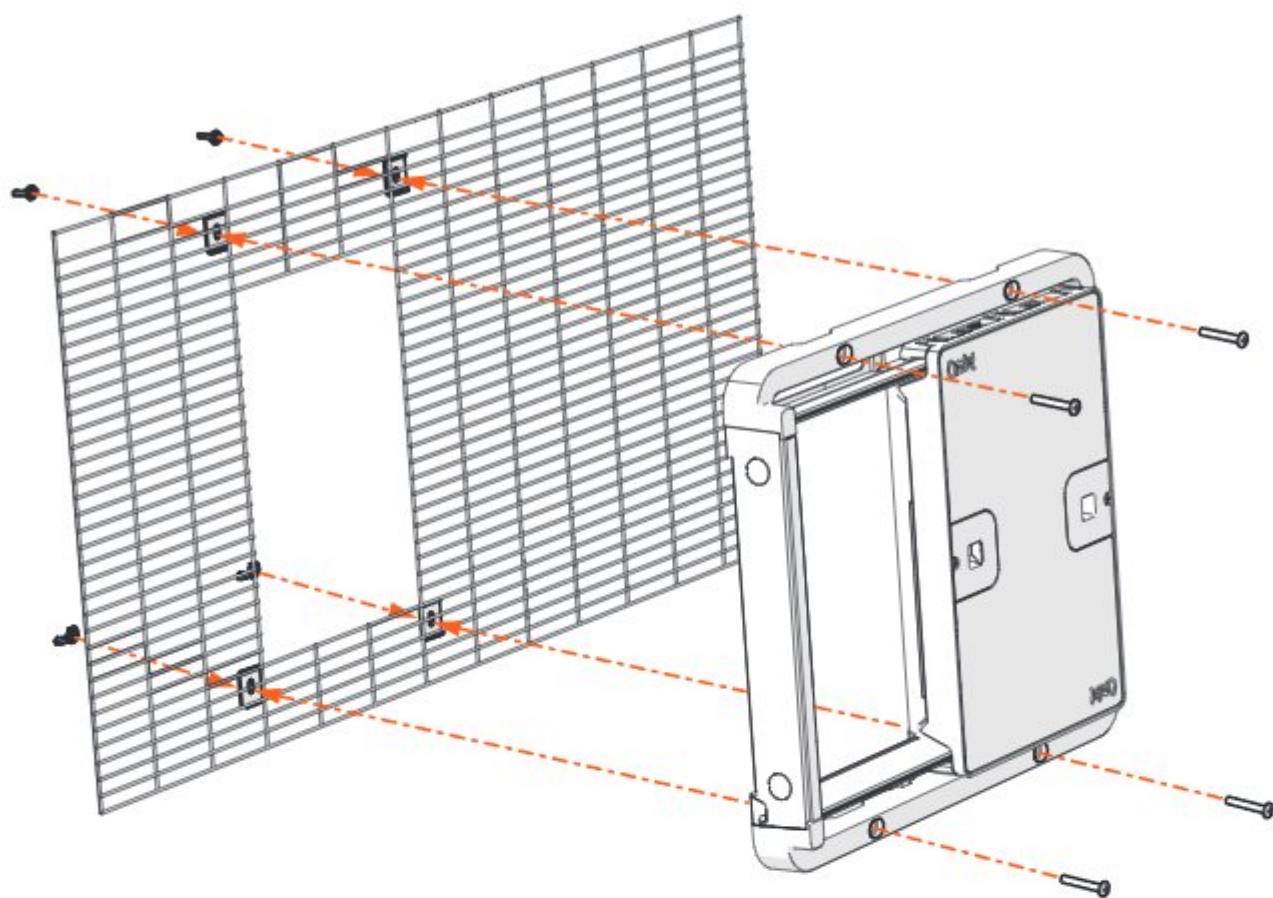

 To attach an Omlet Ultimate Fencing to the lower half of the run with the smaller mesh pitch, please see the information below.

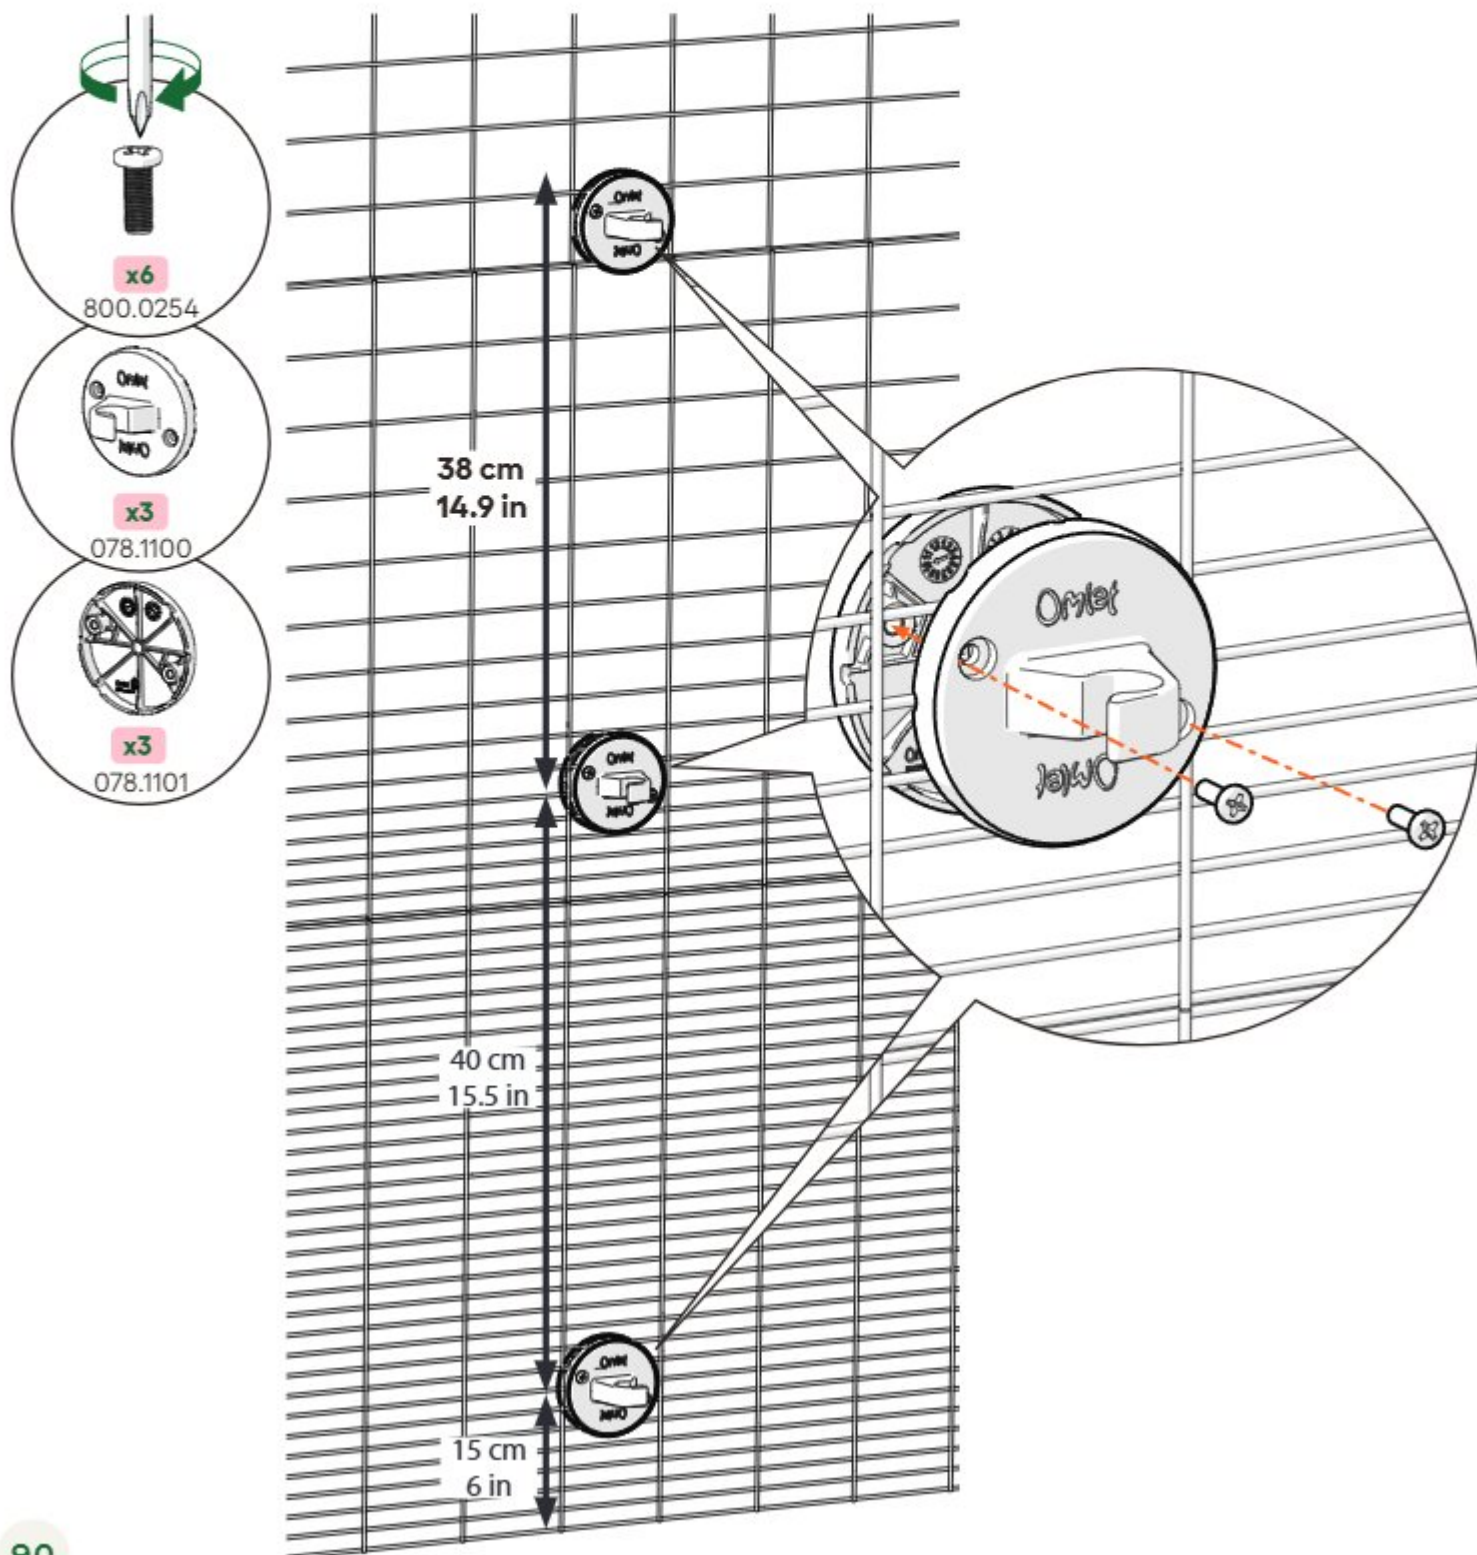

DOs

- Follow the assembly instructions to make sure that the product works as intended. Make sure the run is secured and fully assembled before allowing your pet to use it. The run is designed to be used outdoors for years to come. However, we recommend that you check your run regularly for signs of corrosion especially if you live somewhere with extreme weather conditions or close to the sea. Corrosion will occur if the coating has been scratched or scraped for example. If you do see some, remove any loose rust and touch up with a weather resistant paint.
- Children must be supervised when interacting with the system. It is not a toy.
- Give your pets access to fresh feed and water at all times.
- Do provide shade for your pets.
- For full range of accessories go online.

DON'Ts

- Don't let children use any tools unsupervised.
- Do not allow children to climb.
- Do not position near fire, eg BBQs.
- Do not leave your pet in the run unsupervised while it gets used to the product. Be especially careful when using it for chicks, kittens, pups or baby bunnies and guinea pigs. The run is designed and tested for full-grown pets. Due to the size of the mesh you may need extra protection added to the top half of the run if you want to keep a kitten or very small cat in the catio.
- Do not leave your pet in the run overnight if you've got predators in your area that can enter through the holes in the mesh. Add additional smaller mesh if your pet has access to the run during the night.

WE ASK. WE INVENT.



Omlet



Please
reuse &
recycle.

© Copyright Omlet Ltd. 2025
Design Registered, Patent Pending
Omlet WIR is a Registered Trademark of Hebe Studio Ltd
Omlet is a Registered Trademark of Hebe Studio Ltd
820.2117_Instruction Manual WIR Mk3 RP_27/06/2025

